 
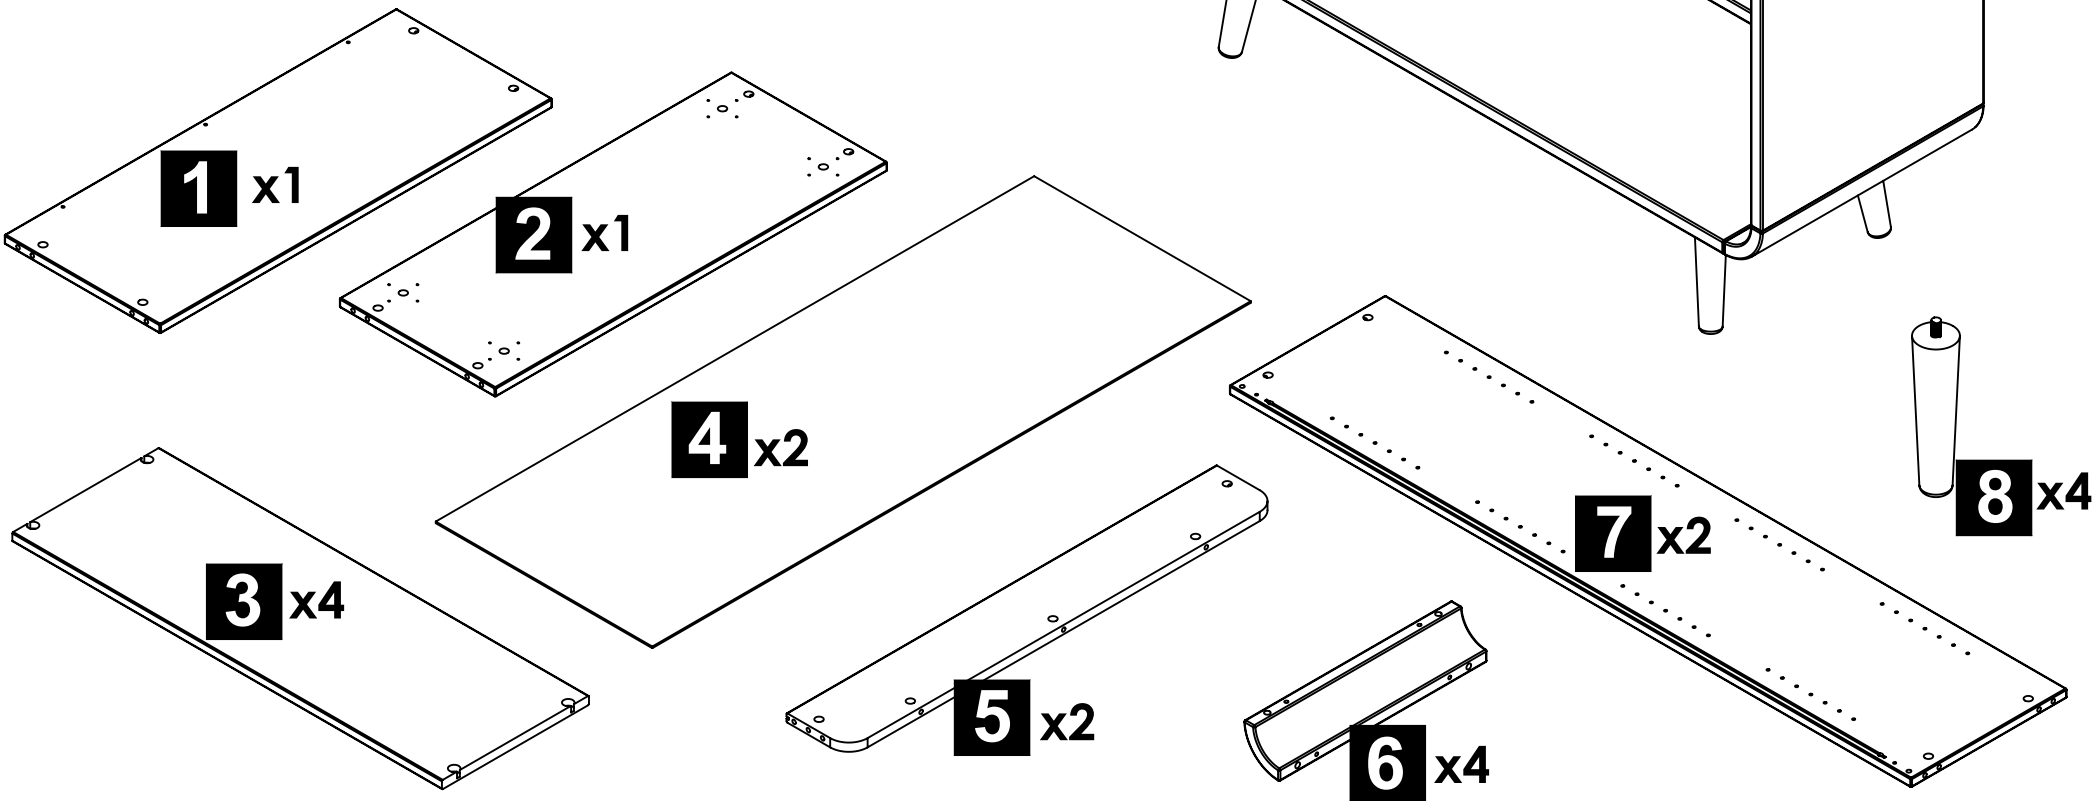 
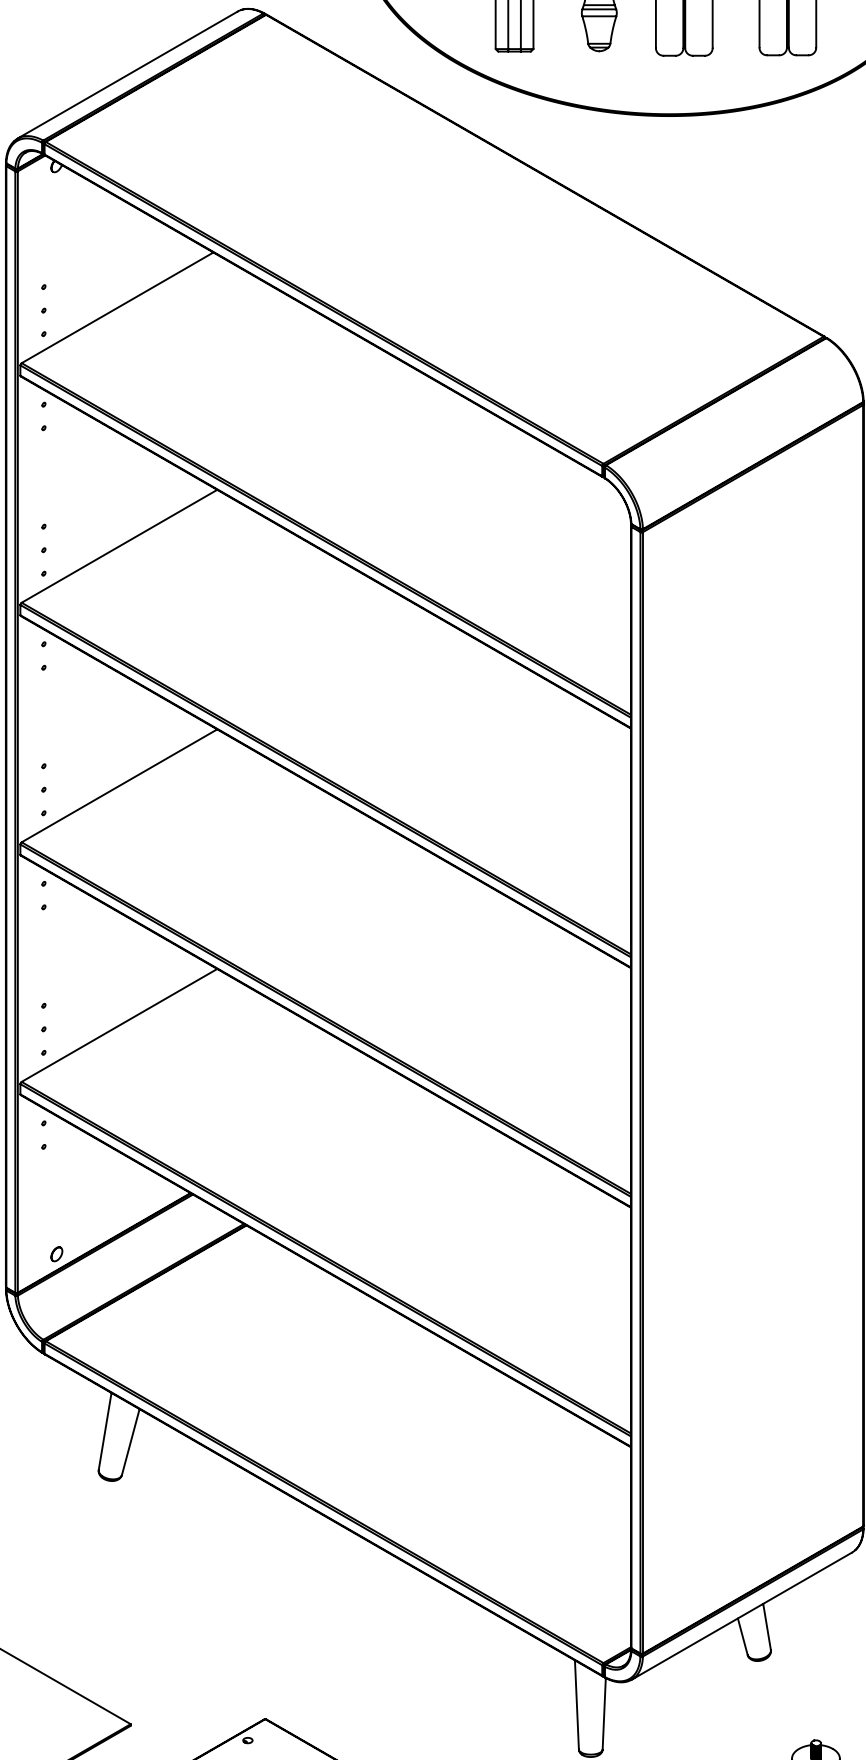 
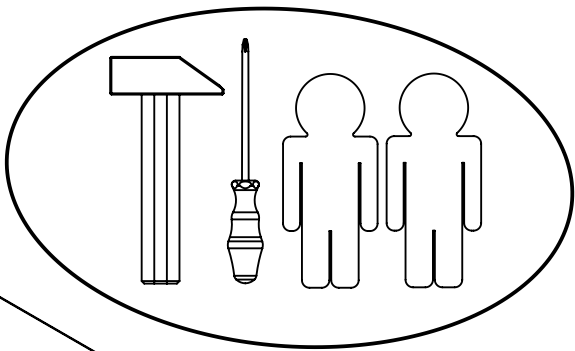 
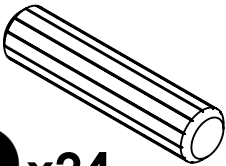 
 
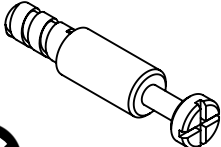 
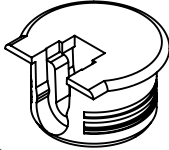 
 
 
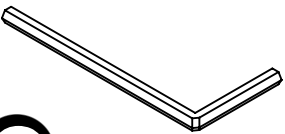 
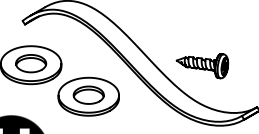 
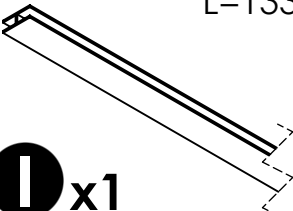 
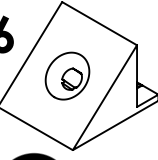 
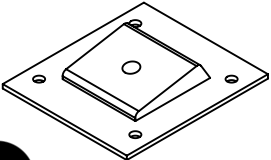 


EE	Montaažijuhend
SE	Monteringsanvisningar
FI	Asennusohjeet
GB	Assembly instructions
D	Montageanleitung
PL	Instrukcja montażu
NL	voor de montage Montážní
CZ	návod
HU	Szerelési útmutató
TR	Montaj talimati
IT	Istruzioni di montaggio
FR	Notice de montage handleiding
SK	Návod na montáž
RO	Instrukțiuni de montaj
RU	Инструкция по монтажу



 A x24	 B x26	 C x26	 D x16	 E x16	 F x16
 G x1	 H x1	 I x1	 J x16	 K x4	 L x22

 
1

C x26


E x16

A x24


D x16

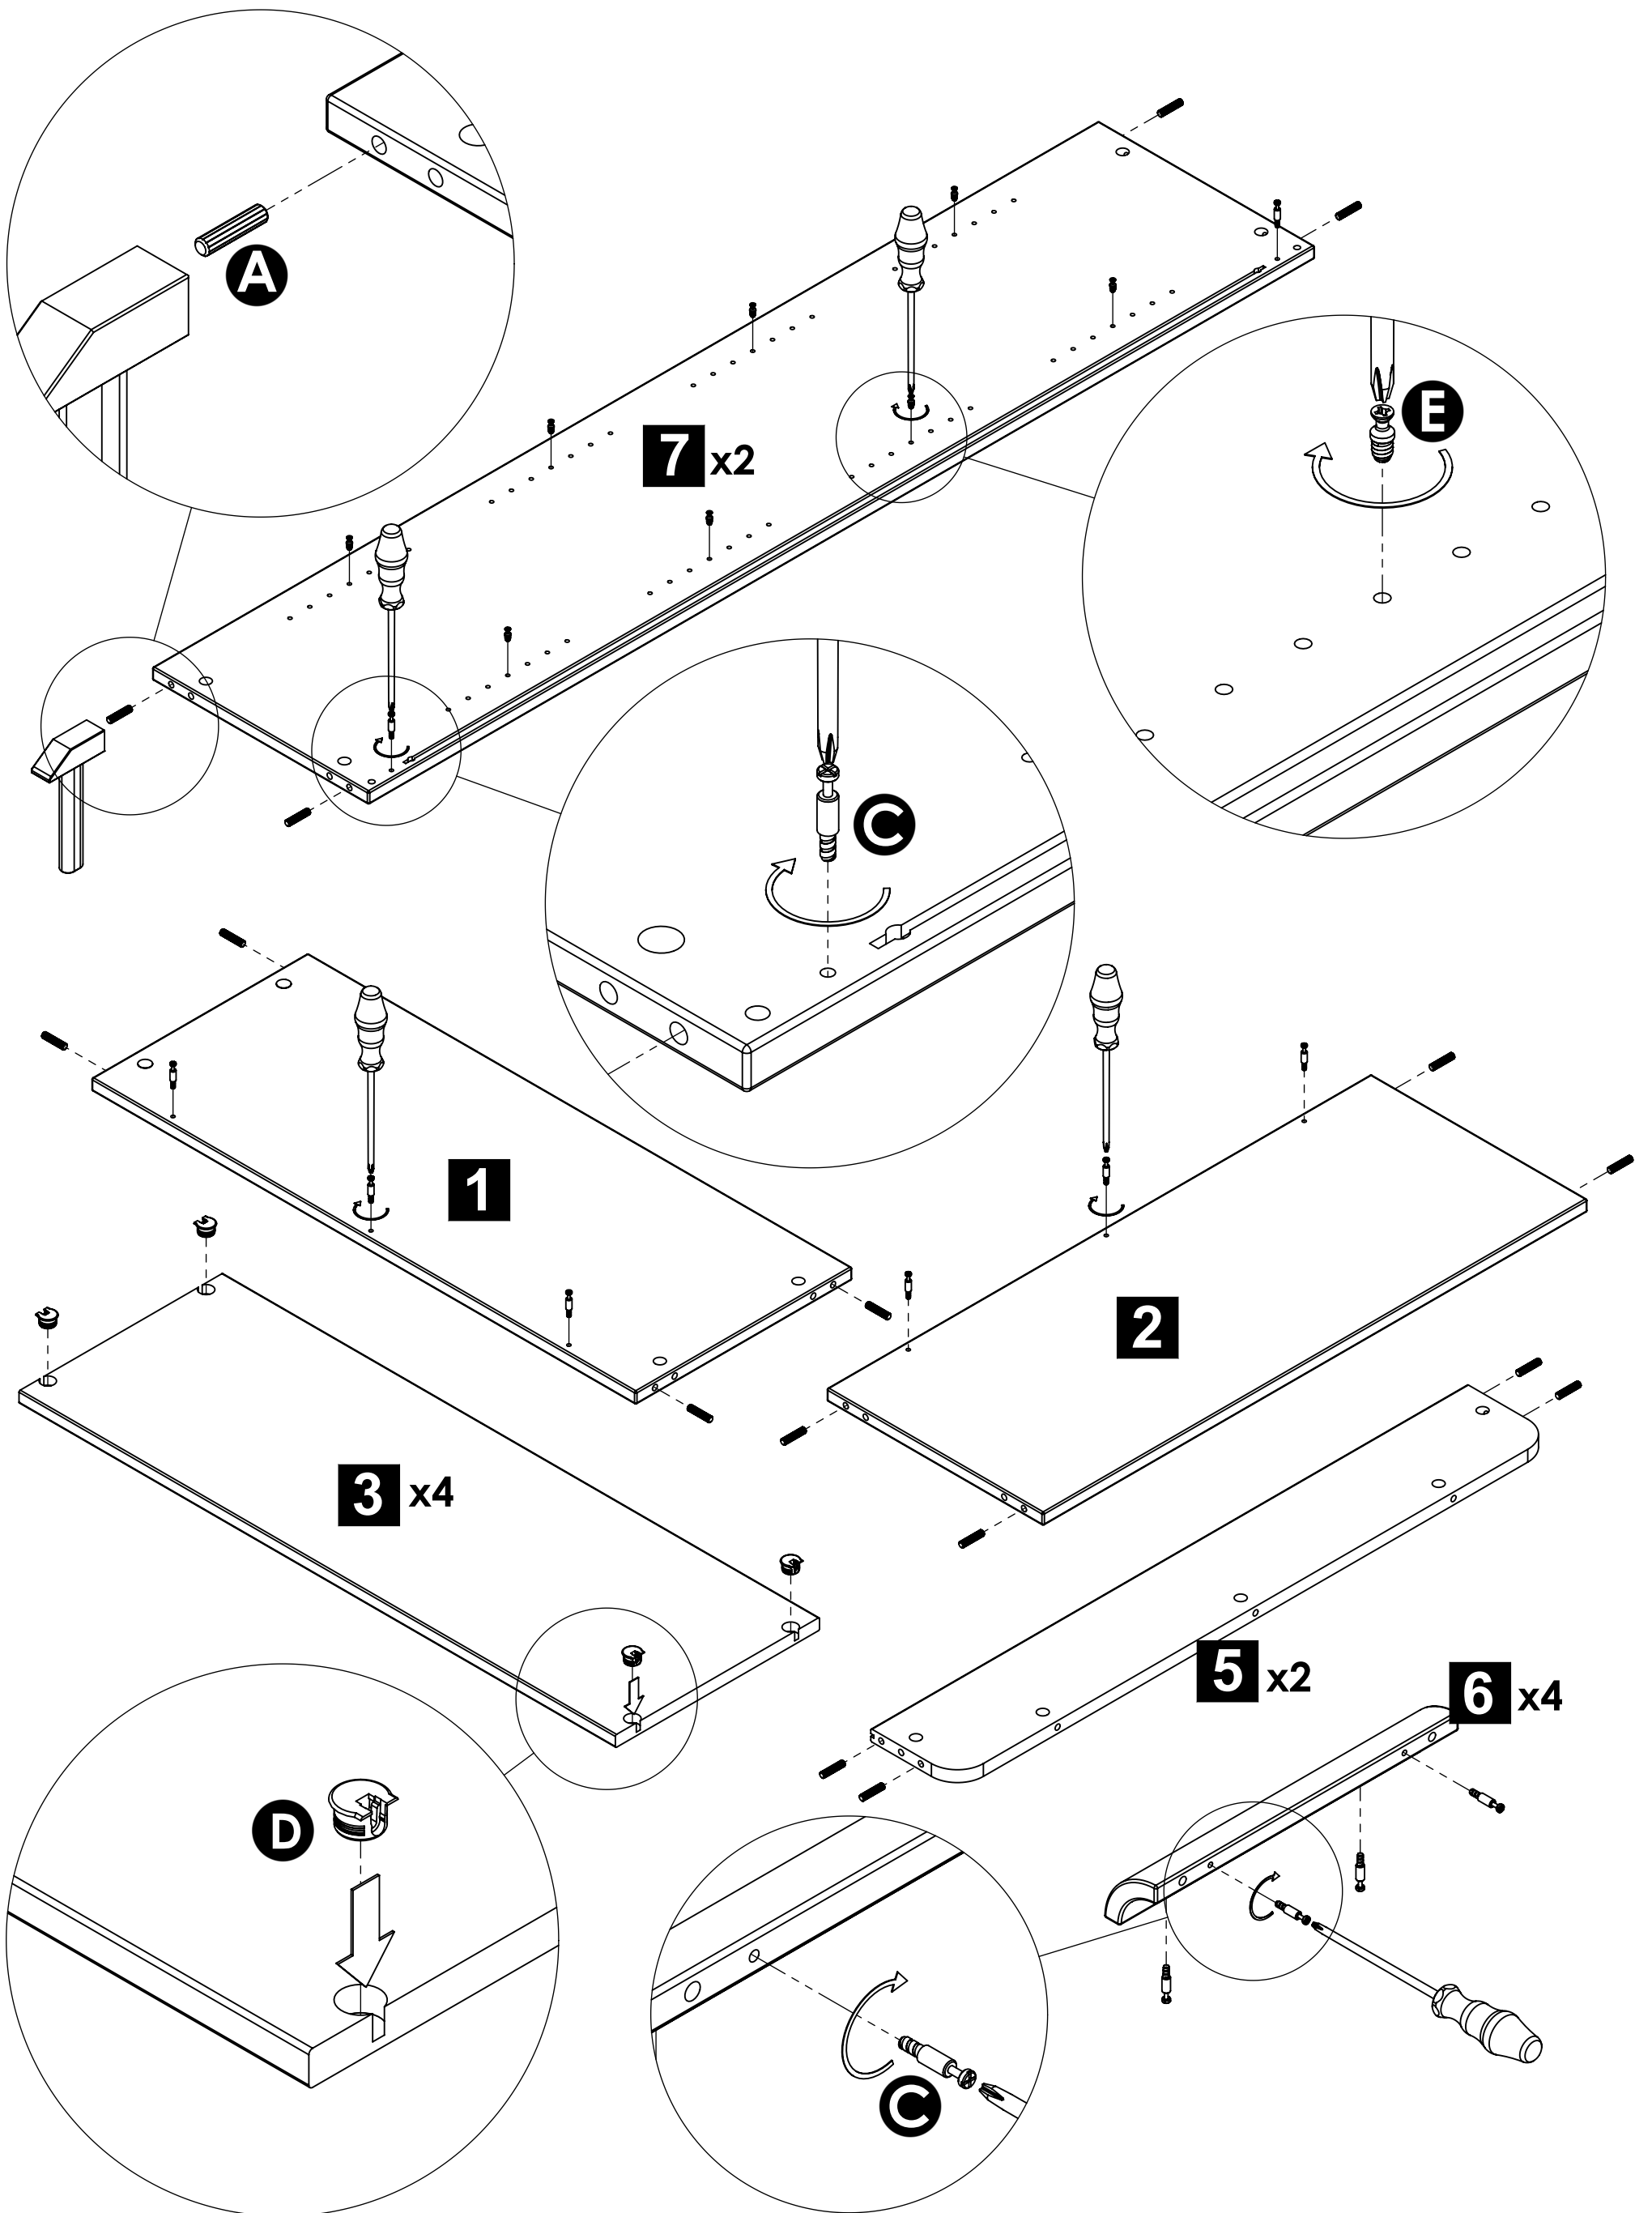

2

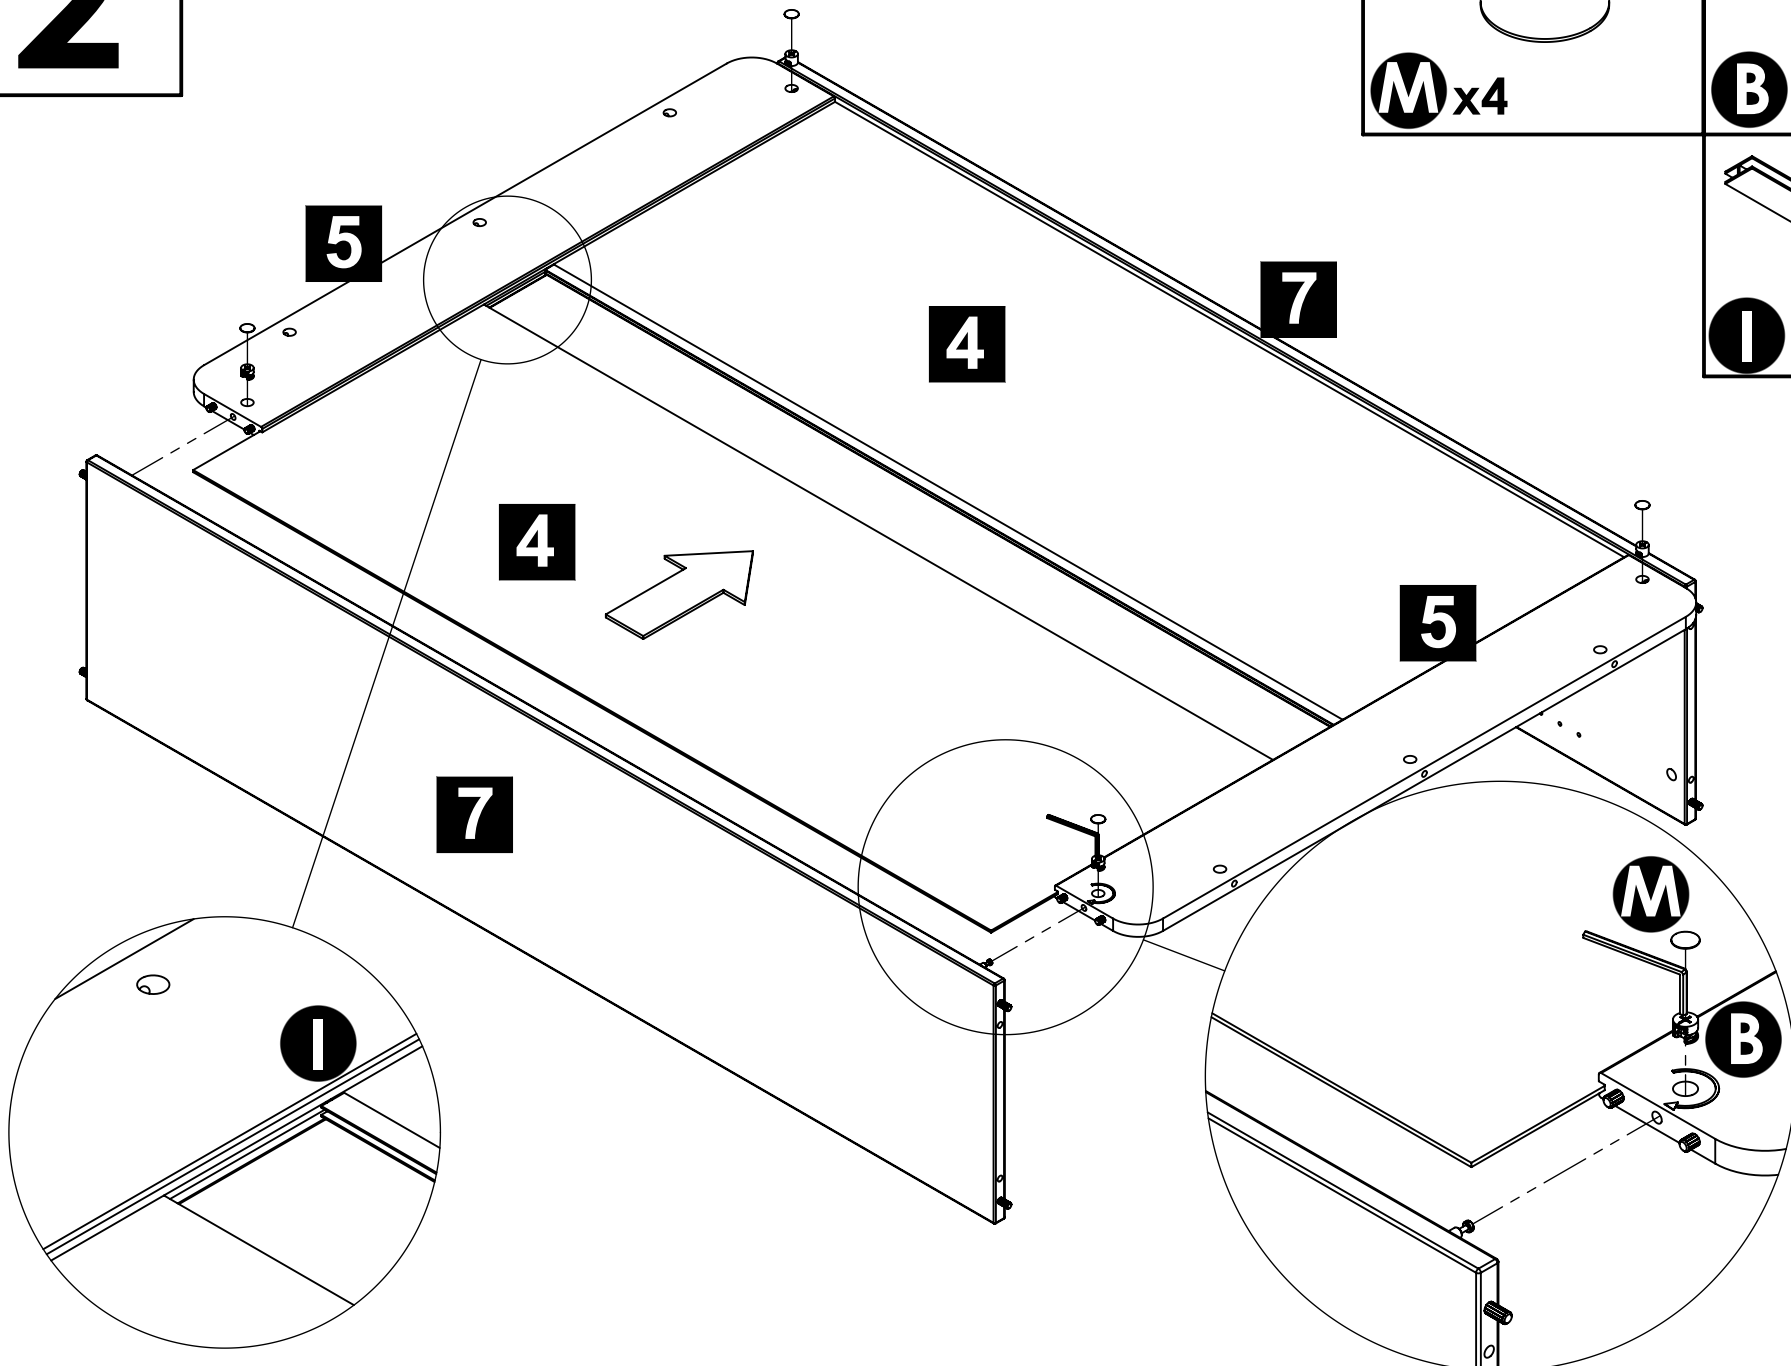 




3

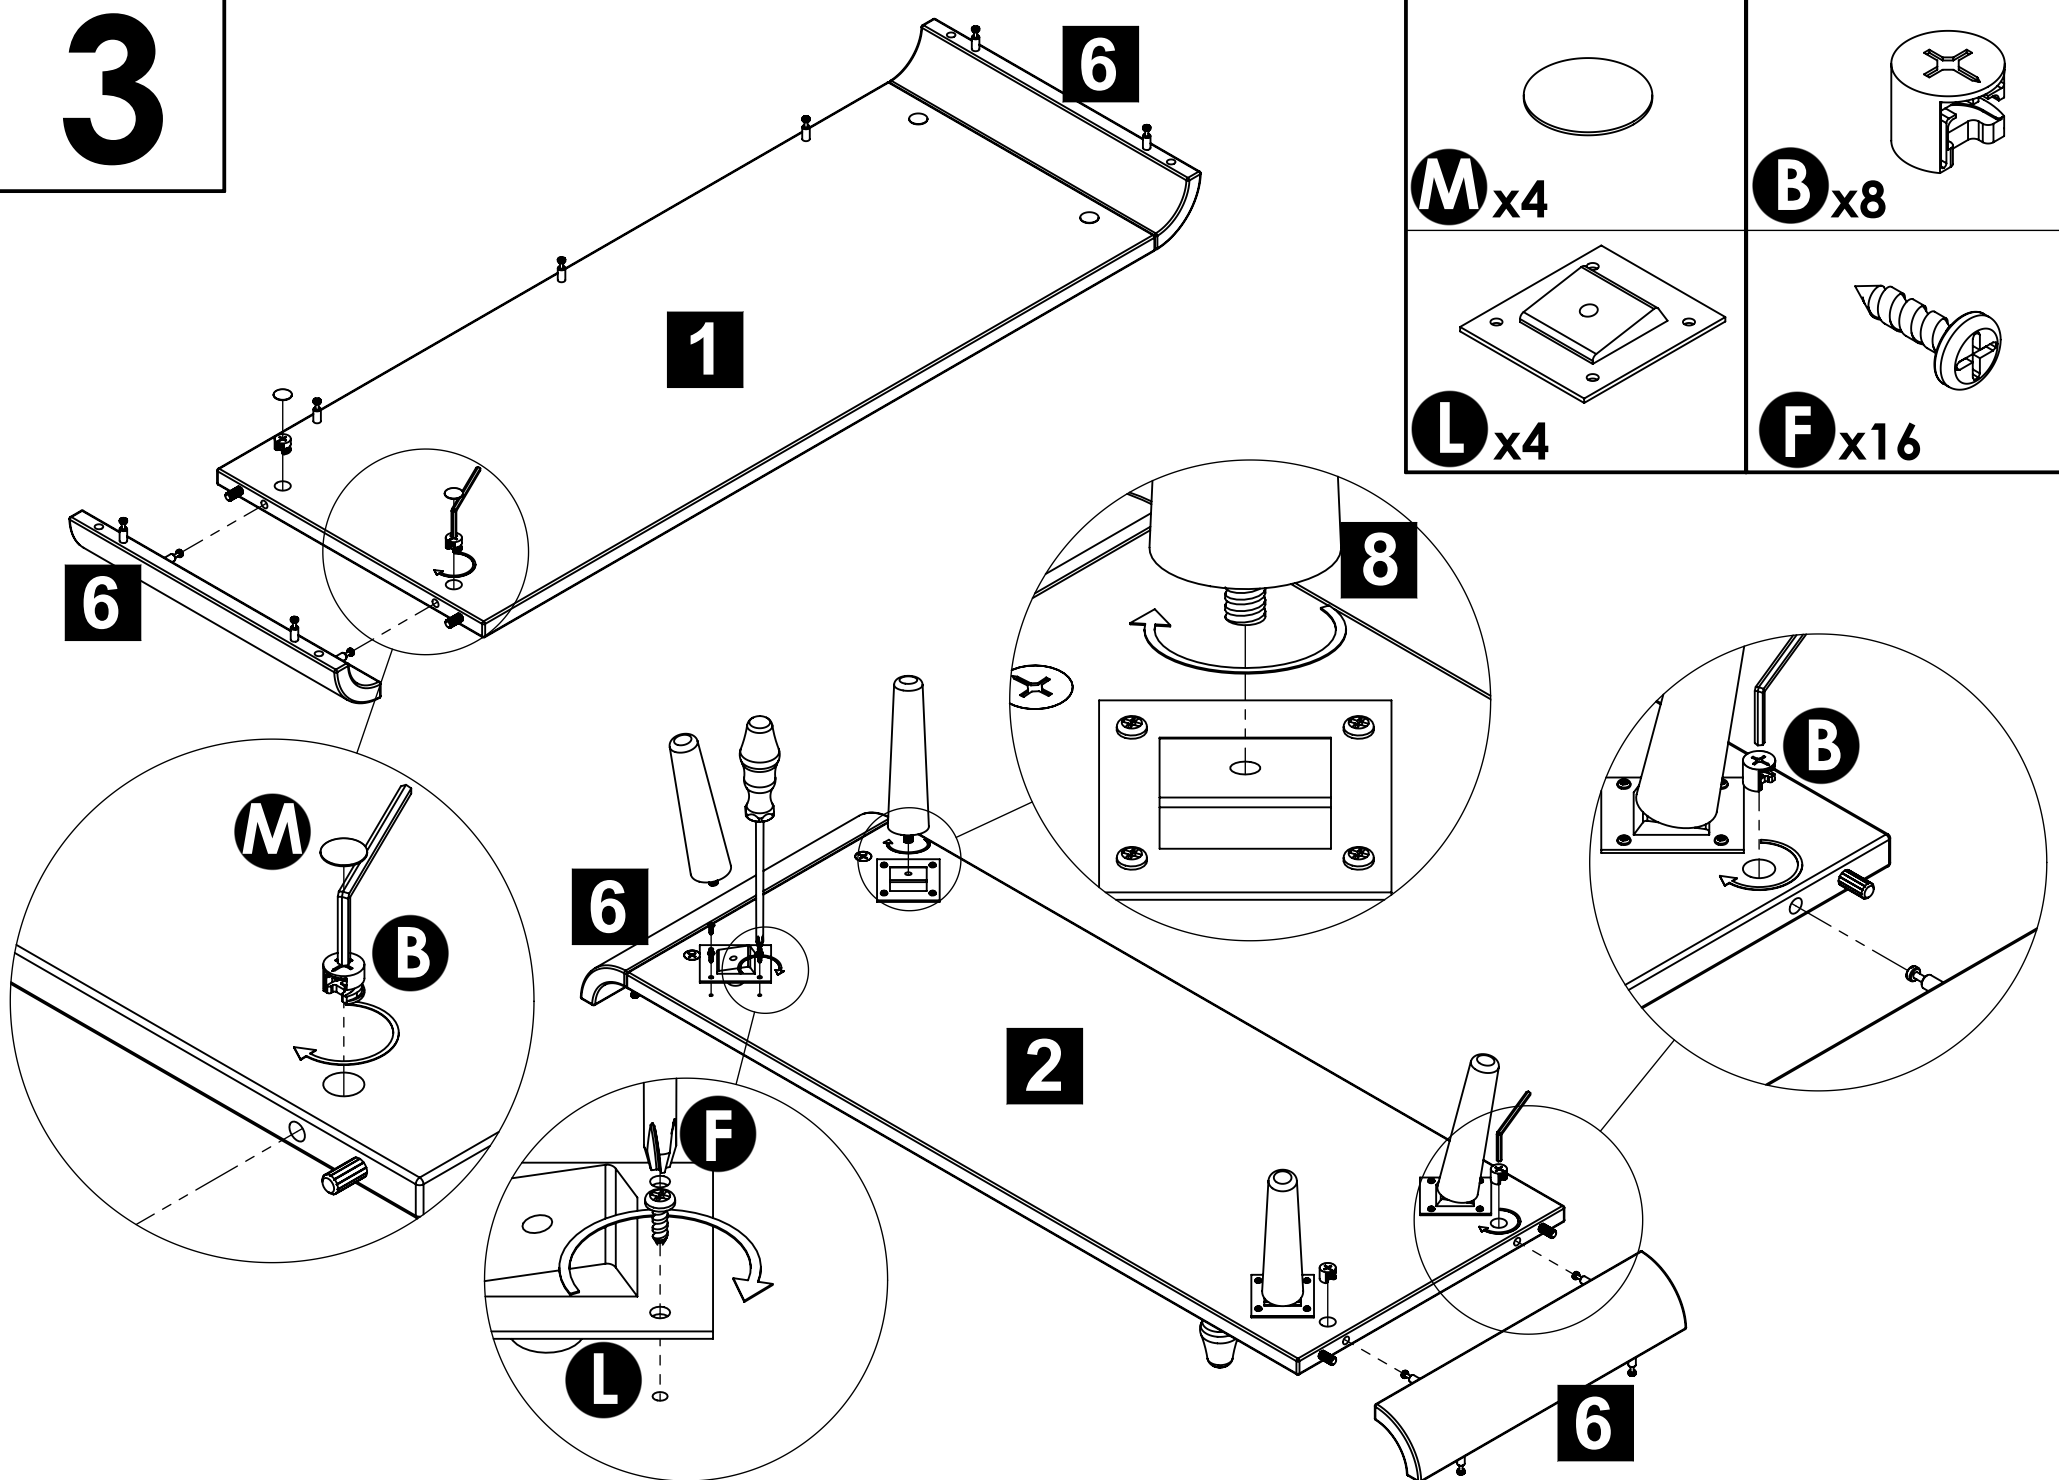 

4

Mx6

   Bx6

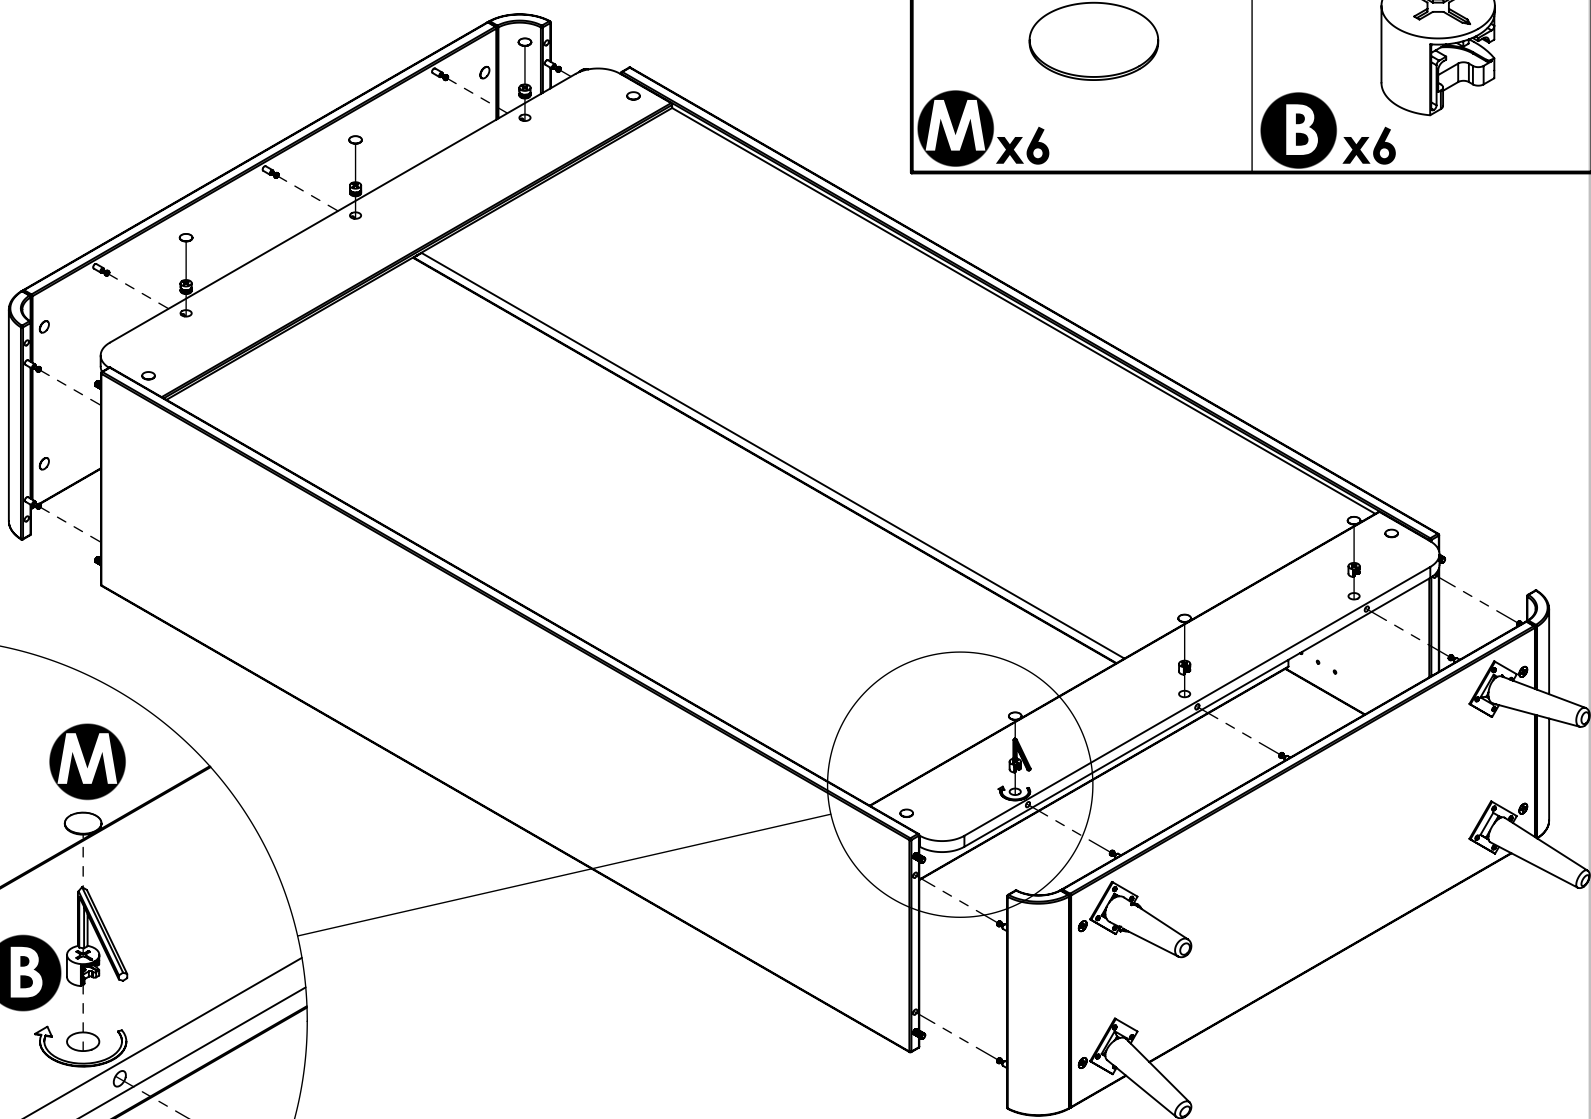
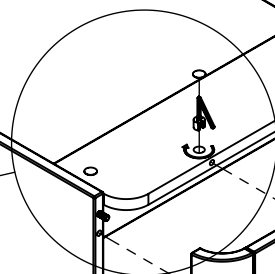
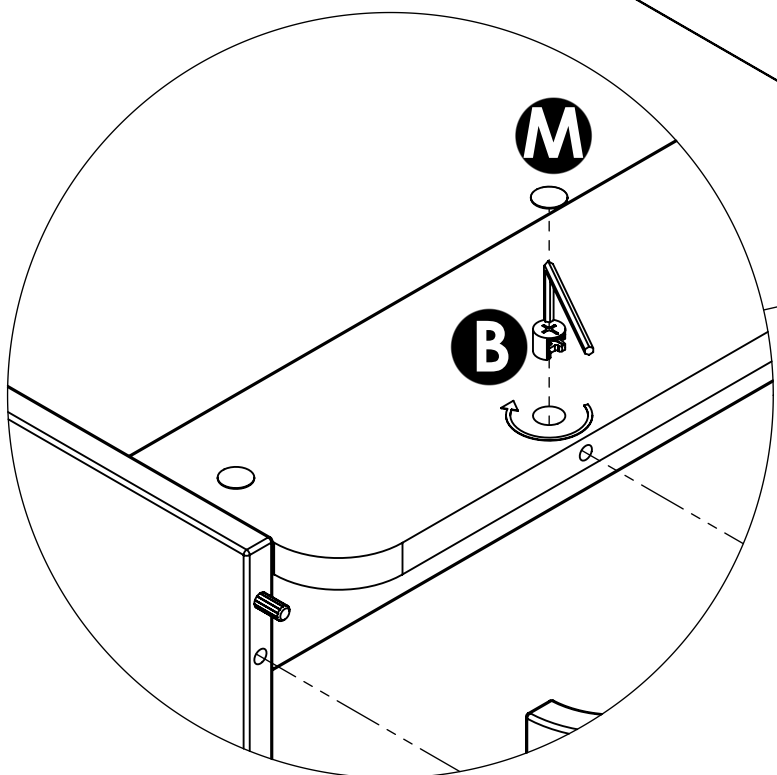


5

Jx16

Ø 3x20

   Kx16

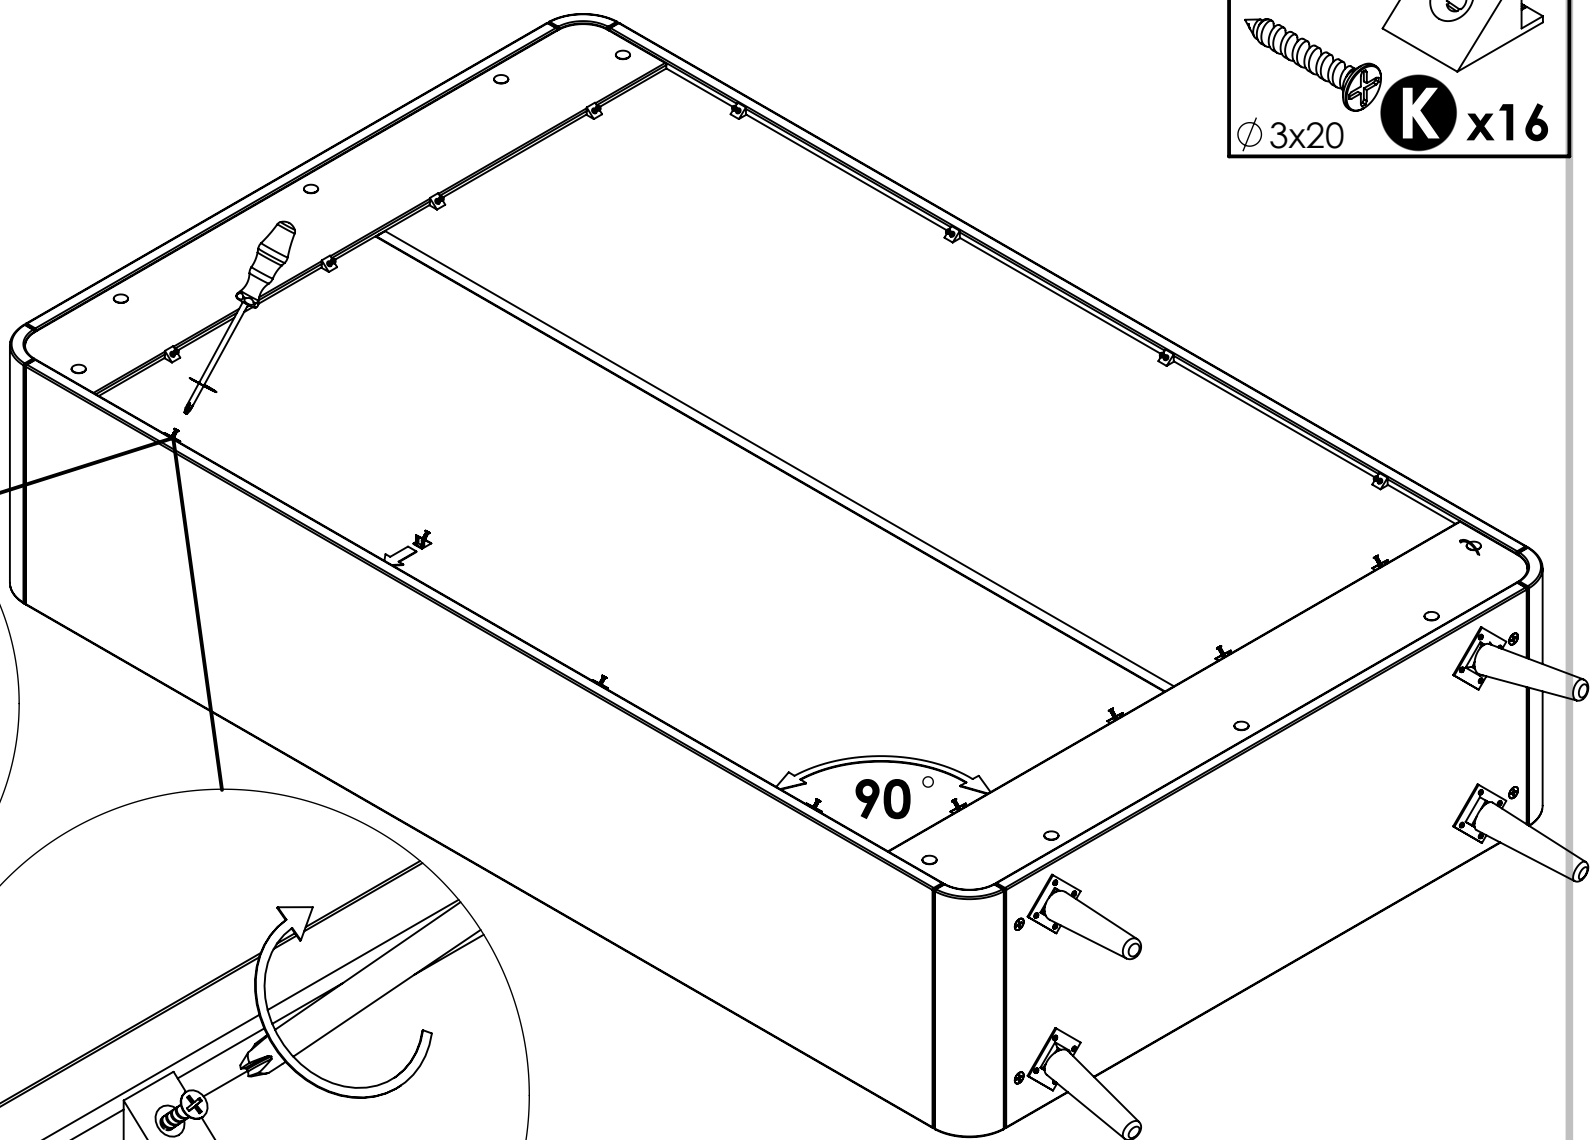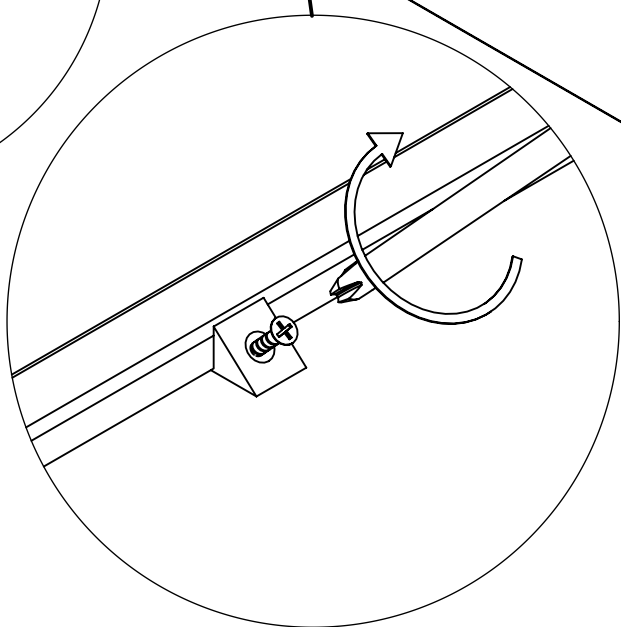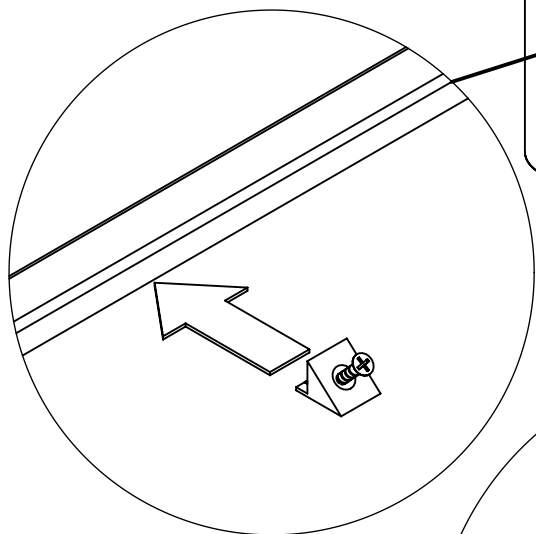

6

Mx8

Bx8

