

Modellname:
Nazwa modelu:

LA NOTTE

Modellreihe:
Nr. modelu








P8--LN

Type:
Typ: **Typ 02**


Blatt Nr
Strona **1** von:
z: **13**





- D** Montageanleitung
- NL** Handleiding voor de montage
- TR** Montaj talimati
- GB** Assembly instructions
- PL** Instrukcja montażu
- RU** Инструкция по монтажу

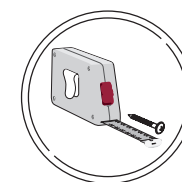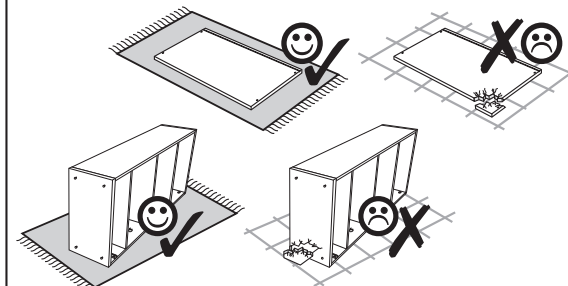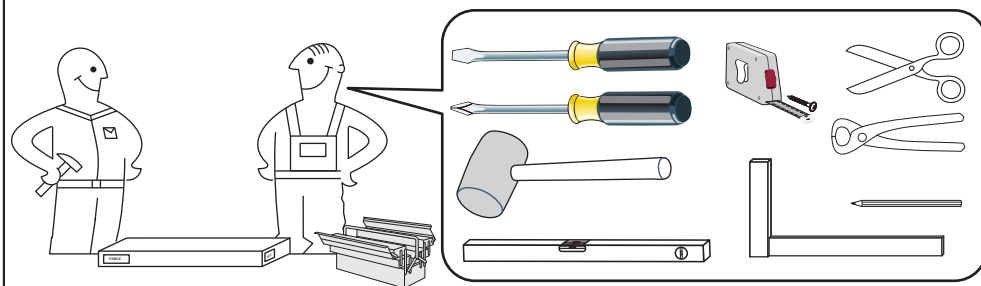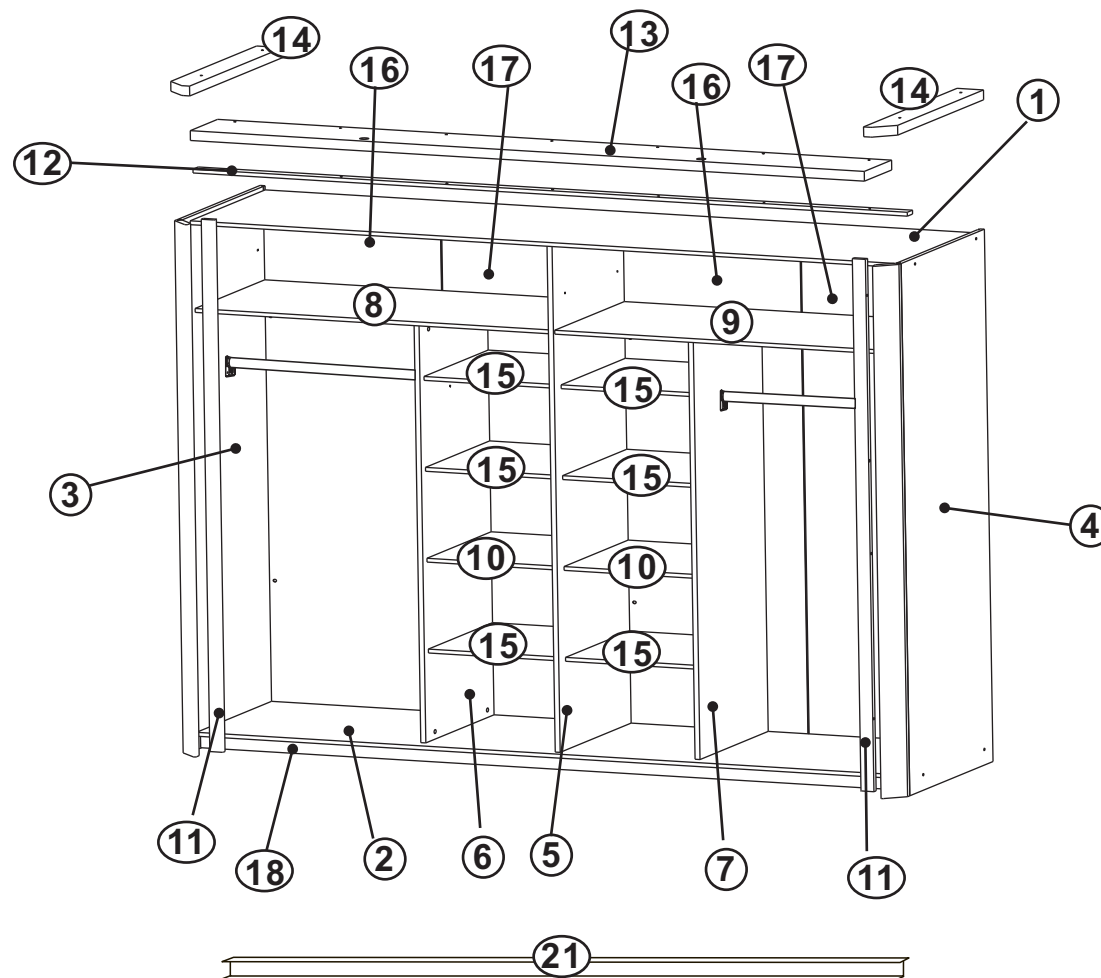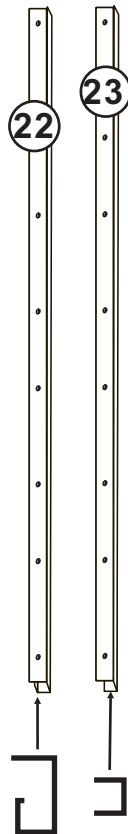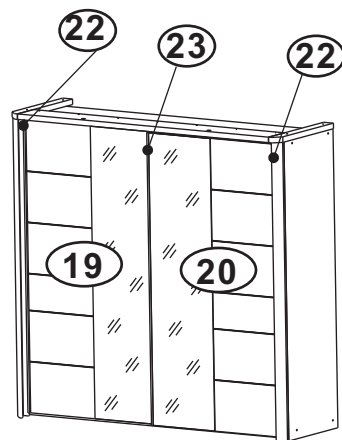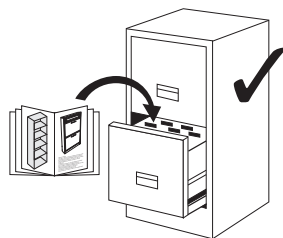



Nr 1


T6  x16


M1  x12


T1  12

C2  x8


B1  ϕ 8x28 x28


K1  7x50 x8


C1  ϕ 2 x11

W1  X24


Nr 2


M6  x12


P16  3,5x16 x12


L4  x4


Nr 3


F7  x4


S3  3,5x13 x4


A1  x2

D1  x2


Z1  x1


G1  x2


S4  4,0 x70 x4

P4  4,0x16 x4


Nr 4


E9  x1

E11  x1


E1  6,3x11 x5


Nr 5

E5  x1


E1  6,3x11 x5


Nr 6

E7  x2


E1  6,3x11 x10


Nr 7


E6  x2

E1  6,3x11 x4


Nr 8


E8  x2


E1  6,3x11 x6


Z3  x1

Nr 9


L1  Leim x2


S3  3,5x13 x43


S15  4x45 x13


S14  4x60 x11


Nr 10

P13  3,5x13 mm x4


J11  x2


POI  x2

O21  x1

J20  L-650 x2

J22  L-1962 x2

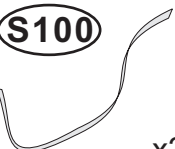S100  x2



Modellname:
Nazwa modelu:

LA NOTTE


Modellreihe:
Nr. modelu

P8--LN


Type:
Typ: **Typ 02**



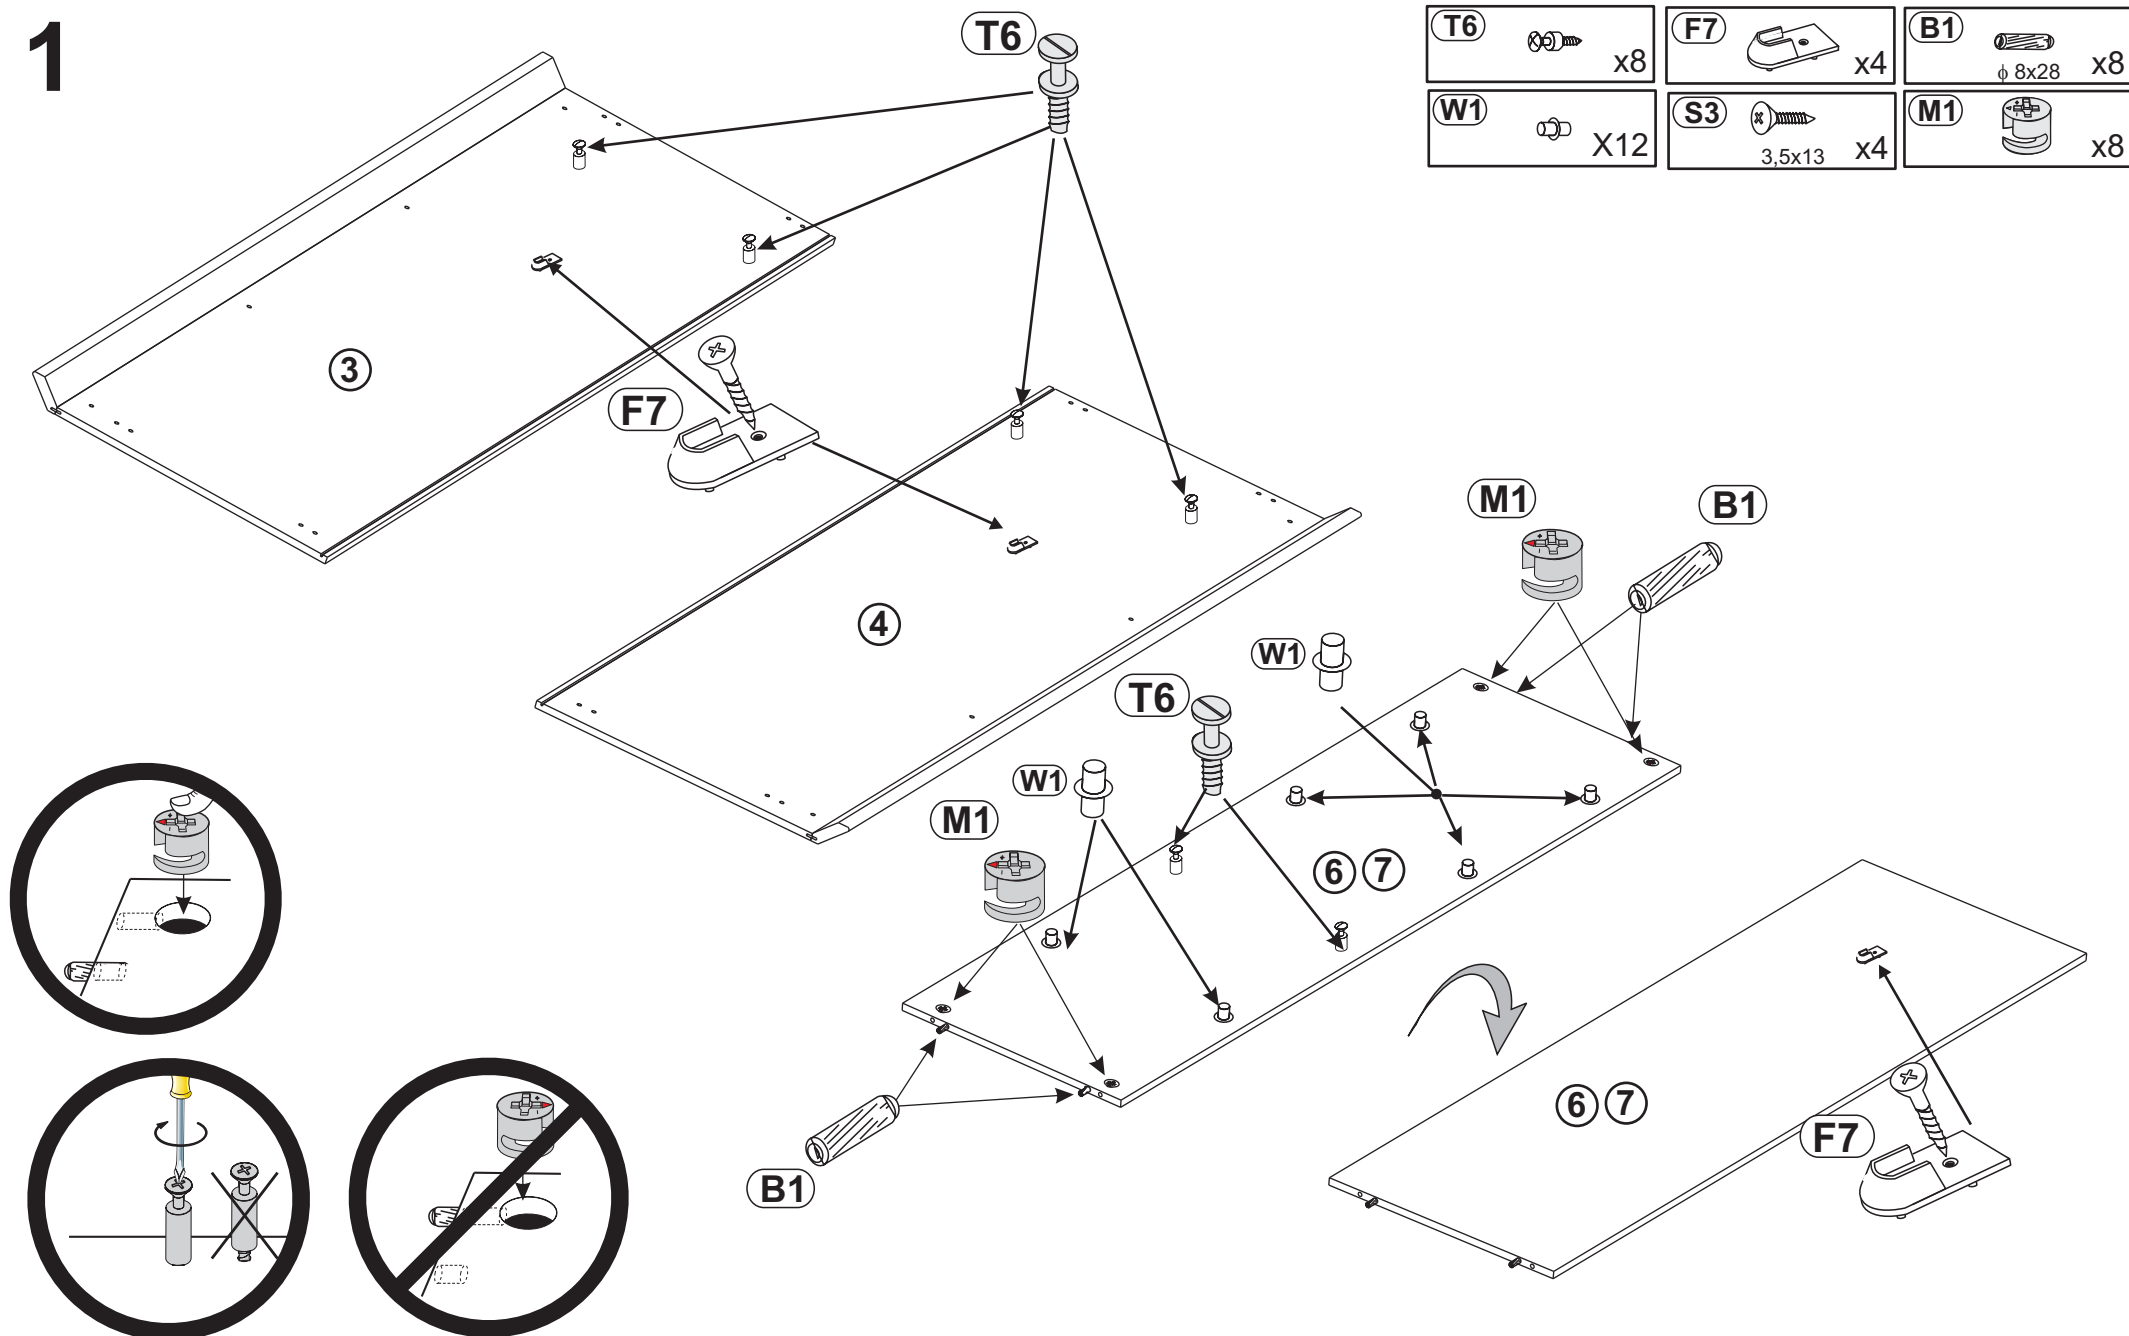



Blatt Nr
Strona **3** von:
z: **13**







1

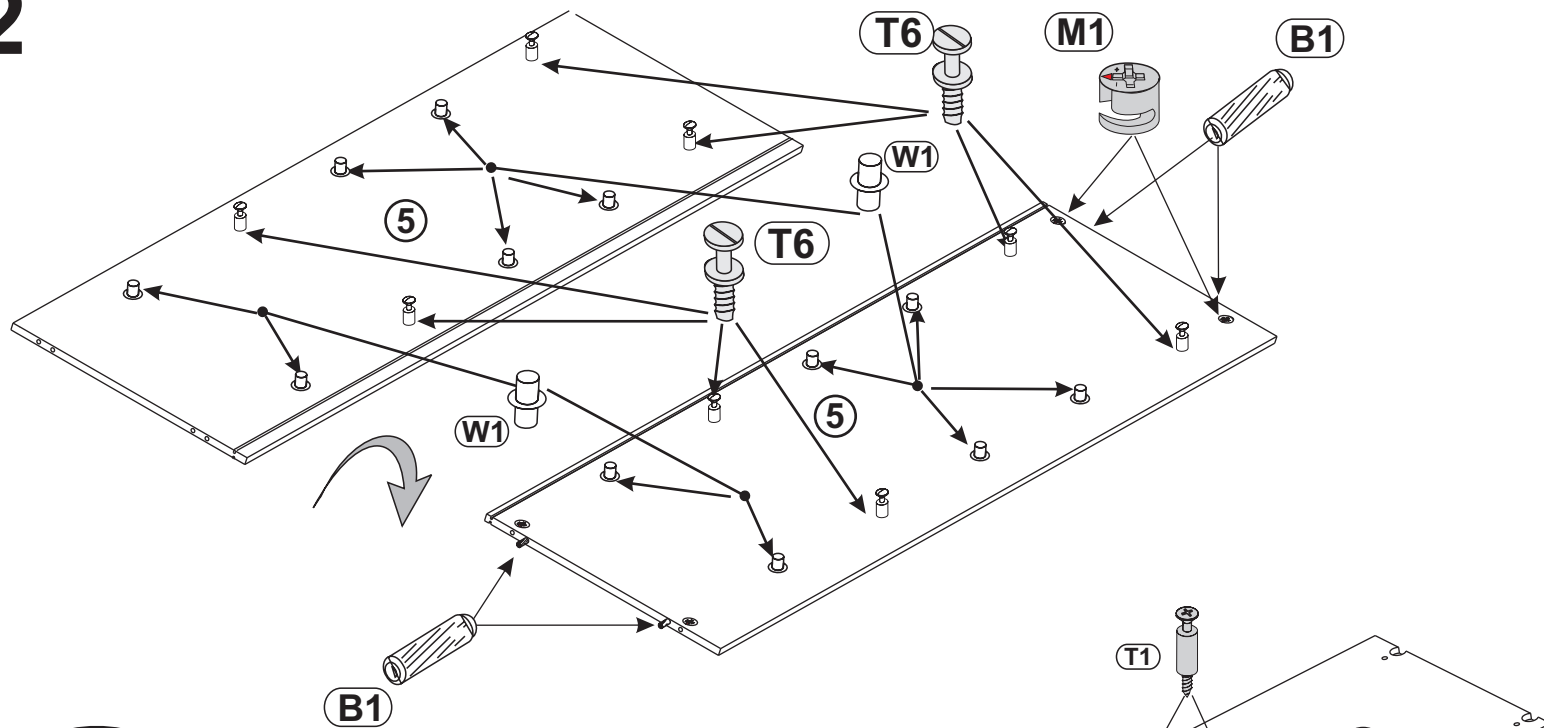

2





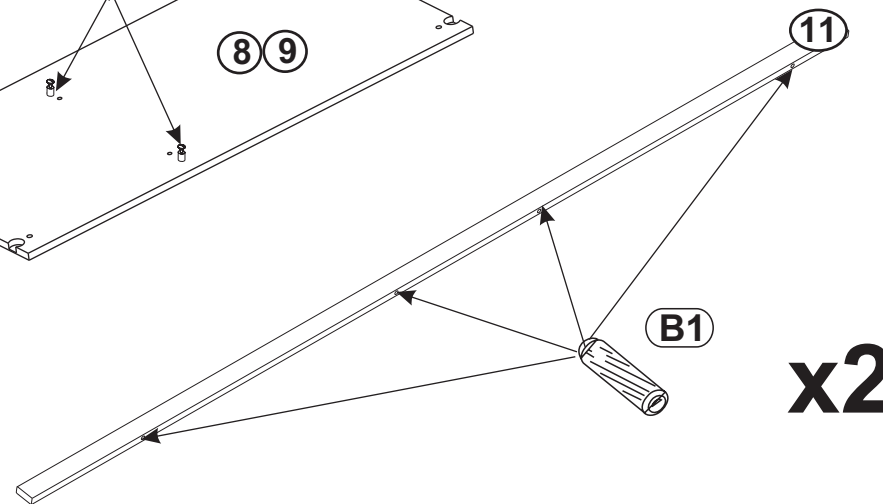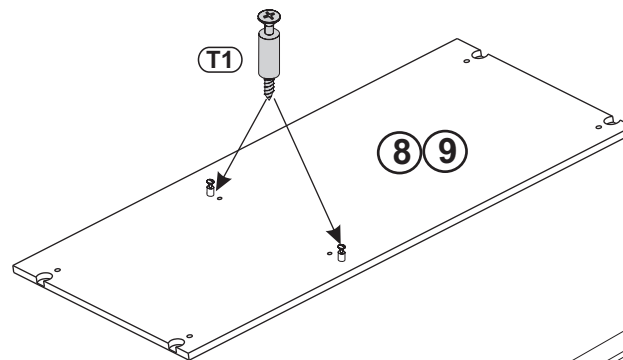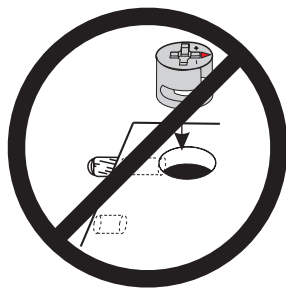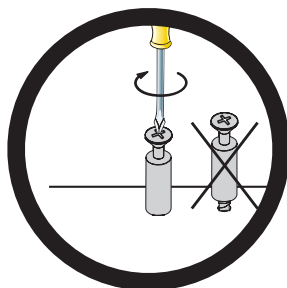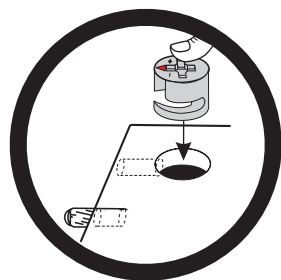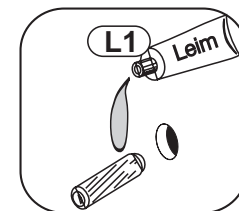
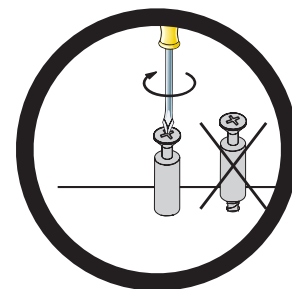
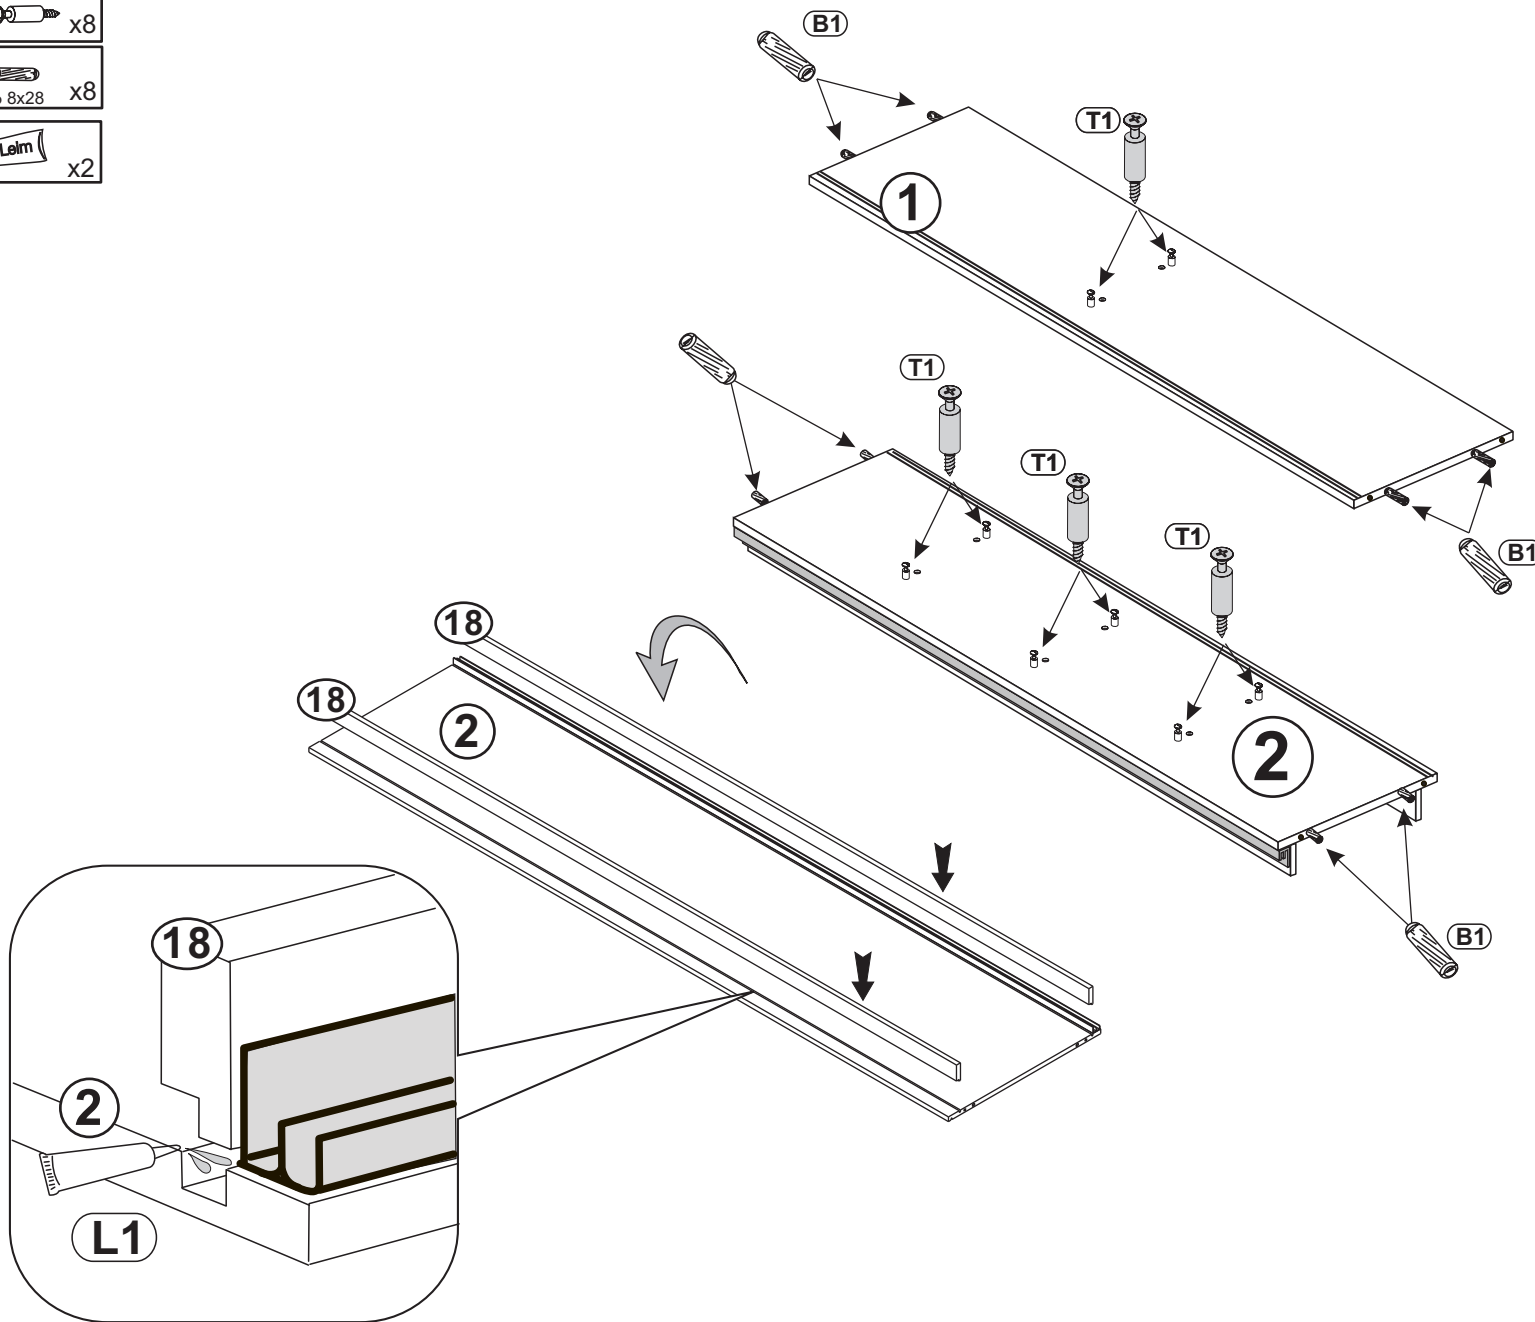
T6  x8	B1  ϕ 8x28 x12
T1  x4	M1  x4
	W1  x12
	L1  Leim x2



x2

3

- T1**  x8
- B1**  ϕ 8x28 x8
- L1**  x2



Modellname:
Nazwa modelu:

LA NOTTE

Modellreihe:
Nr. modelu







P8--LN

Type:
Typ: **Typ 02**









Blatt Nr
Strona **6**

von:
z: **13**






4

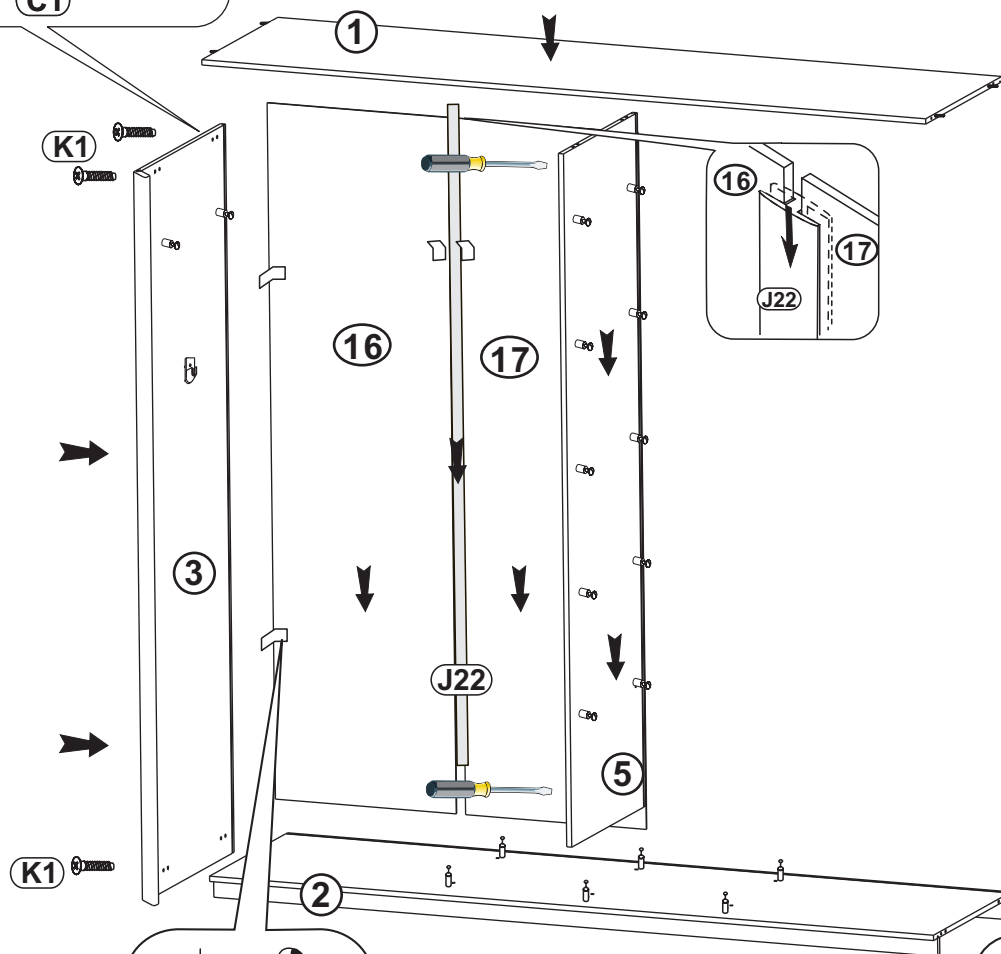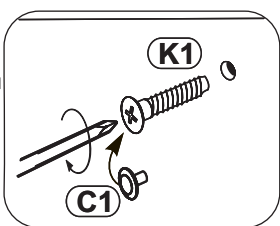

5

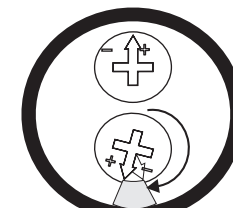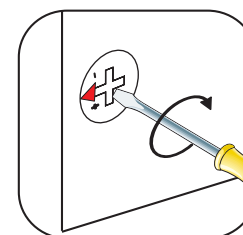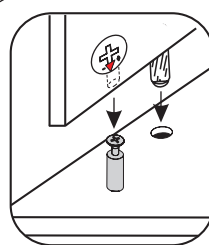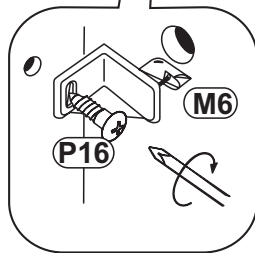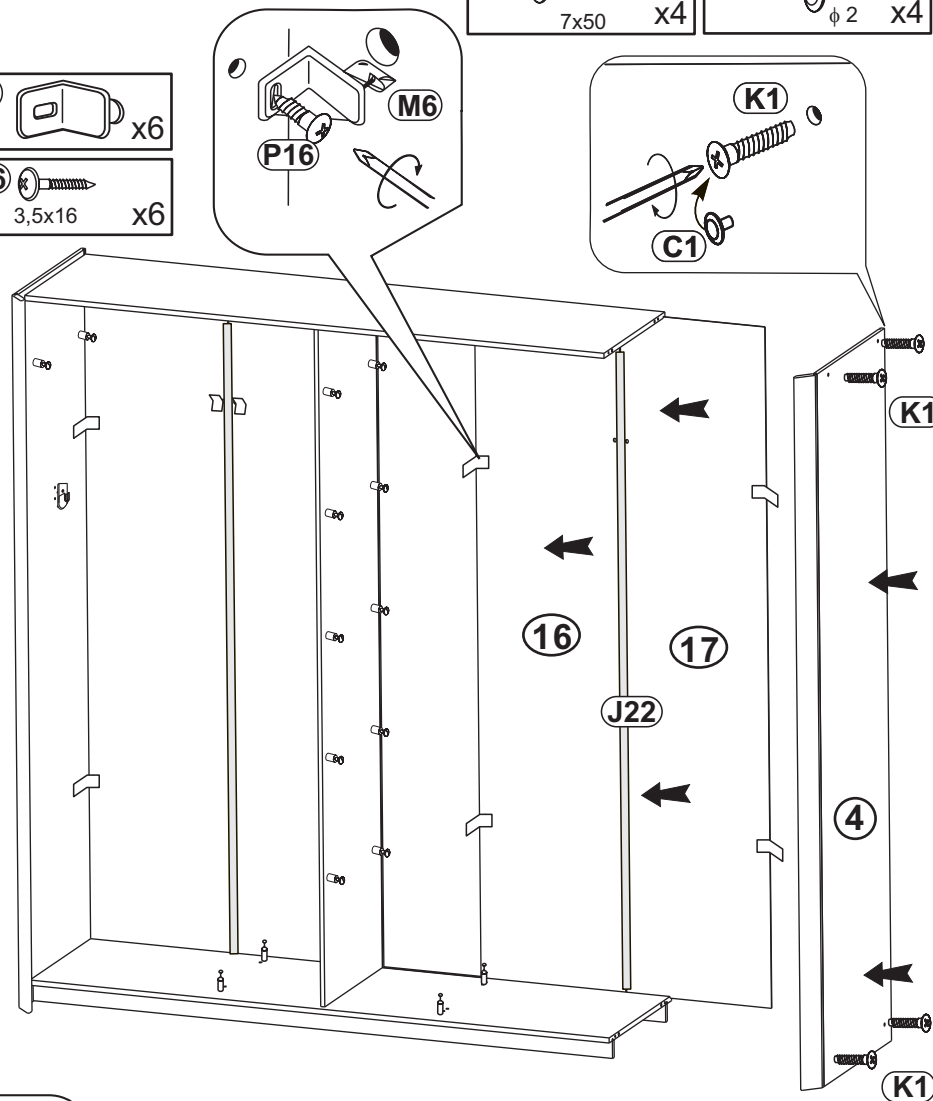

6

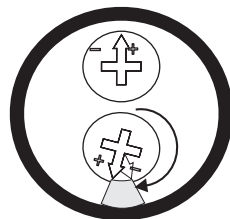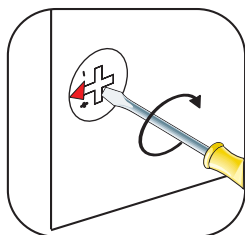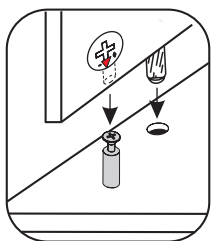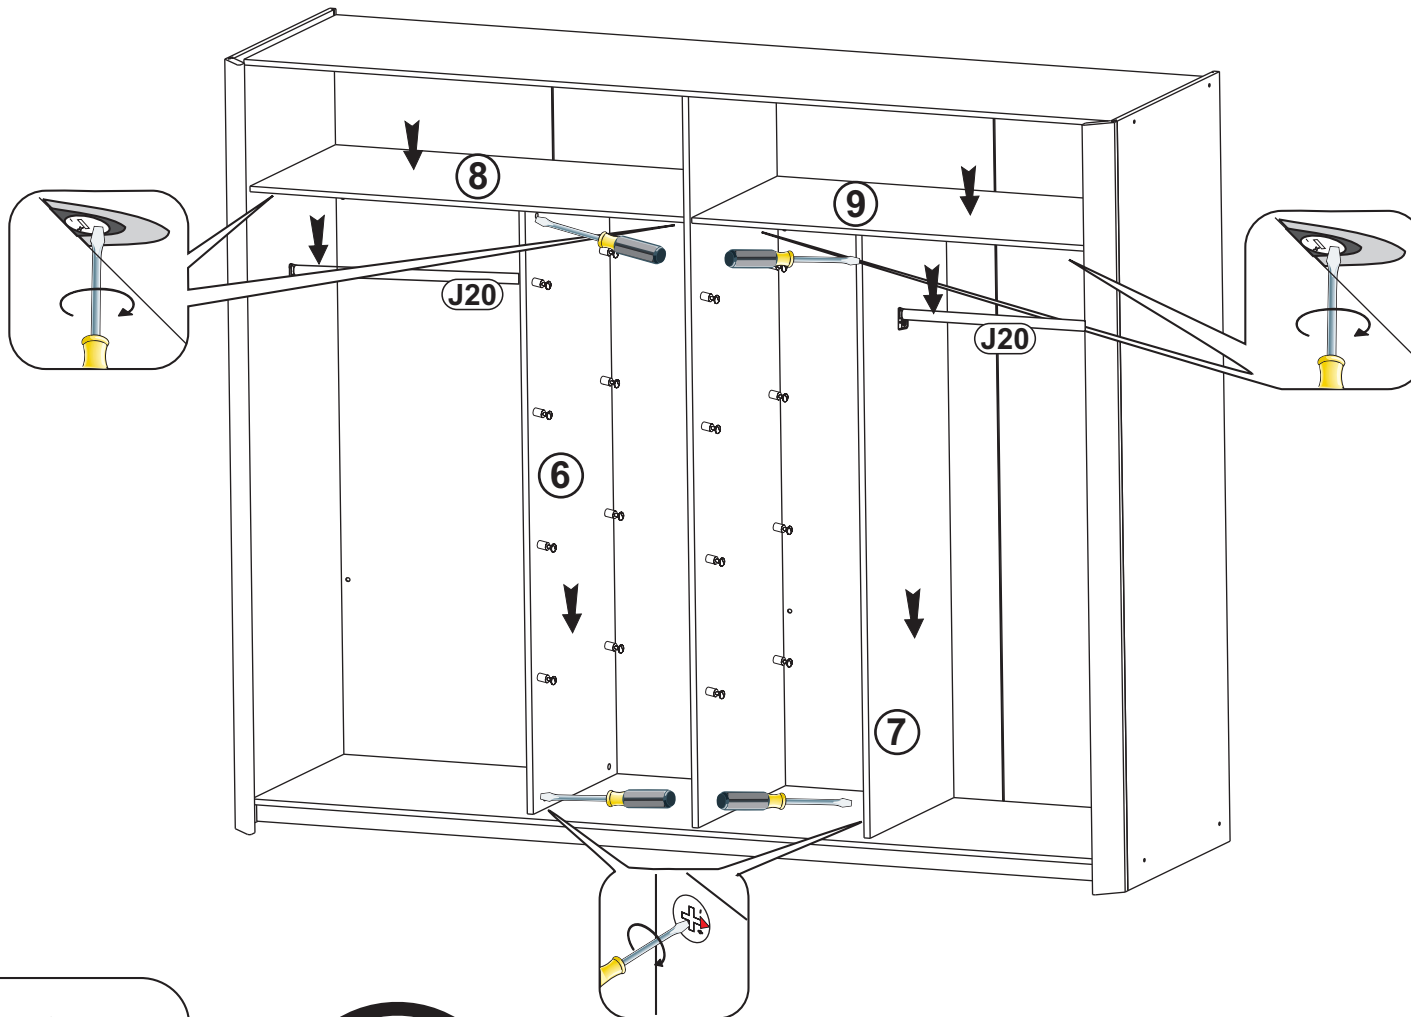

Modellname:
Nazwa modelu:

LA NOTTE








Modellreihe:
Nr. modelu

P8--LN

Type:
Typ: **Typ 02**

Blatt Nr
Strona **8** von:
z: **13**

7

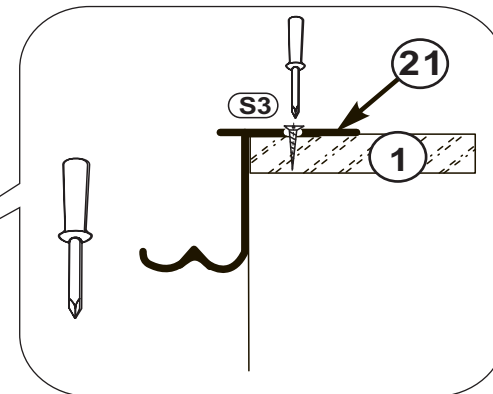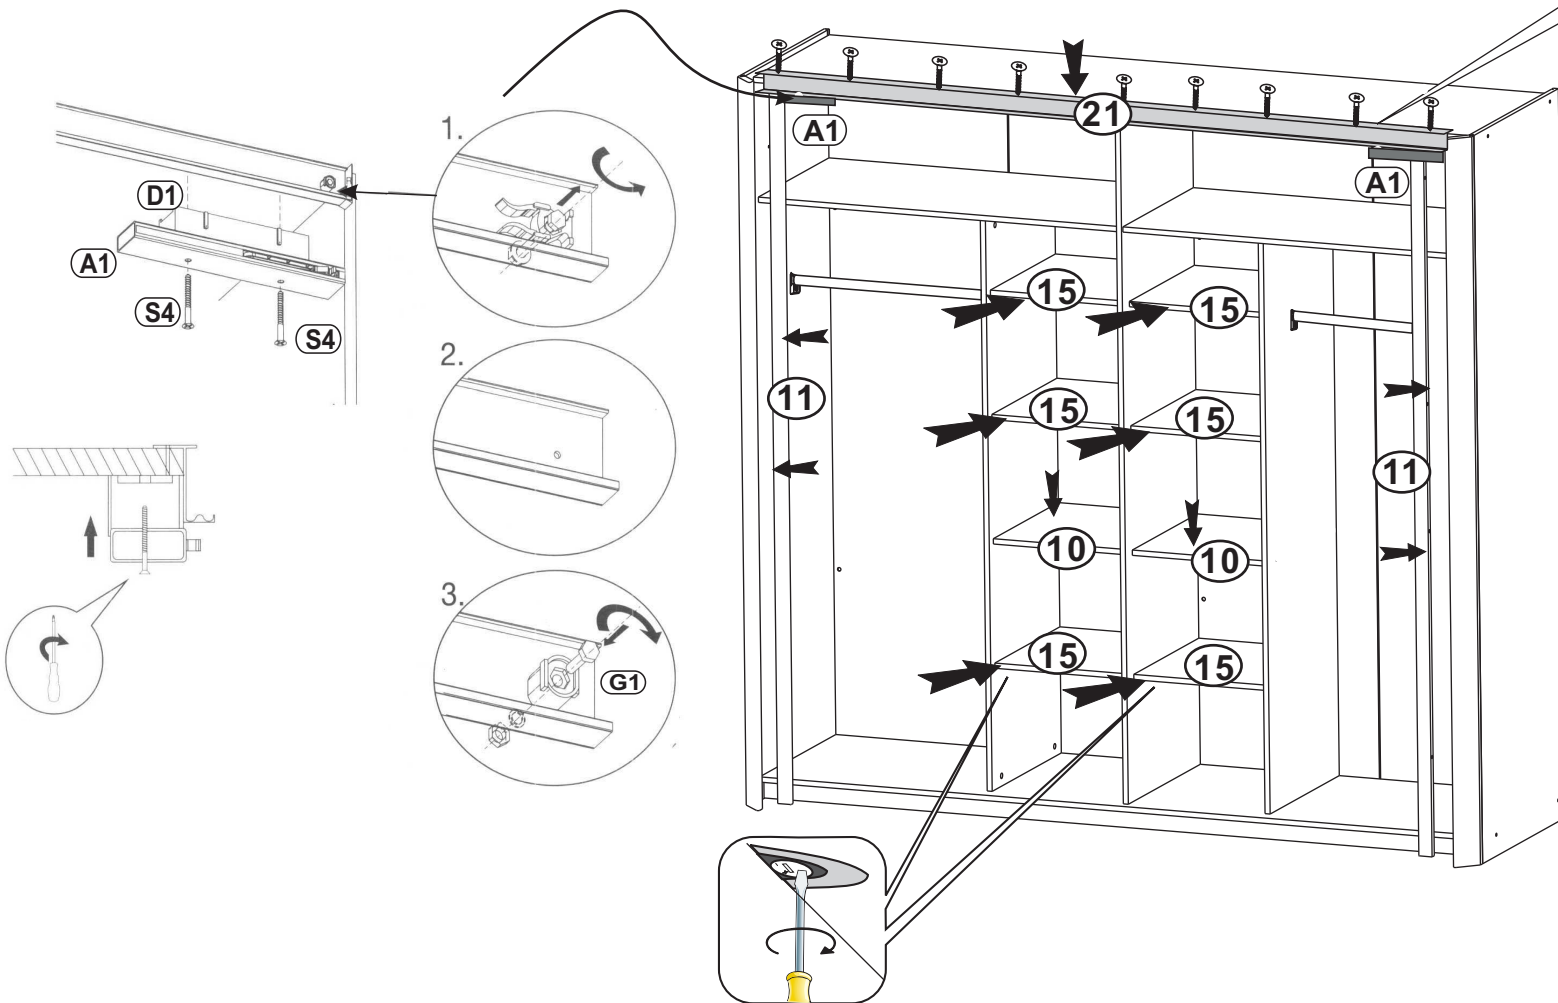

Modellname:
Nazwa modelu:

LA NOTTE














Modellreihe:
Nr. modelu

P8--LN

Type:
Typ: **Typ 02**

Blatt Nr
Strona **9** von:
z: **13**

8

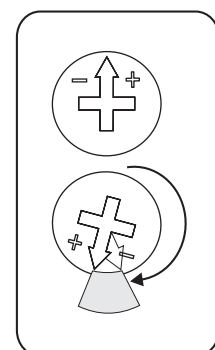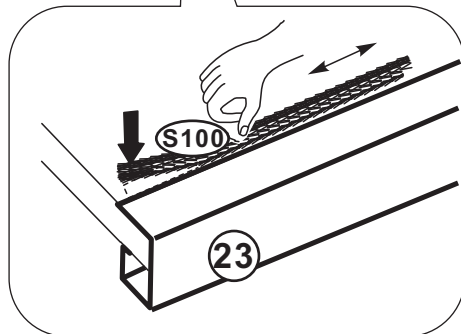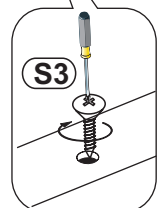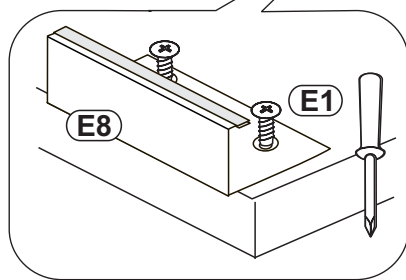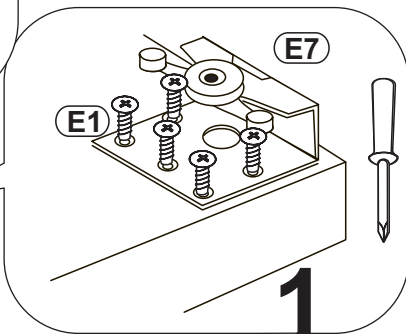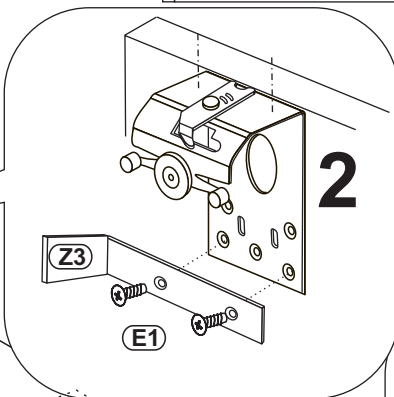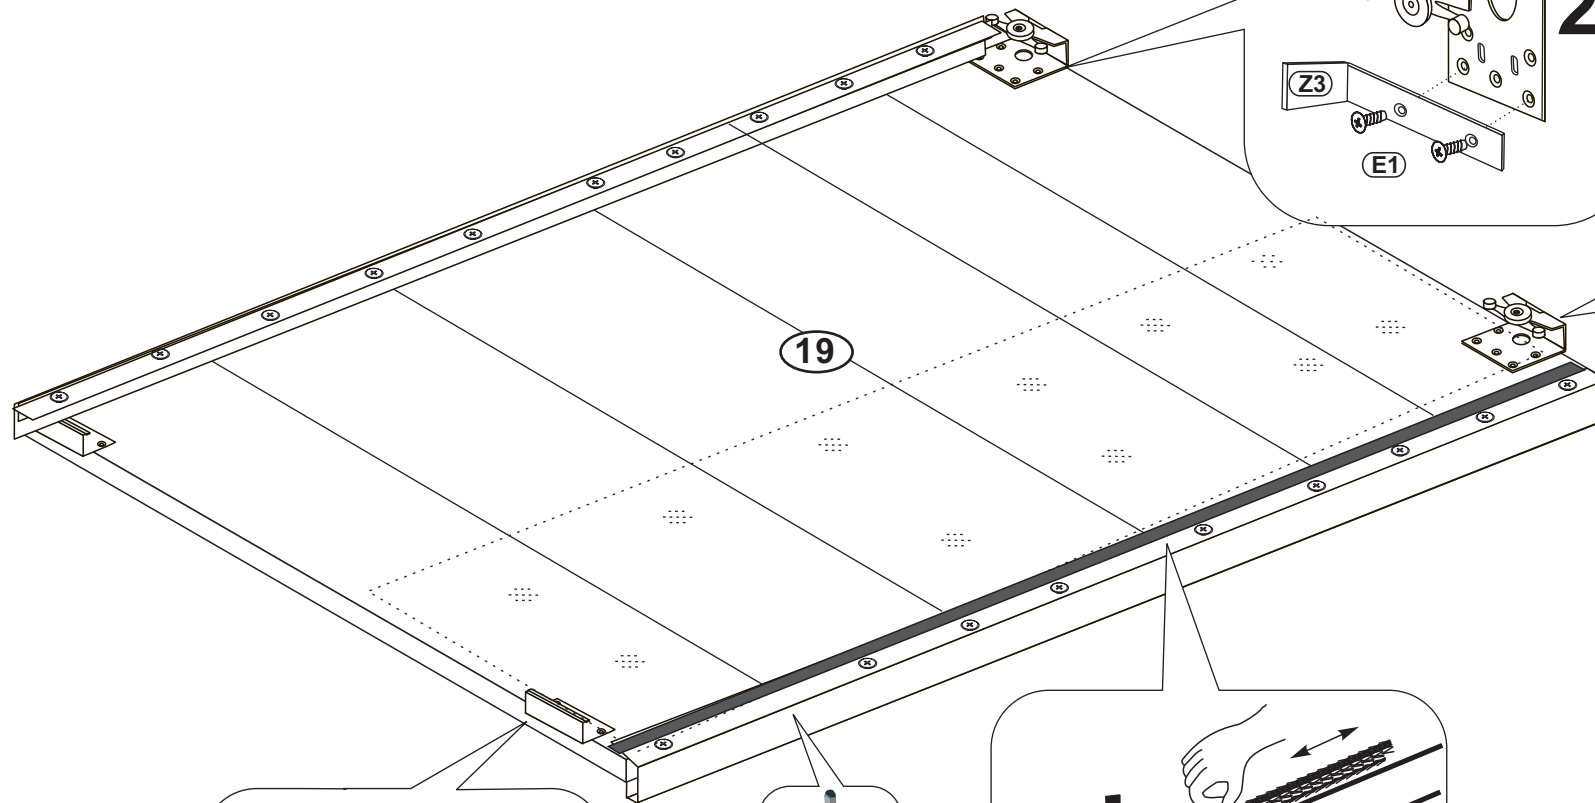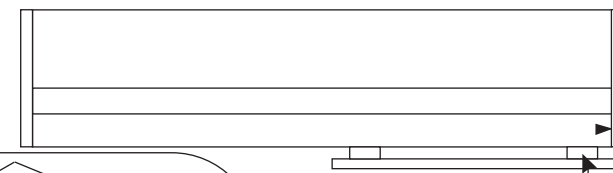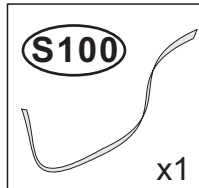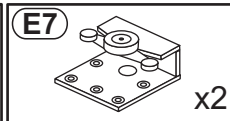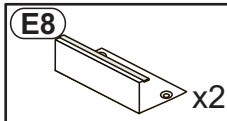

Modellname:
Nazwa modelu:

LA NOTTE














Modellreihe:
Nr. modelu

P8--LN


Type:
Typ: **Typ 02**

Blatt Nr
Strona **10** von:
z: **13**






9

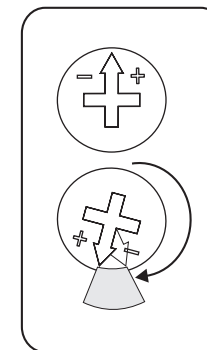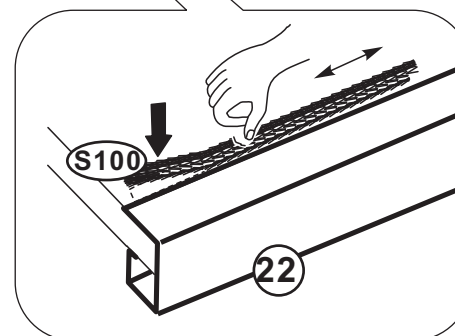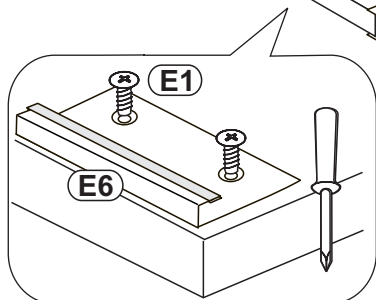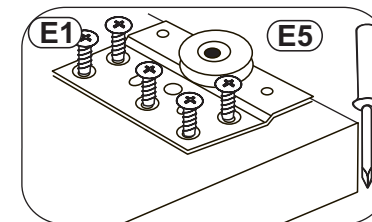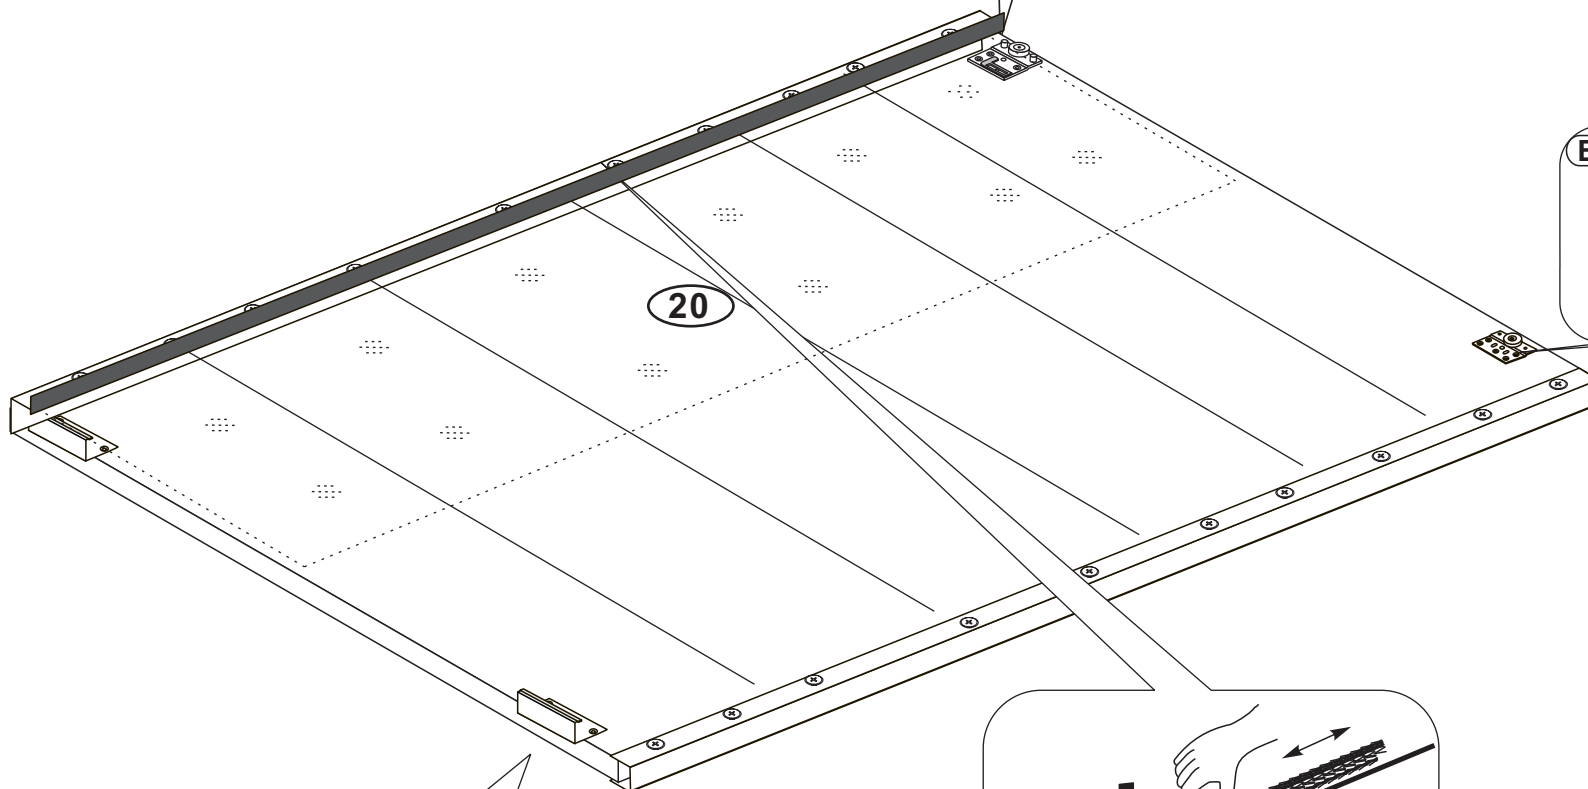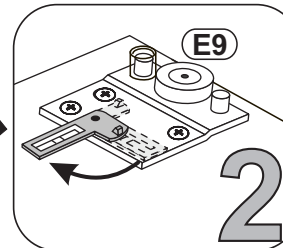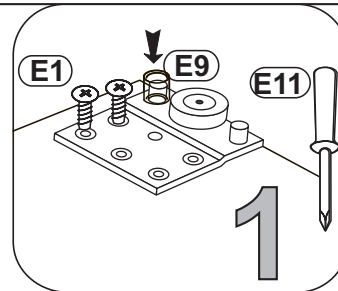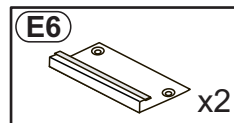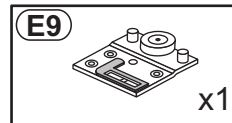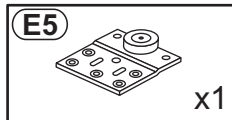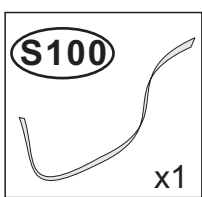

10

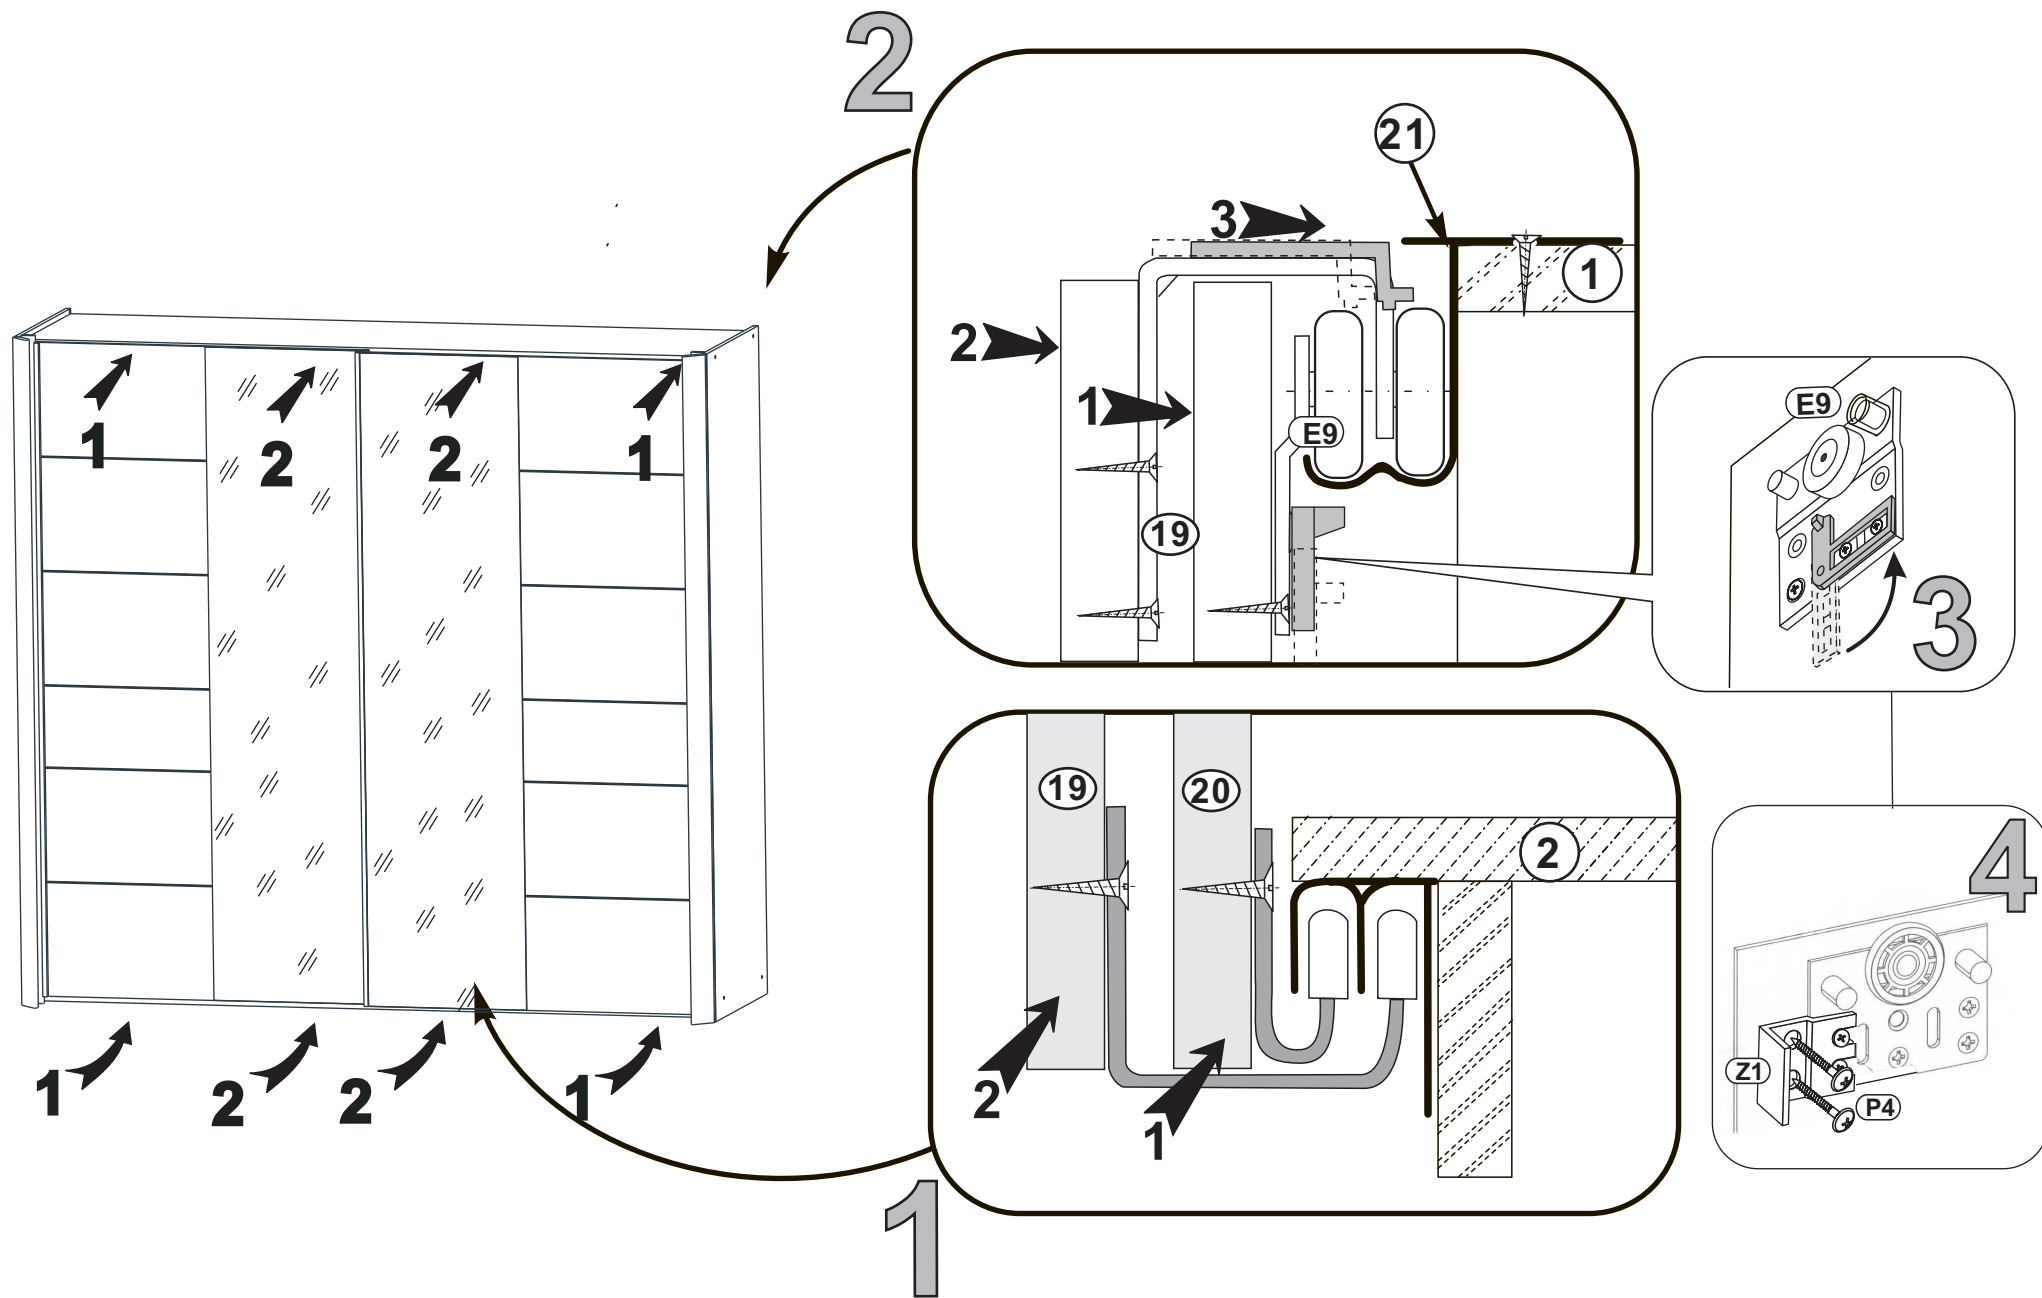

11

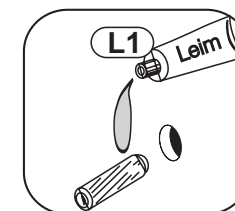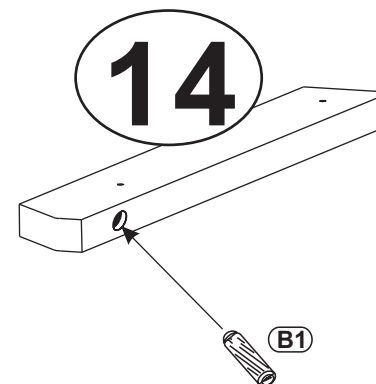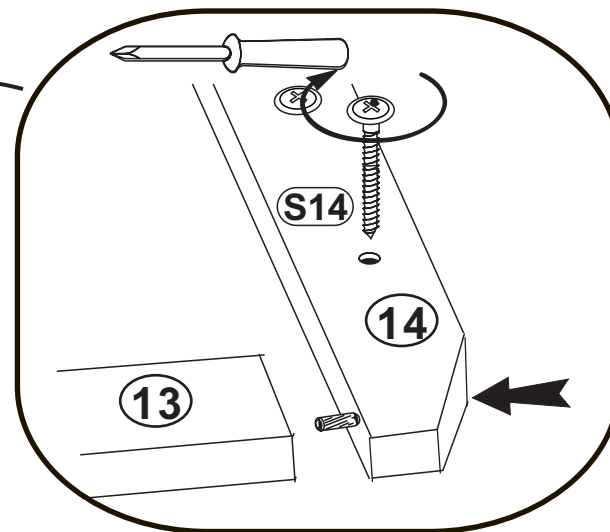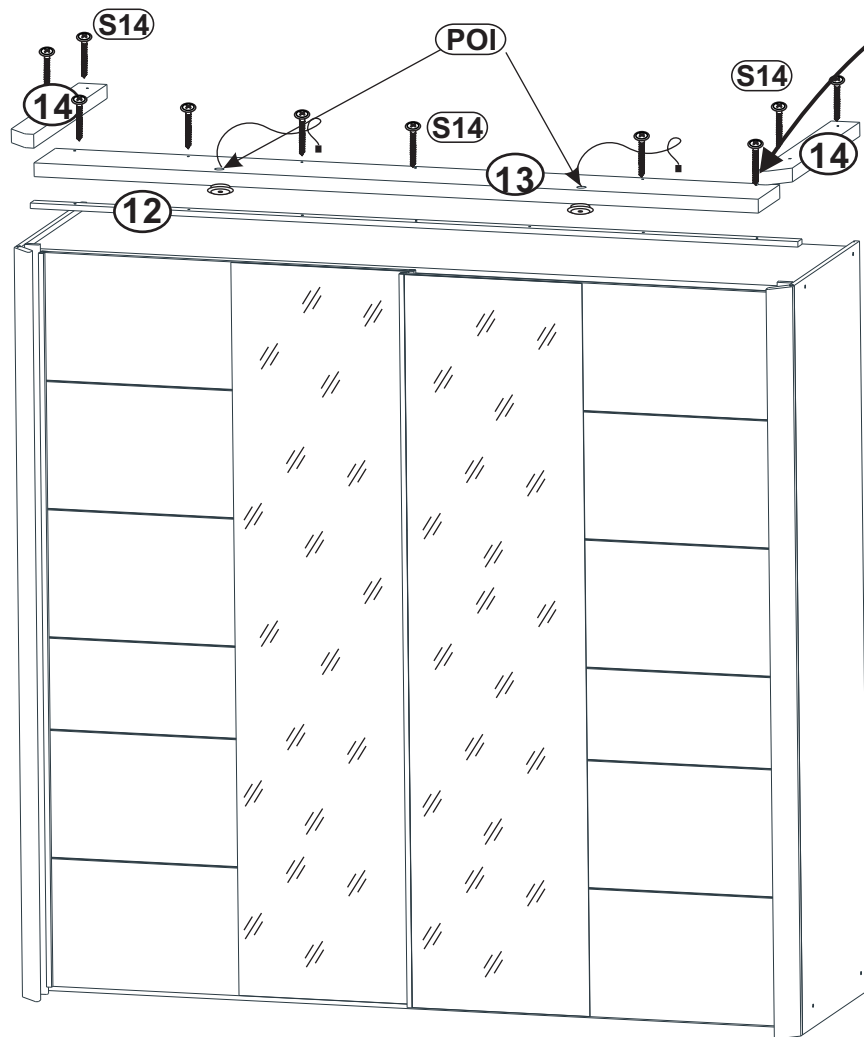

12

