












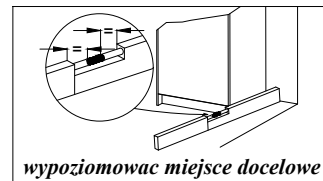
GORDIA R 50



Instrukcja montażu
Assembly instructions



								
8	4	8	16	16	16	16	16	1



UWAGA ! WAŻNE !
KOLKI WBIJAĆ JAK NA
PONIŻSZYM RYSUNKU
W KRAWĘDZ ELEMENTU
11.0 mm

UWAGA !
ATTENTION !

No.	Stc.	L	W	T
1	1	500	330	16
2	1	500	330	16
3	1	1900	330	16
4	1	1900	330	16
5	2	468	300	16
6	2	468	300	16
7	1	1002	466	3

