




www.MLMEBLE.pl

GB D CZ SK RUS LT
assembly instructions / montageanleitung / montážní návod / montážny návod / инструкции по монтажу / surinkimo instrukcija











INSTRUKCJA MONTAŻU




W 80-02


↑25 →80 ↗21

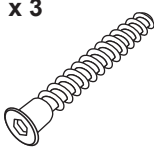
akcesoria / accessories / zubehör / příslušenství / príslušenstvo / аксессуары / furnitūra :

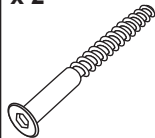x 3  KT 7/60	x 8  WT 3,5x20 cynk biały	x 2  KK 8/32	x 2  KR Ø10	x 2  KT 6,4/70	x 1  klej / glue / kleber / lepidlo / lepidlo / клей / kljaj	x 1  kluczyk / key / schlüssel / klíč / ključ / ключ / raktas	x 4  WK 2N
---	---	---	--	---	---	--	---

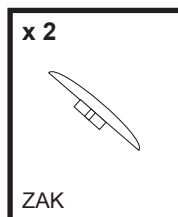


do montażu potrzebne są:
are needed for assembly:
sind erforderlich für die montage:
jsou potřebné pro montáž:
sú potrebné pre montáž:
которые необходимы для сборки:
Surinkimui reikės

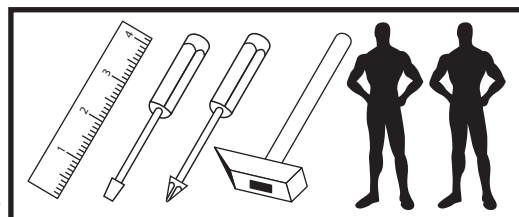

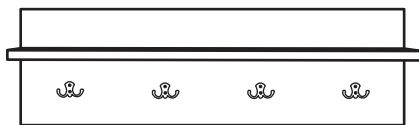

	CODE			
1	W8002_01	243	800	1
2	W8002_02	190	796	1
3				
4				
5				

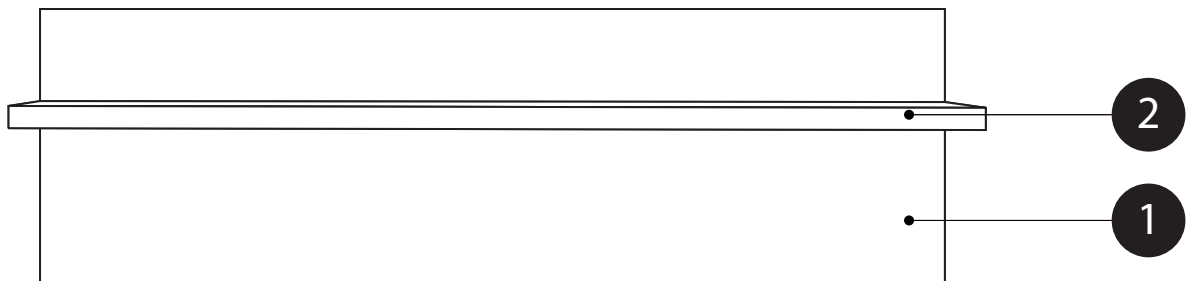

! UWAGA ! - w pierwszej kolejności wbijamy akcesoria „KK” i „MD” w blaty oraz boki.
! WARNING ! - The first accessory sticks "KK" and "MD" in the tops and sides.
! WARNUNG ! - Die erste Accessoire-Sticks "KK" und "MD" in den Spitzen und an den Seiten.
! POZOR ! - První příslušenství holí "KK" a "MD" v korunách a boky.
! POZOR ! - Prvé příslušenstvo palíc "KK" a "MD" v korunách a boky.
! ВНИМАНИЕ ! - Первый аксессуаров палочки "KK" и "MD" по вершинам и по бокам.
! DĚMESIO ! - Pirmiausiai furnitūrą KK ir MD įkalame į stalviršį ir šonus.

