

EN ASSEMBLY MANUAL
PL INSTRUKCJA MONTAŻU






Narutowicza 181
97-500 Radomsko
Poland

e-mail: dsv.dmytro2018@gmail.com





2,5 ~ 3 h

You need to fitting-up :
Niezbędne do montażu :

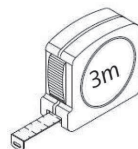


INVENTO

IN-14 Vertical: 160cm - V23032019






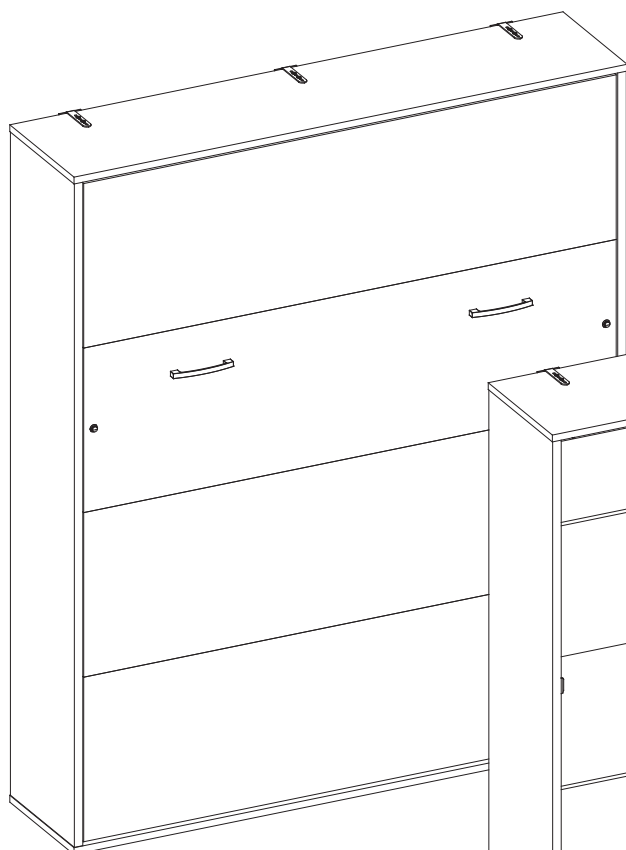
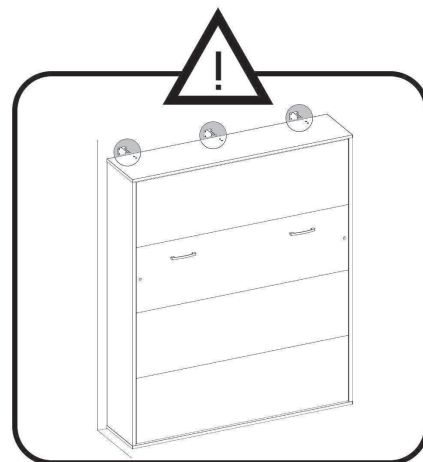


160V 181x220x42 cm



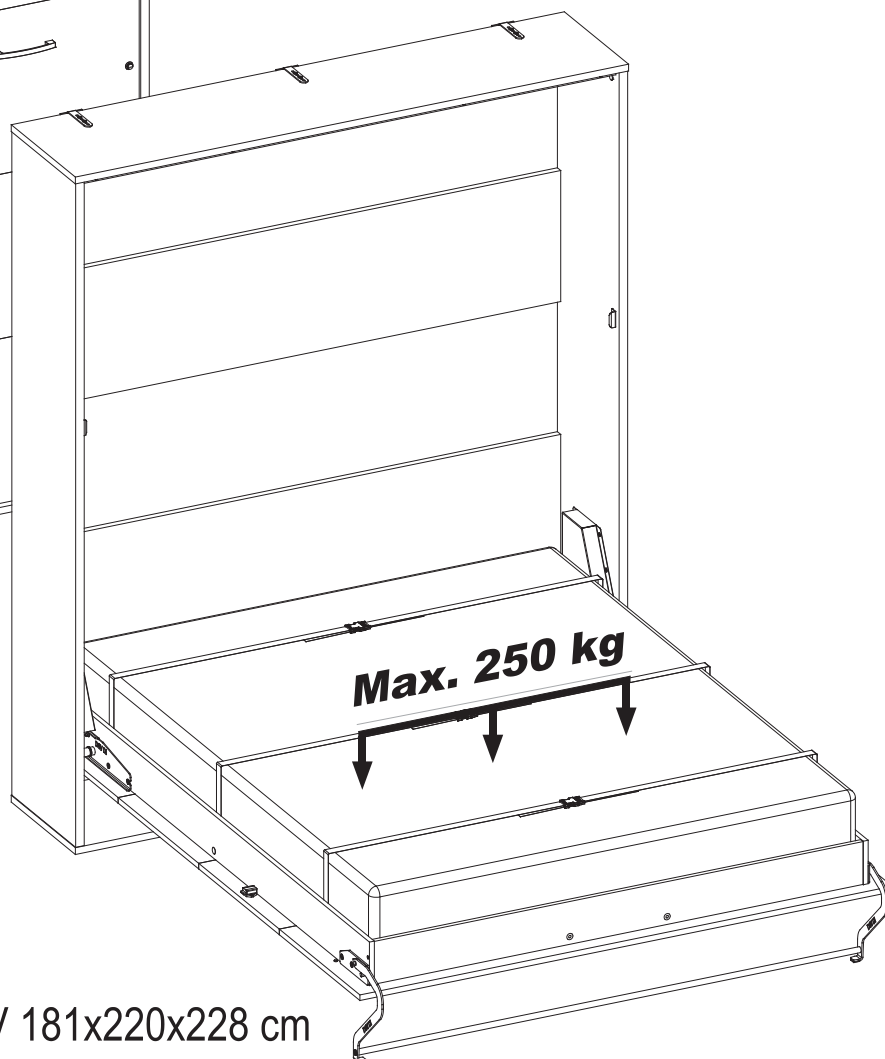


160V 181x220x228 cm




► **1** EN You will need the following hardware to complete this step:
PL Niezbędne do montażu :

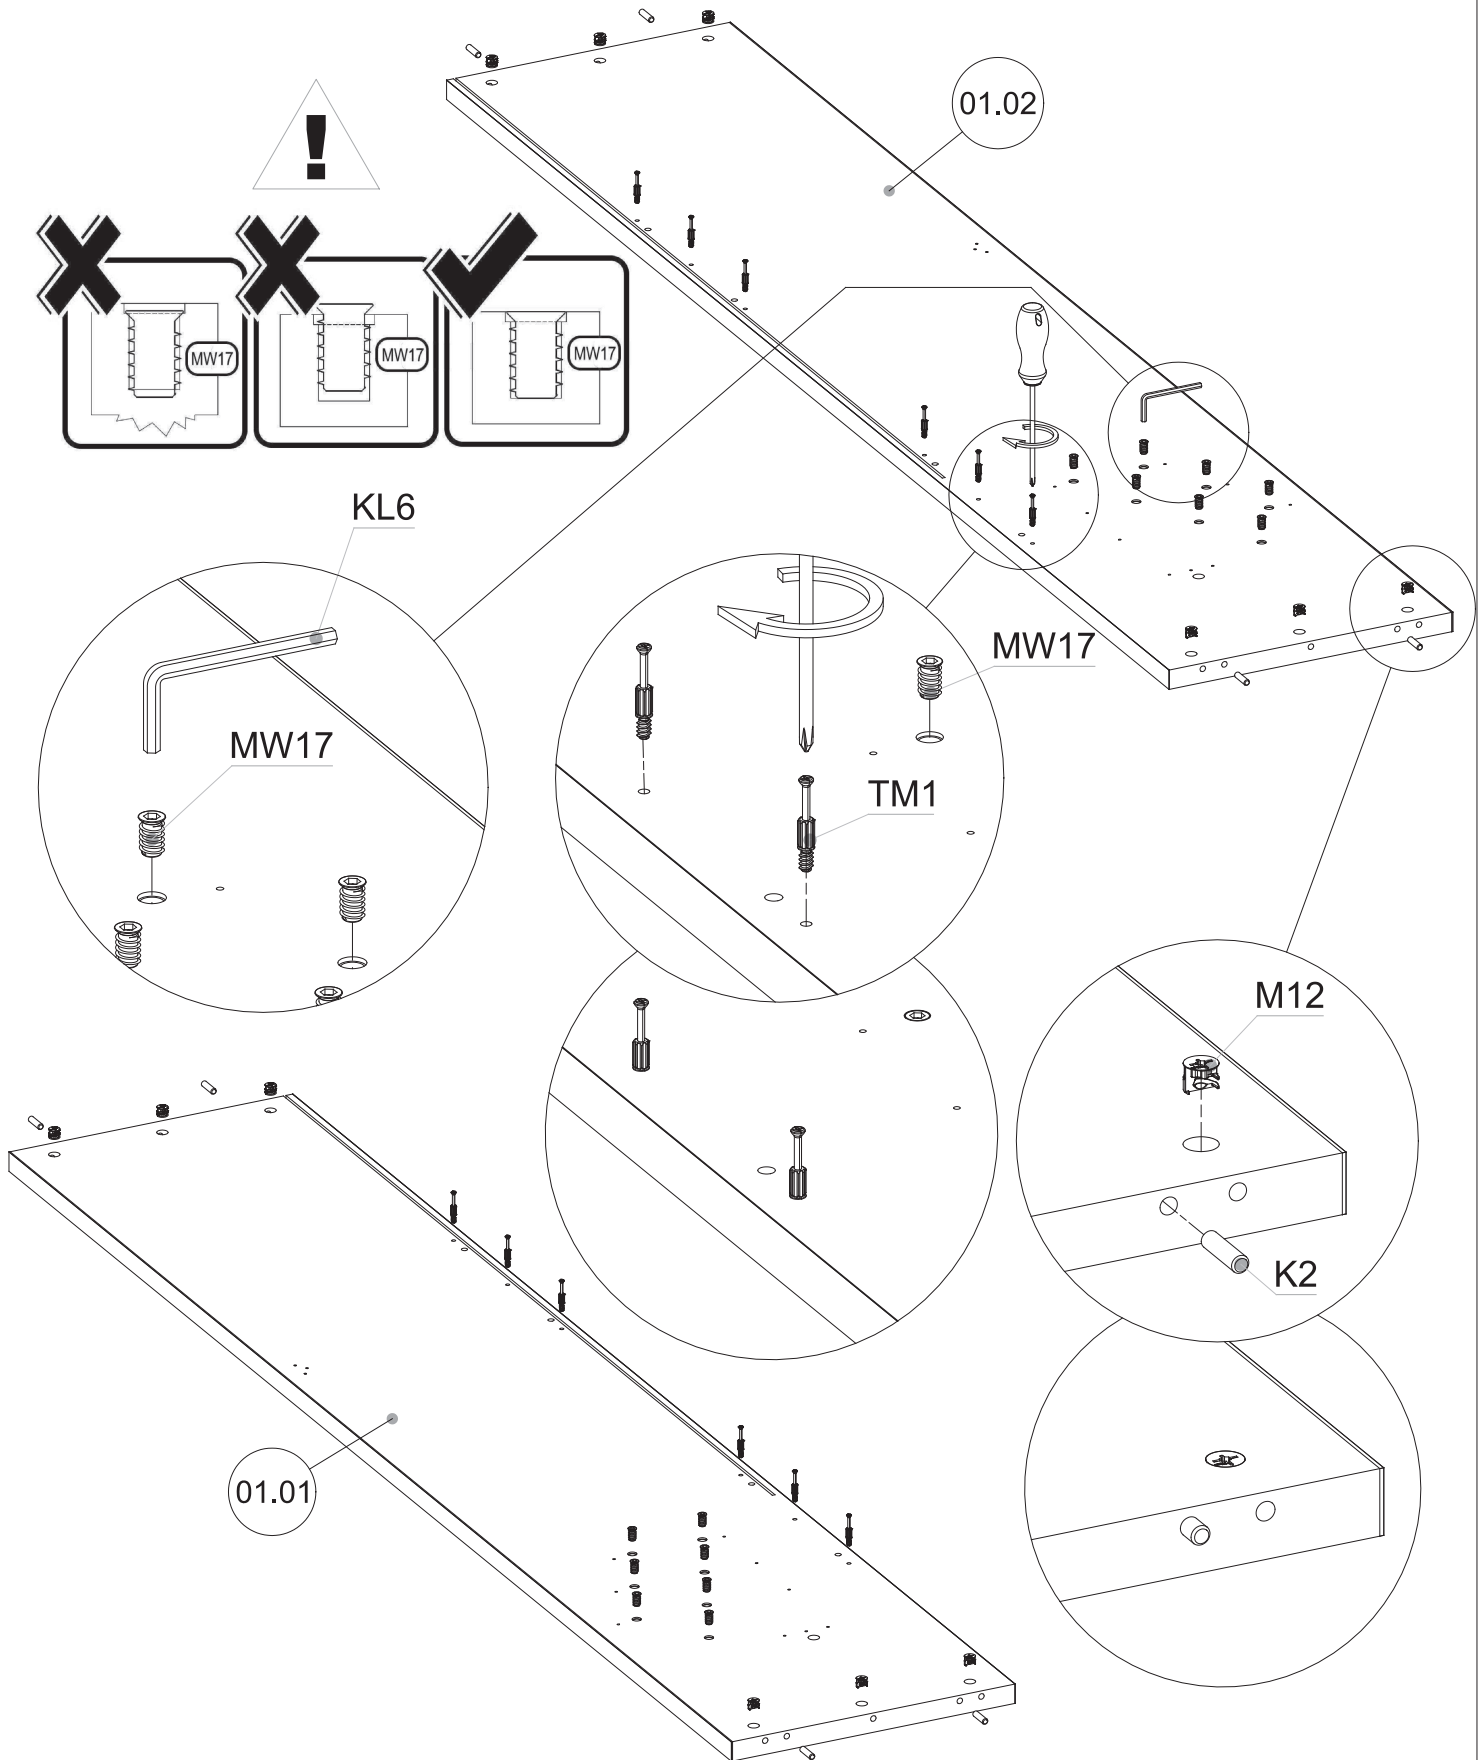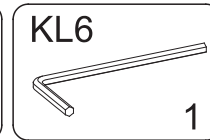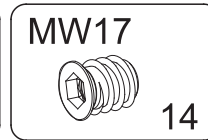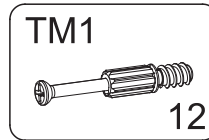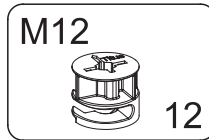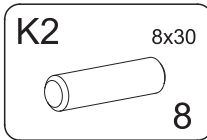

► **2** EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

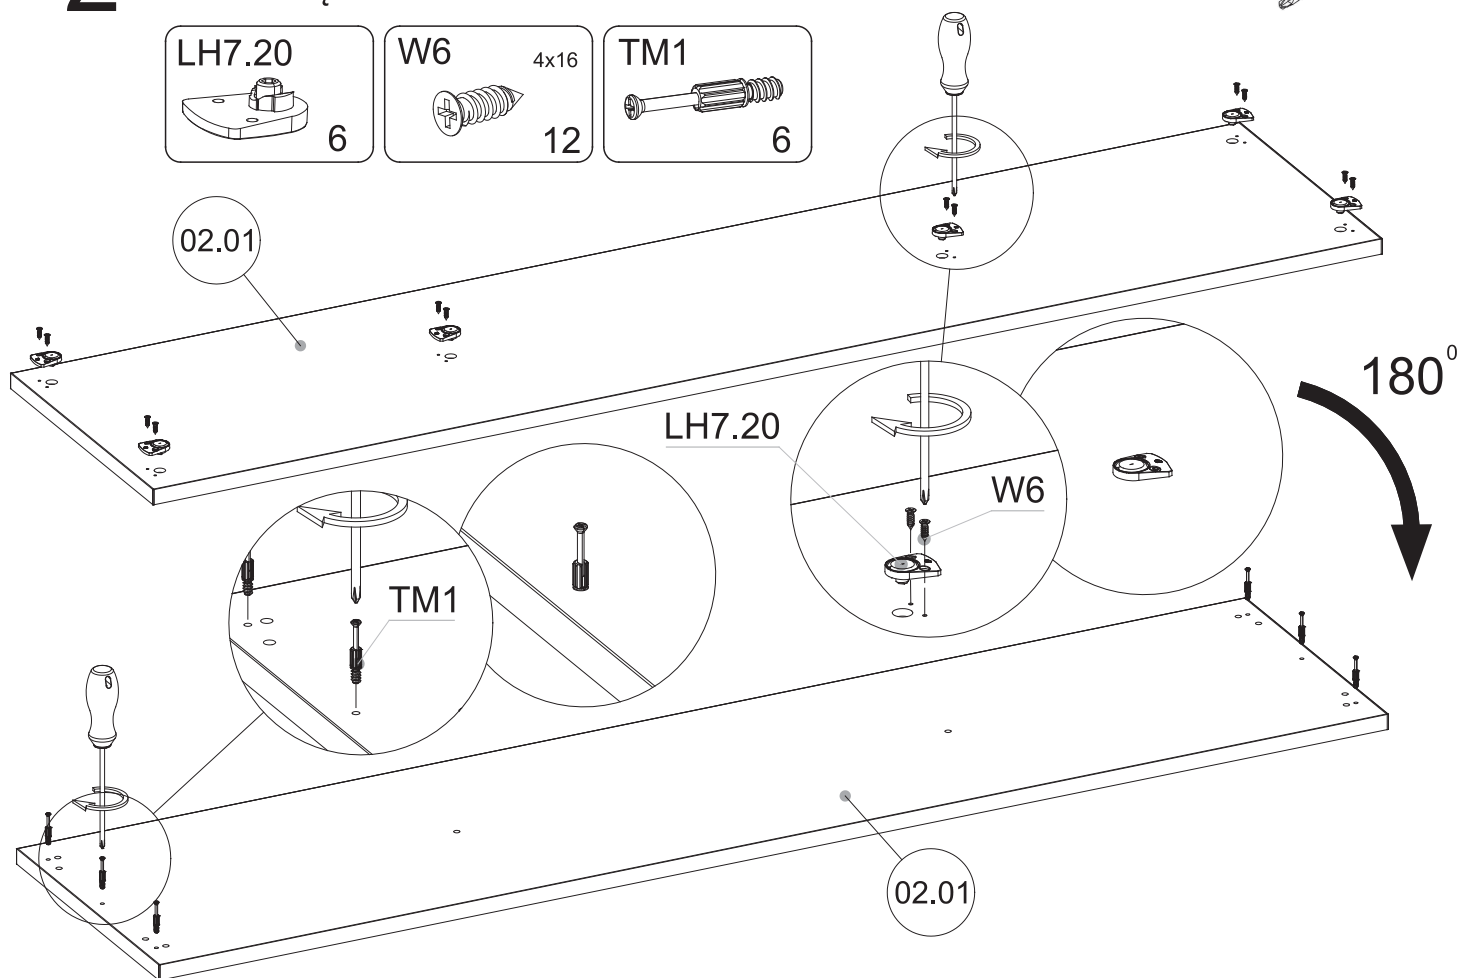
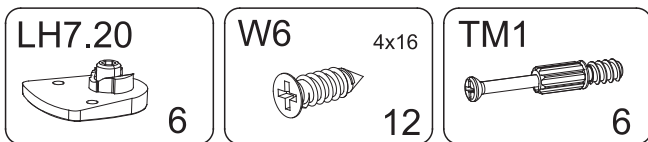



► **3** EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

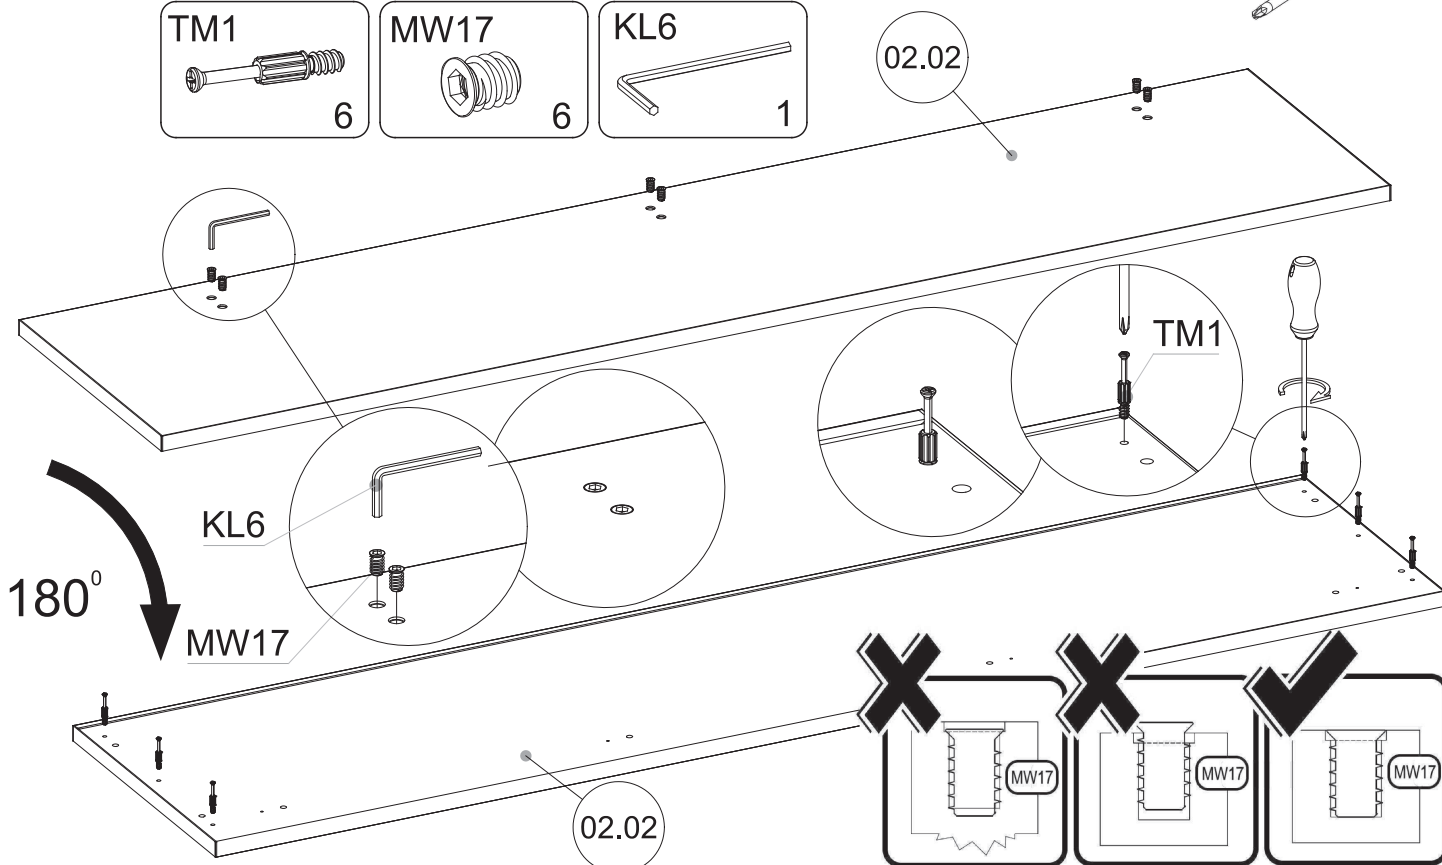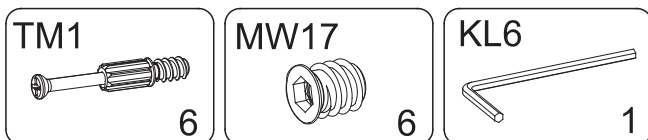


▶ 4

EN You will need the following hardware to complete this step:
PL Niezbędne do montażu :

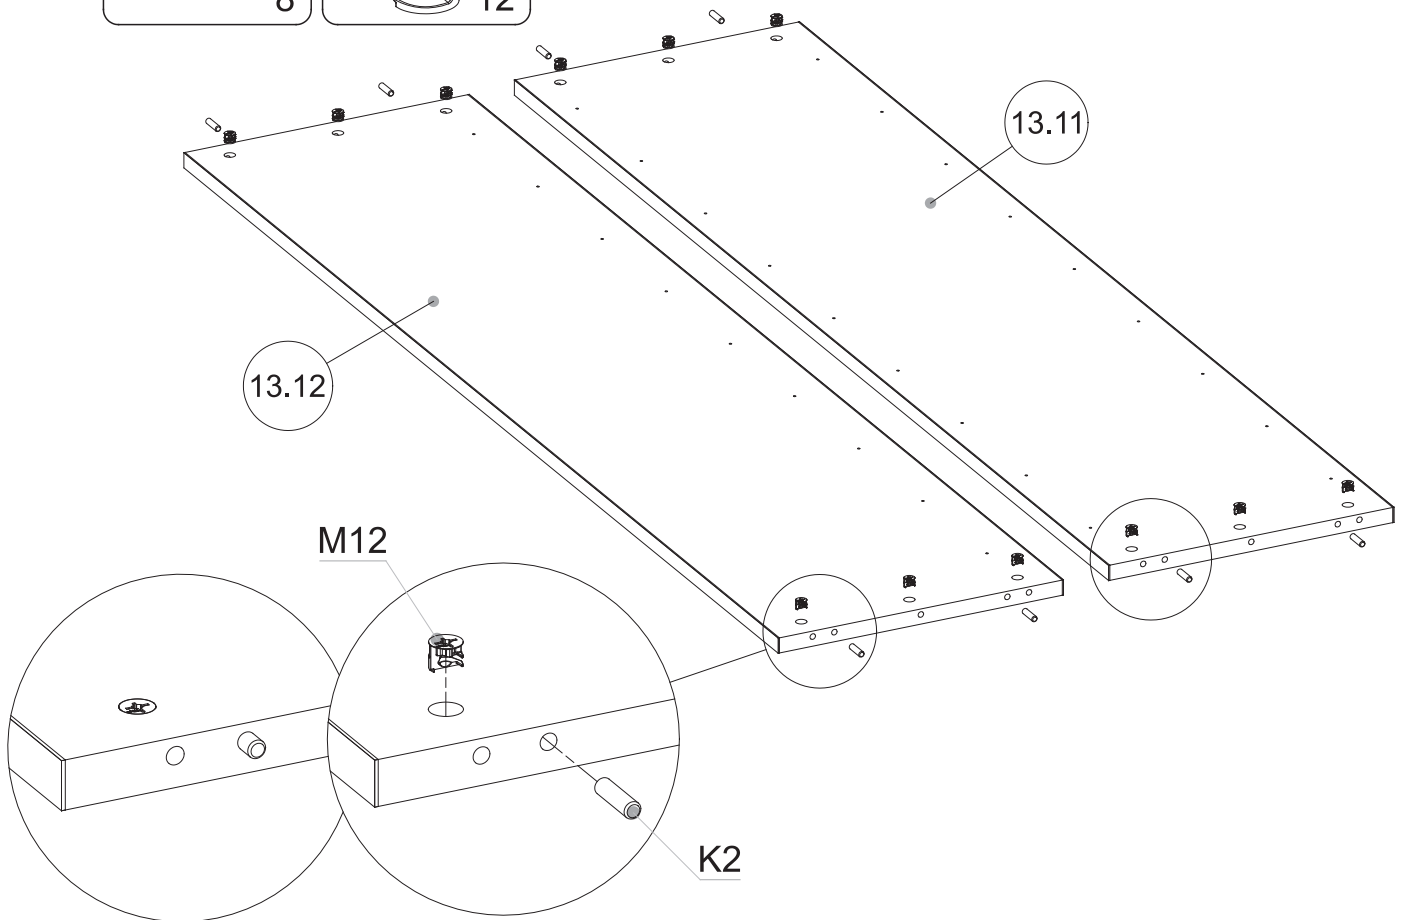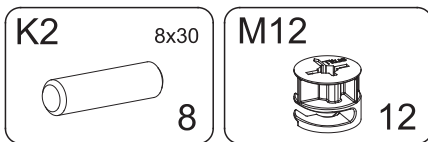


▶ 5

EN You will need the following hardware to complete this step:
PL Niezbędne do montażu :





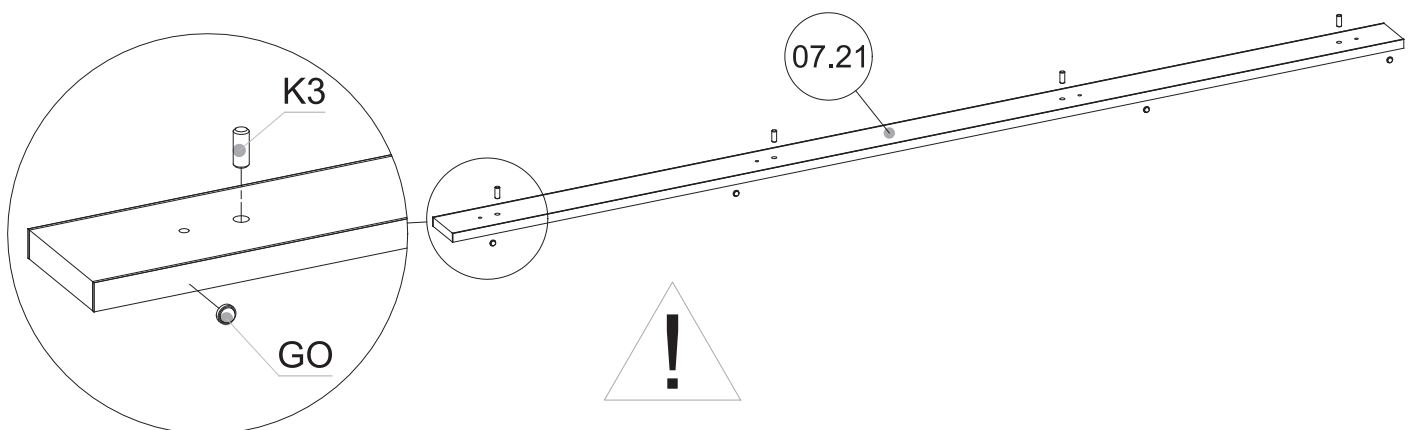


▶ 6

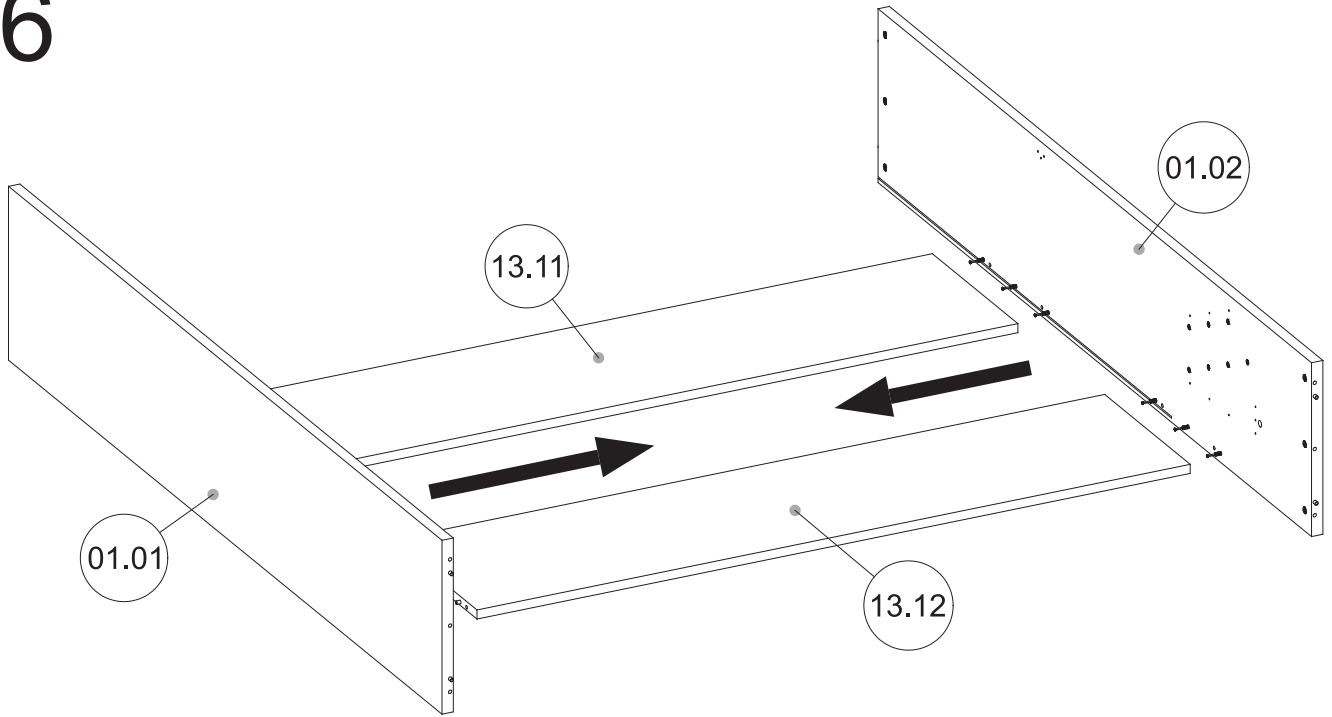


▶ 7



EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

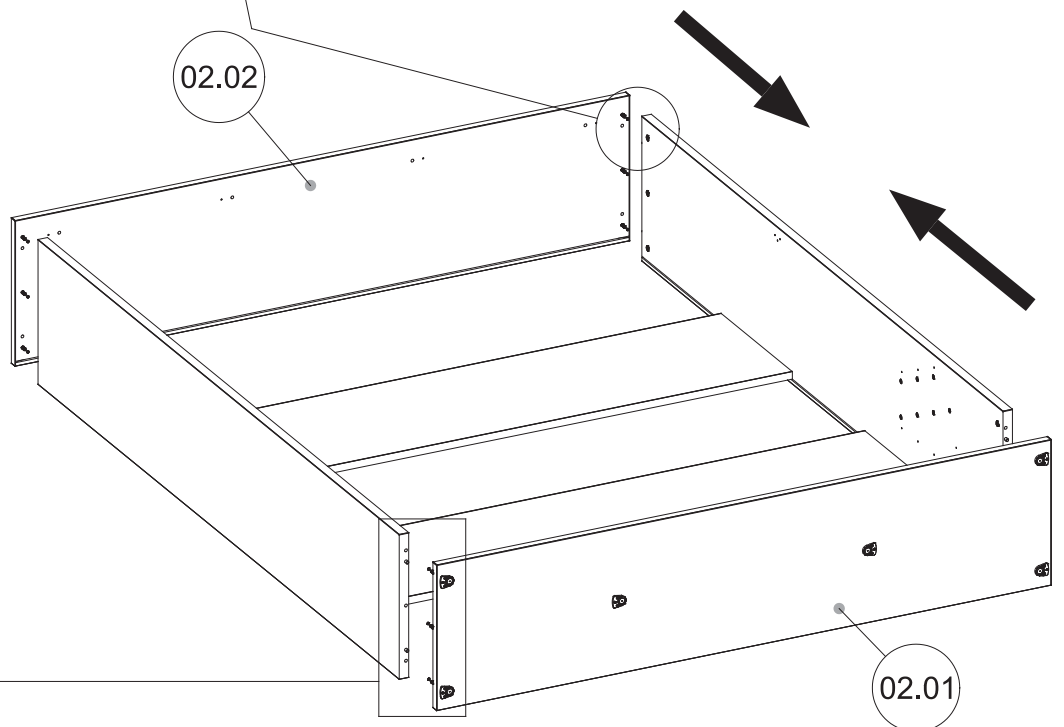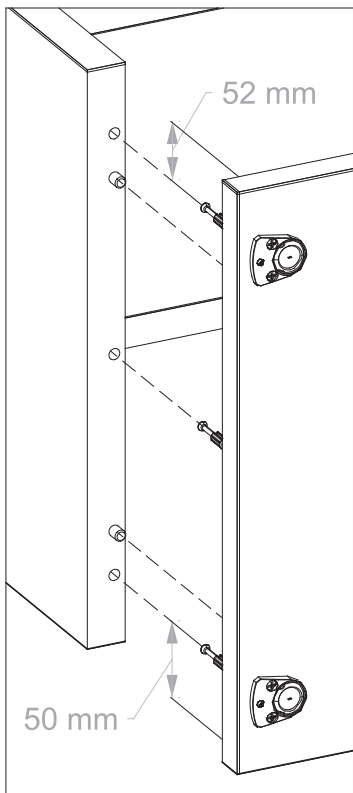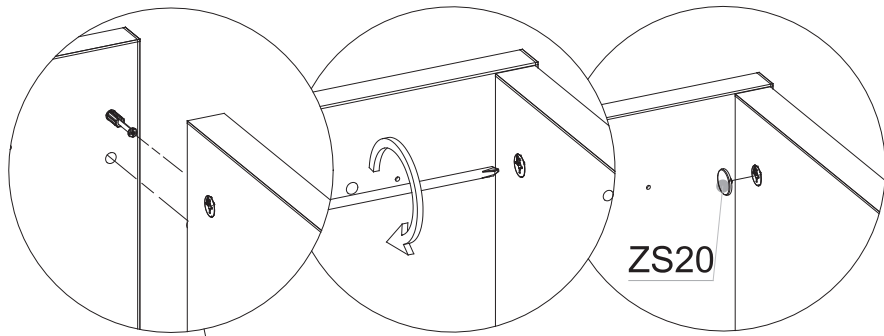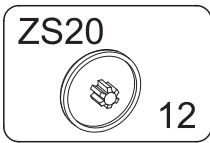

▶ 8







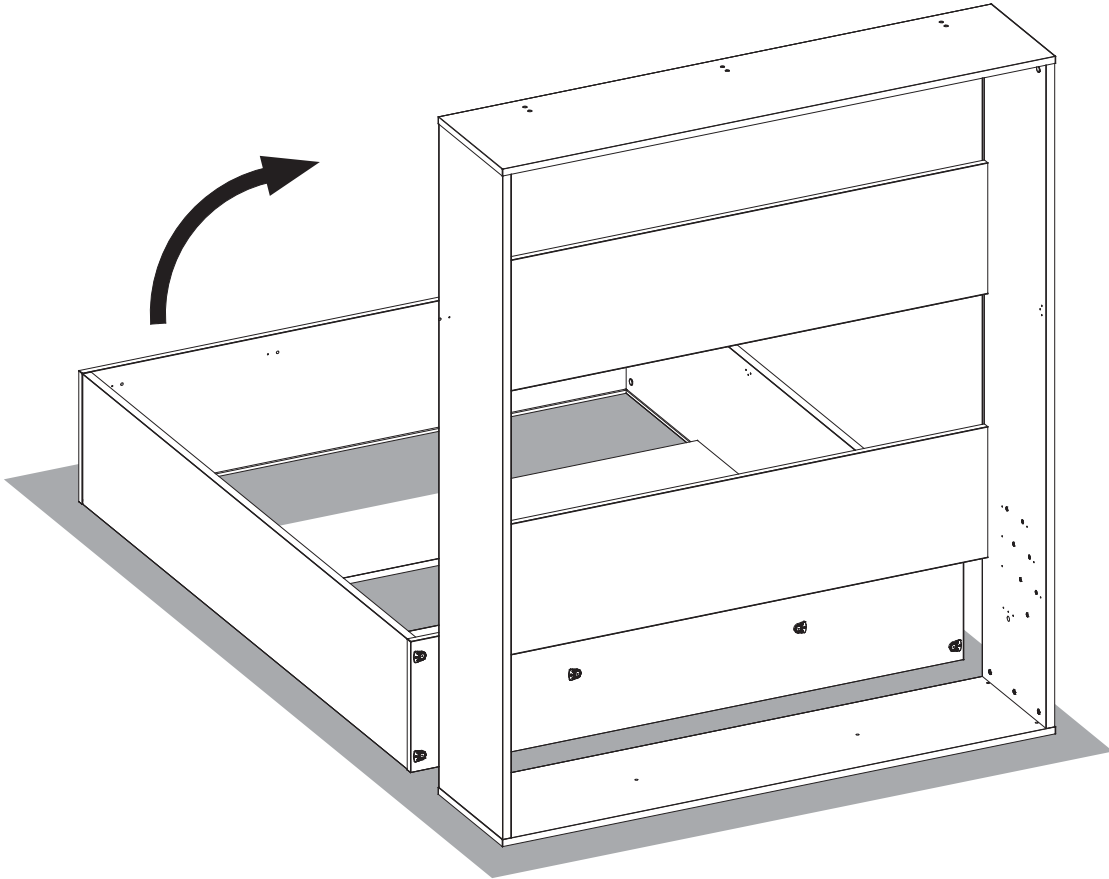


▶ 9 EN You will need the following hardware to complete this step:
PL Niezbędne do montażu :

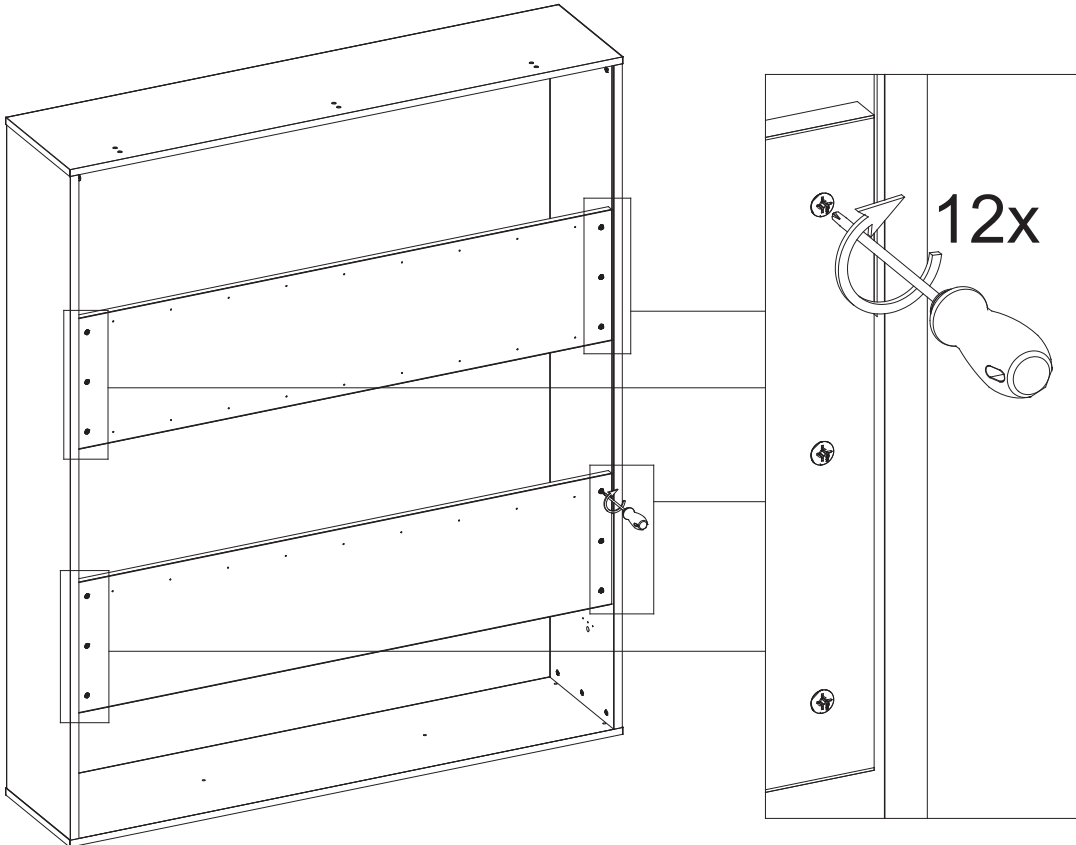


►10

EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

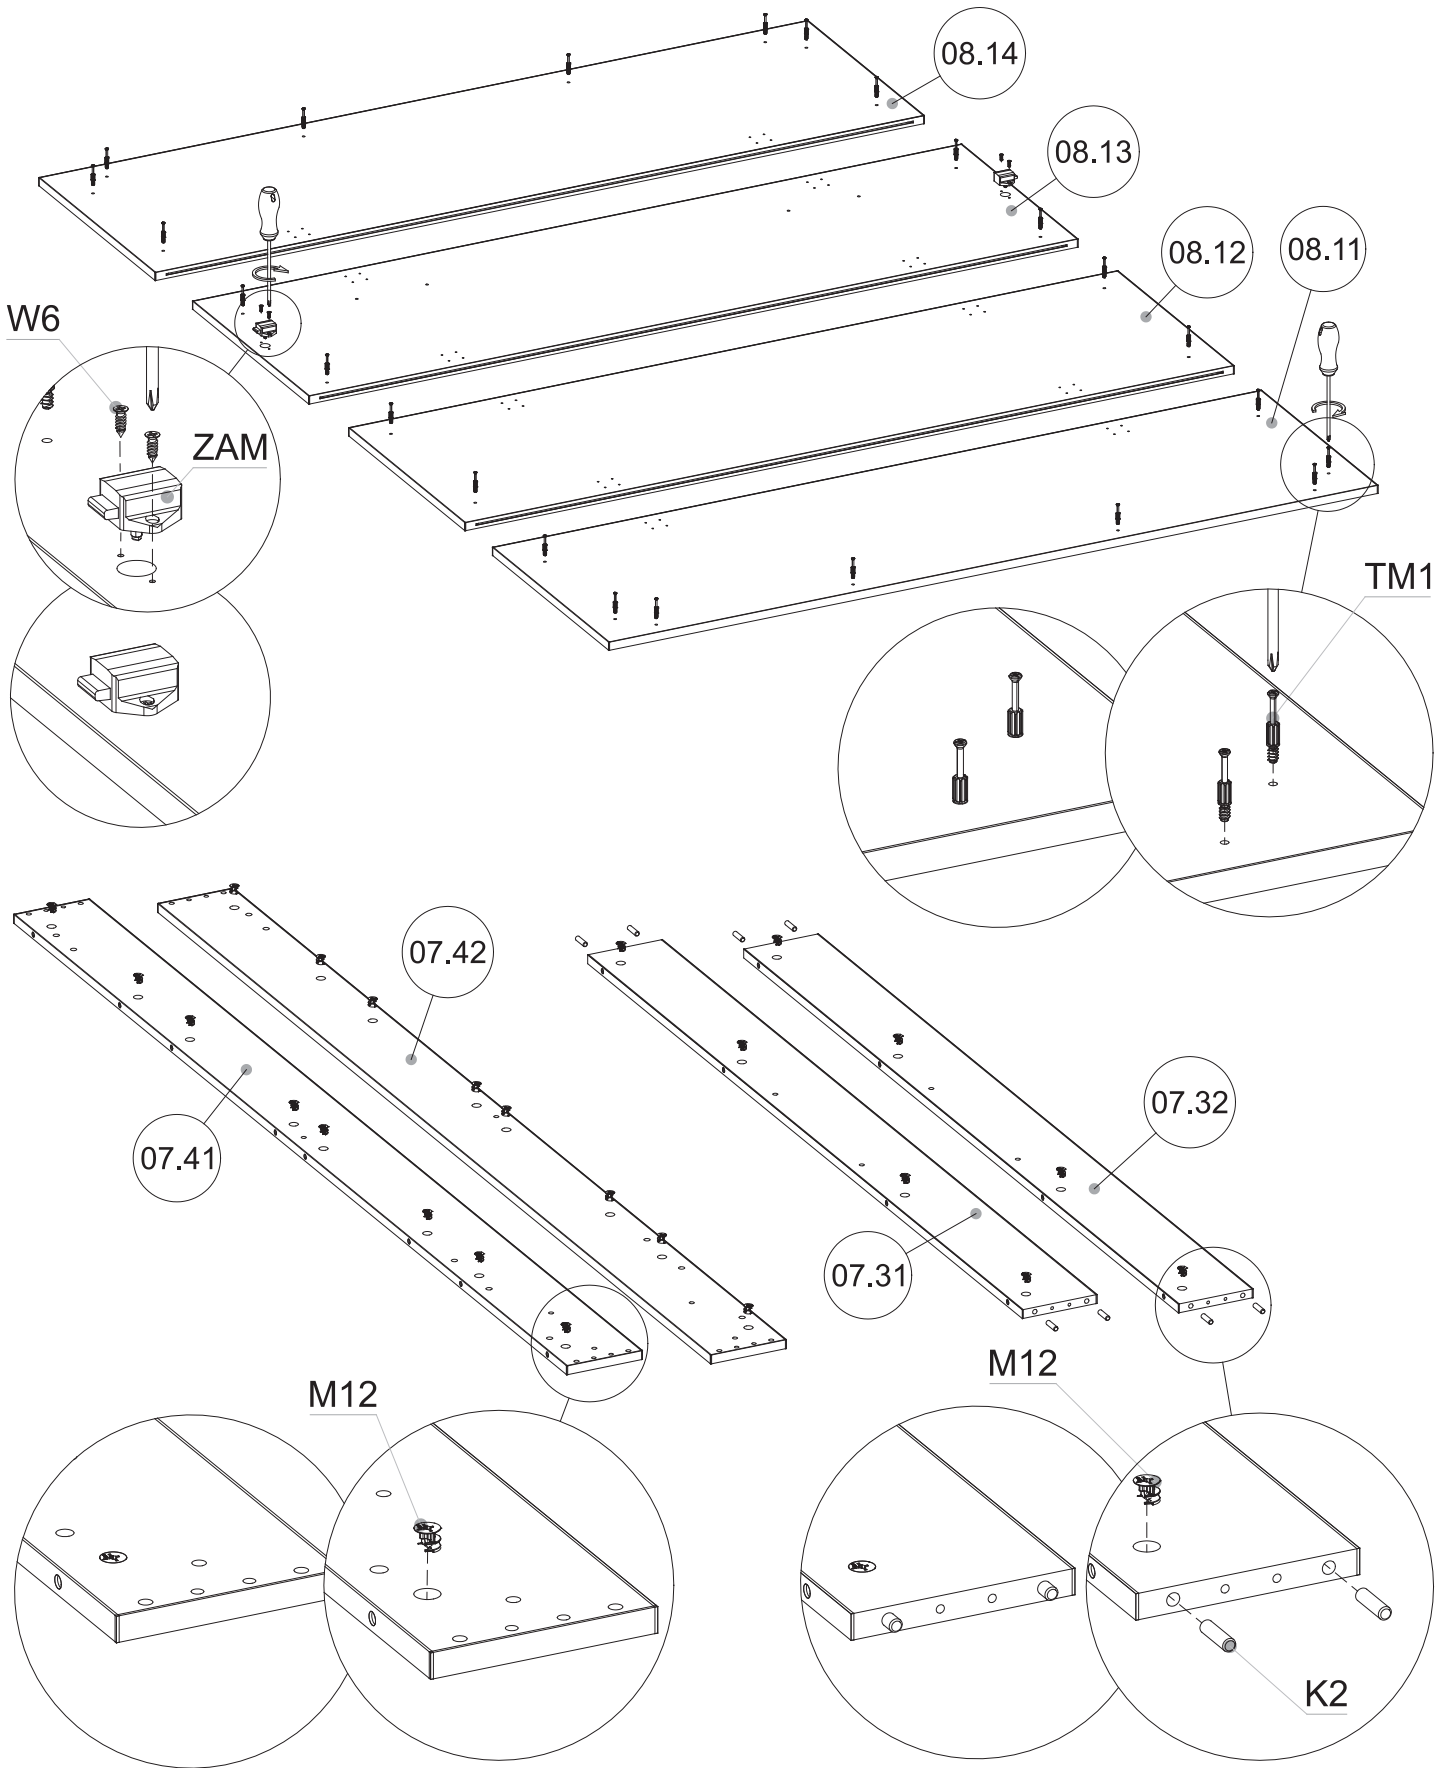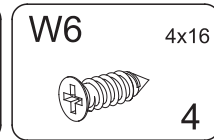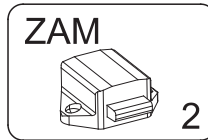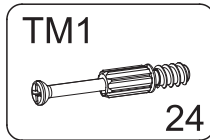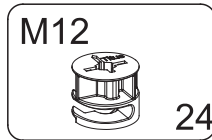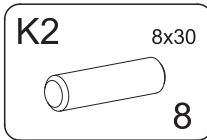




▶ 11


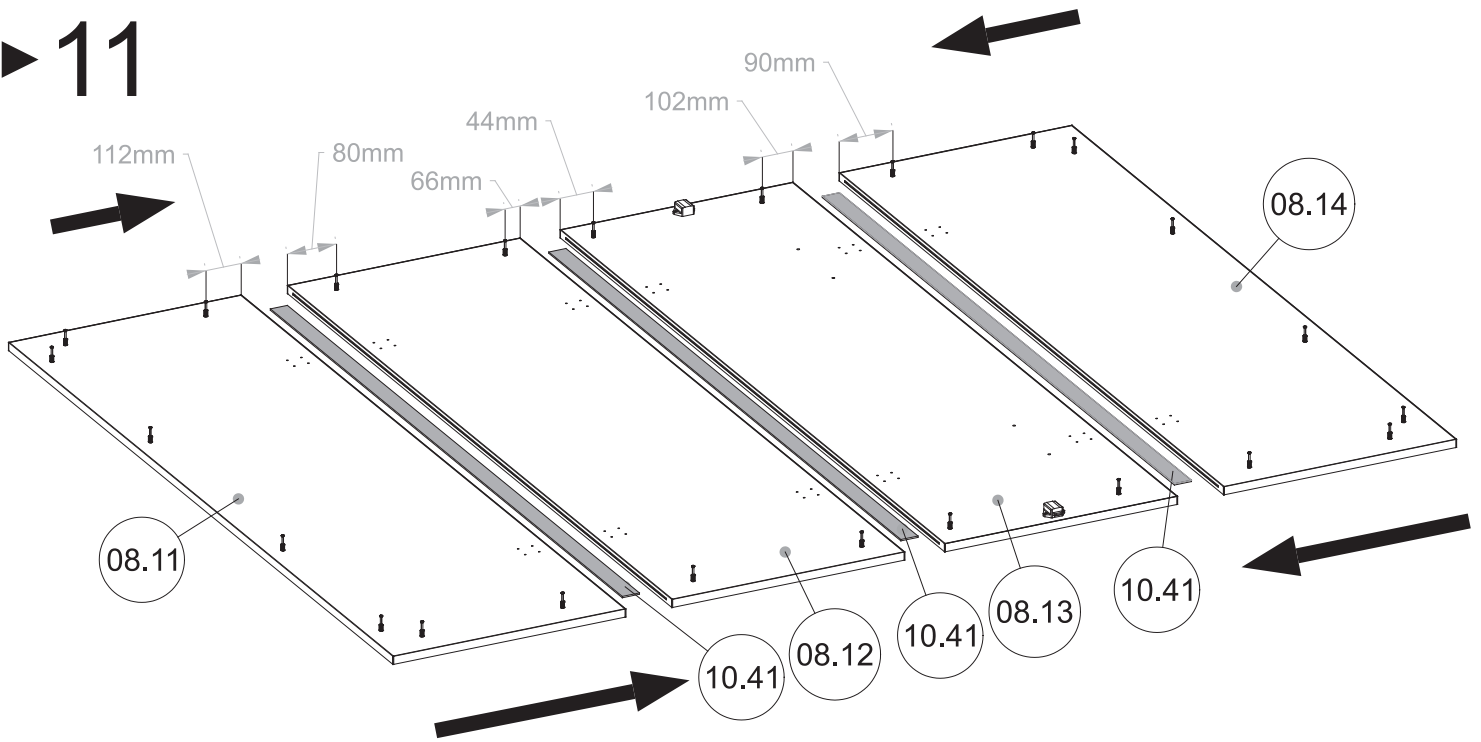


▶ 12



EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :





 <p>PM-4.180 6</p>	 <p>W6 4x16 48</p>
--	--

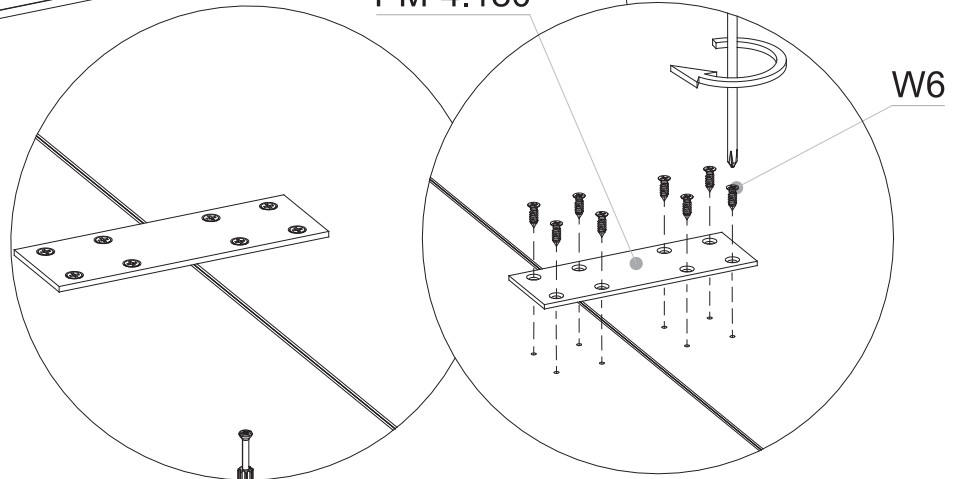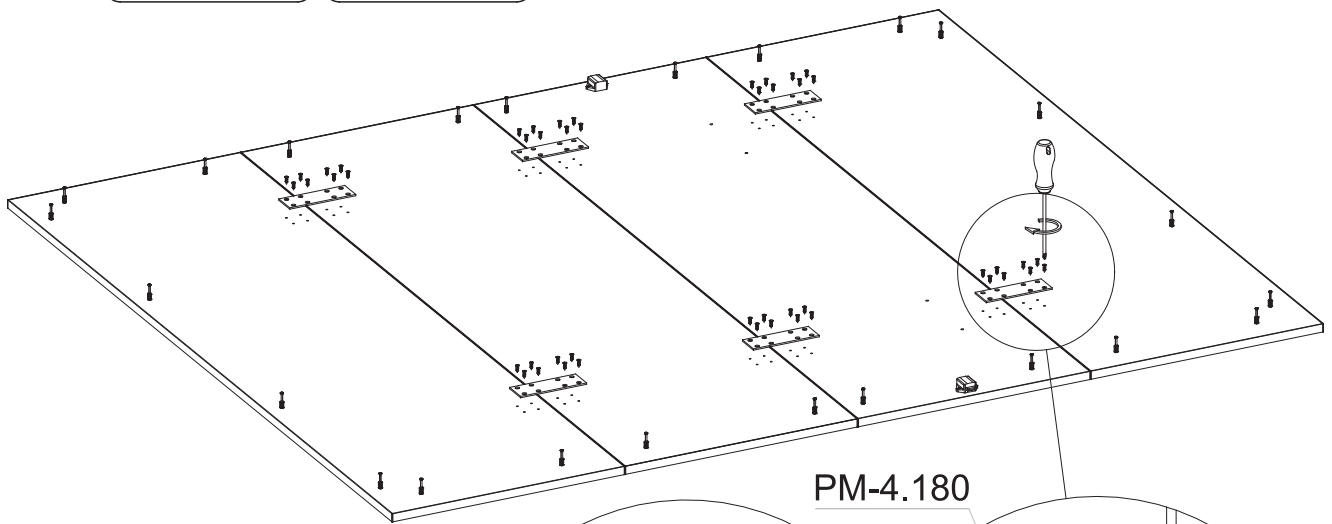


► **13** EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

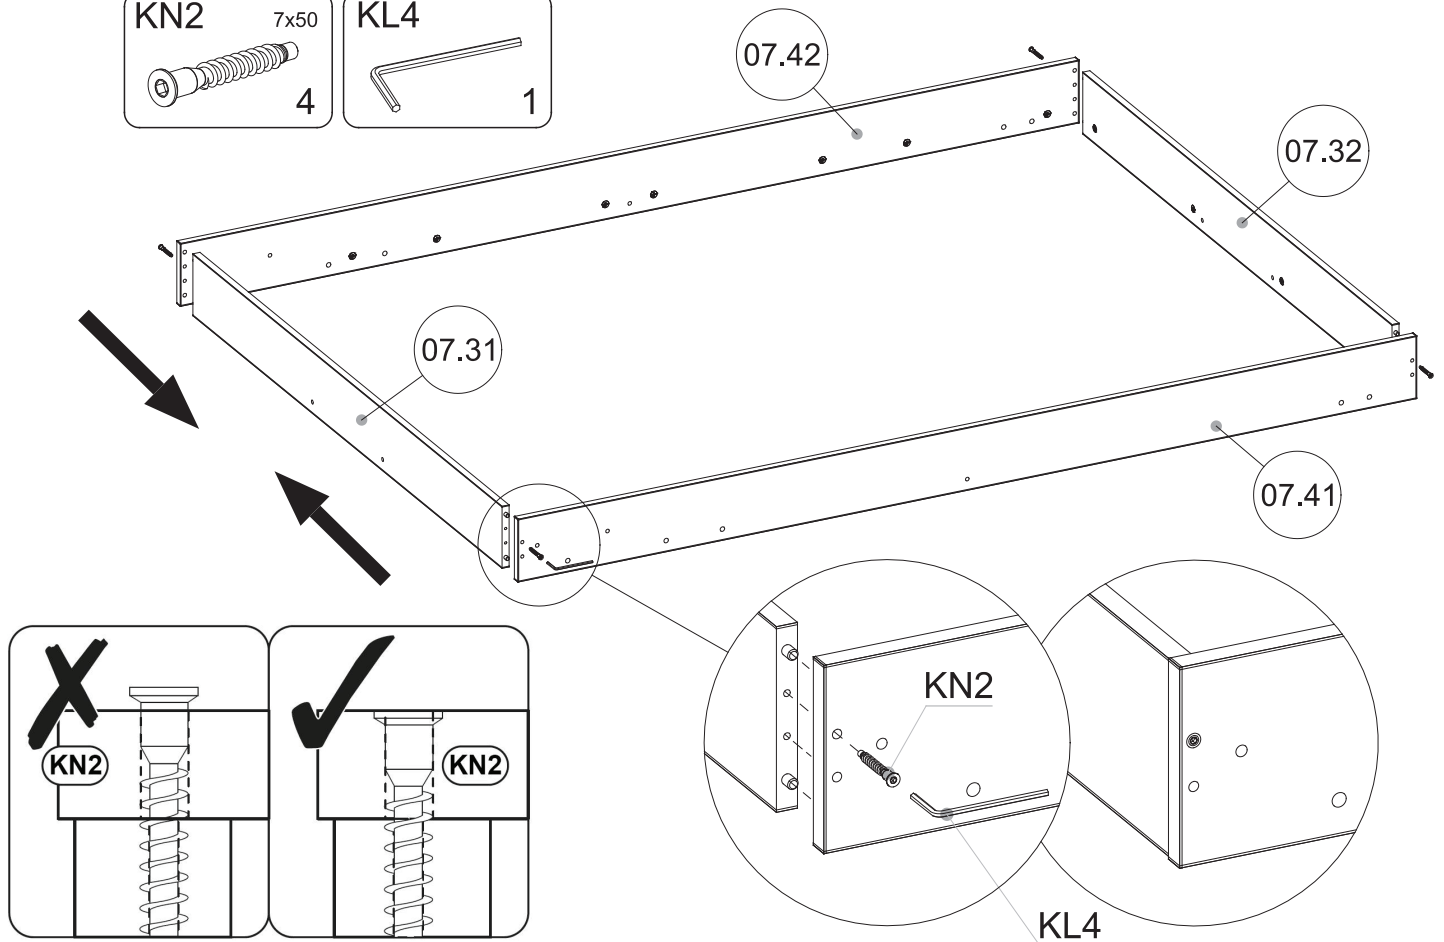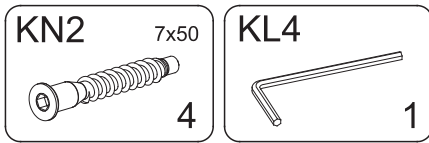


► **14** EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

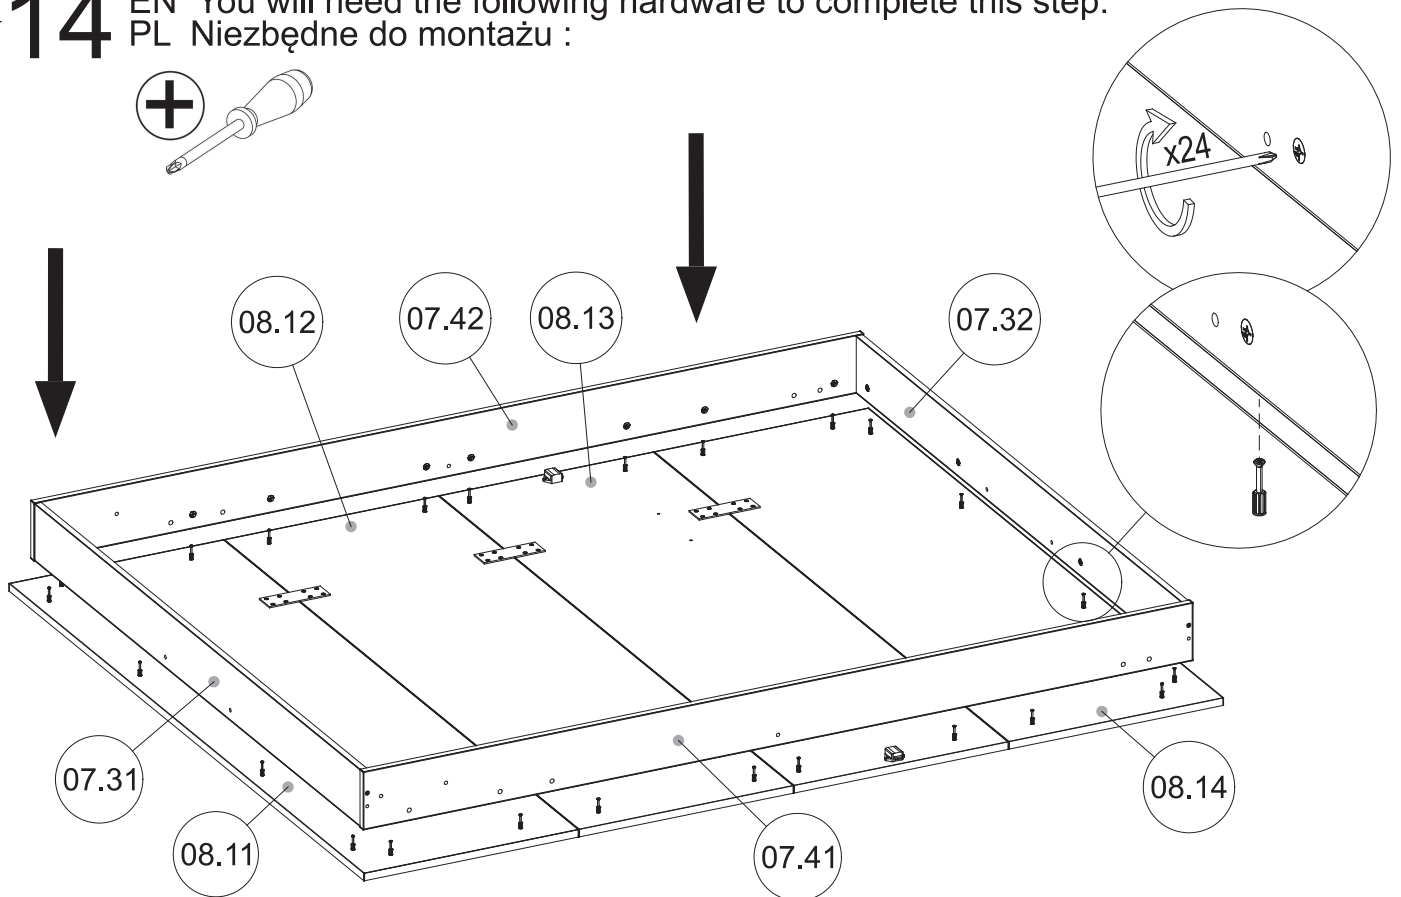


►15 EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

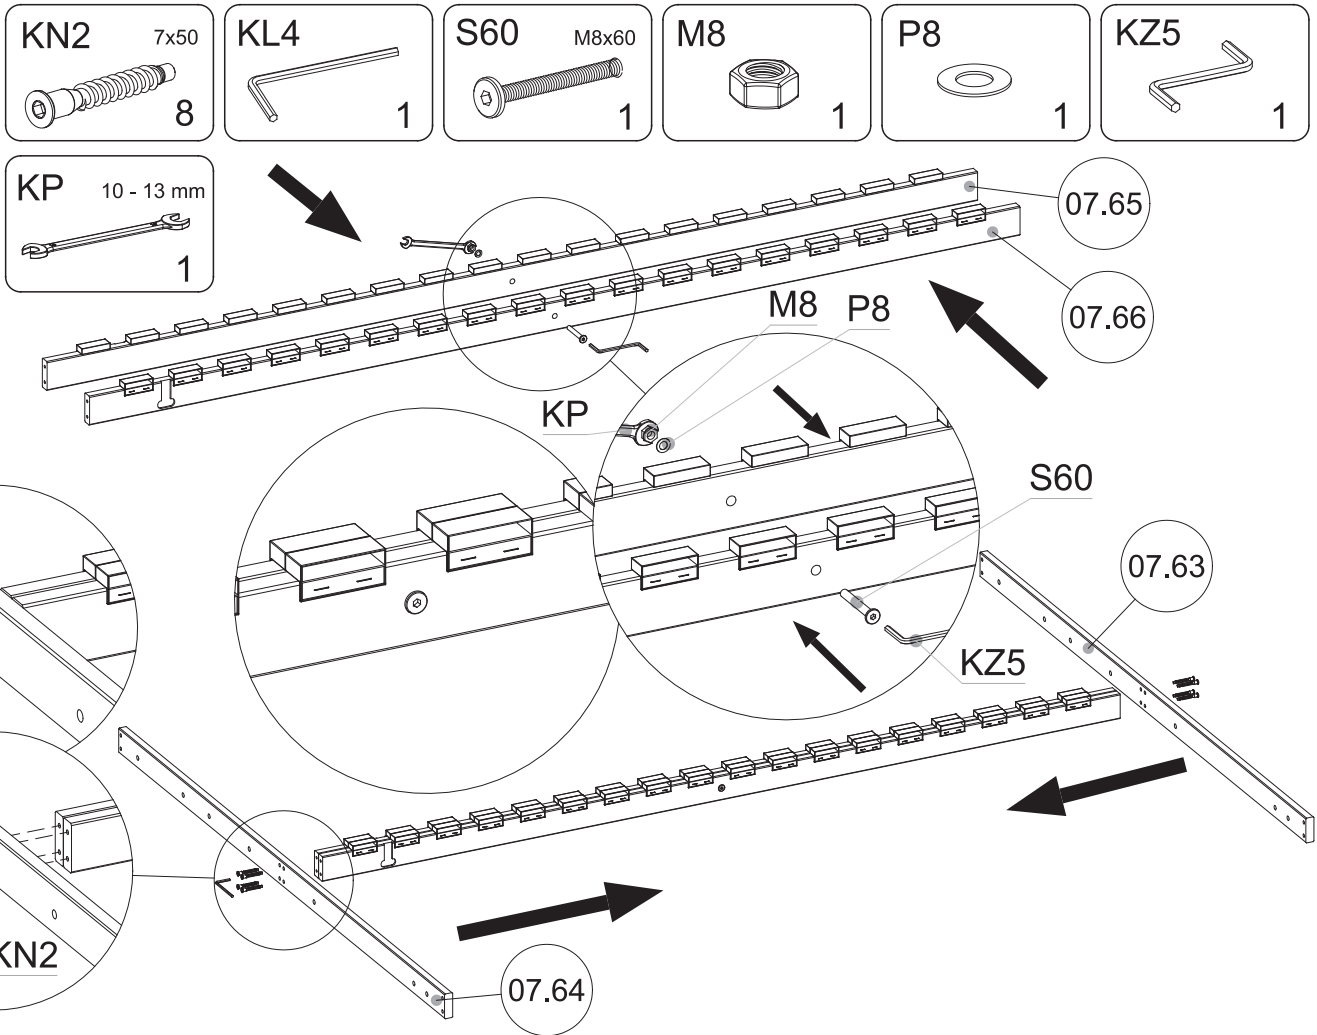


►16 EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

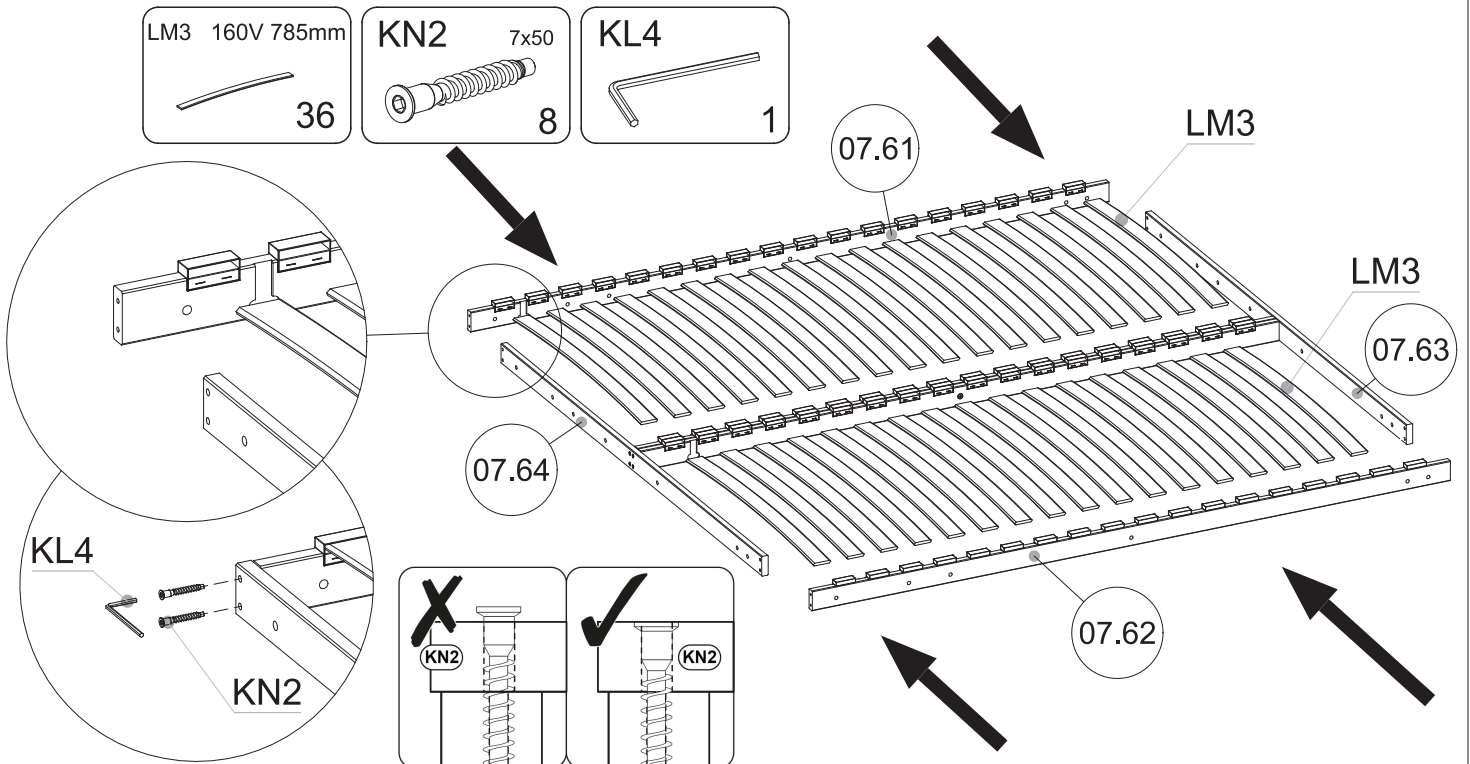

►17

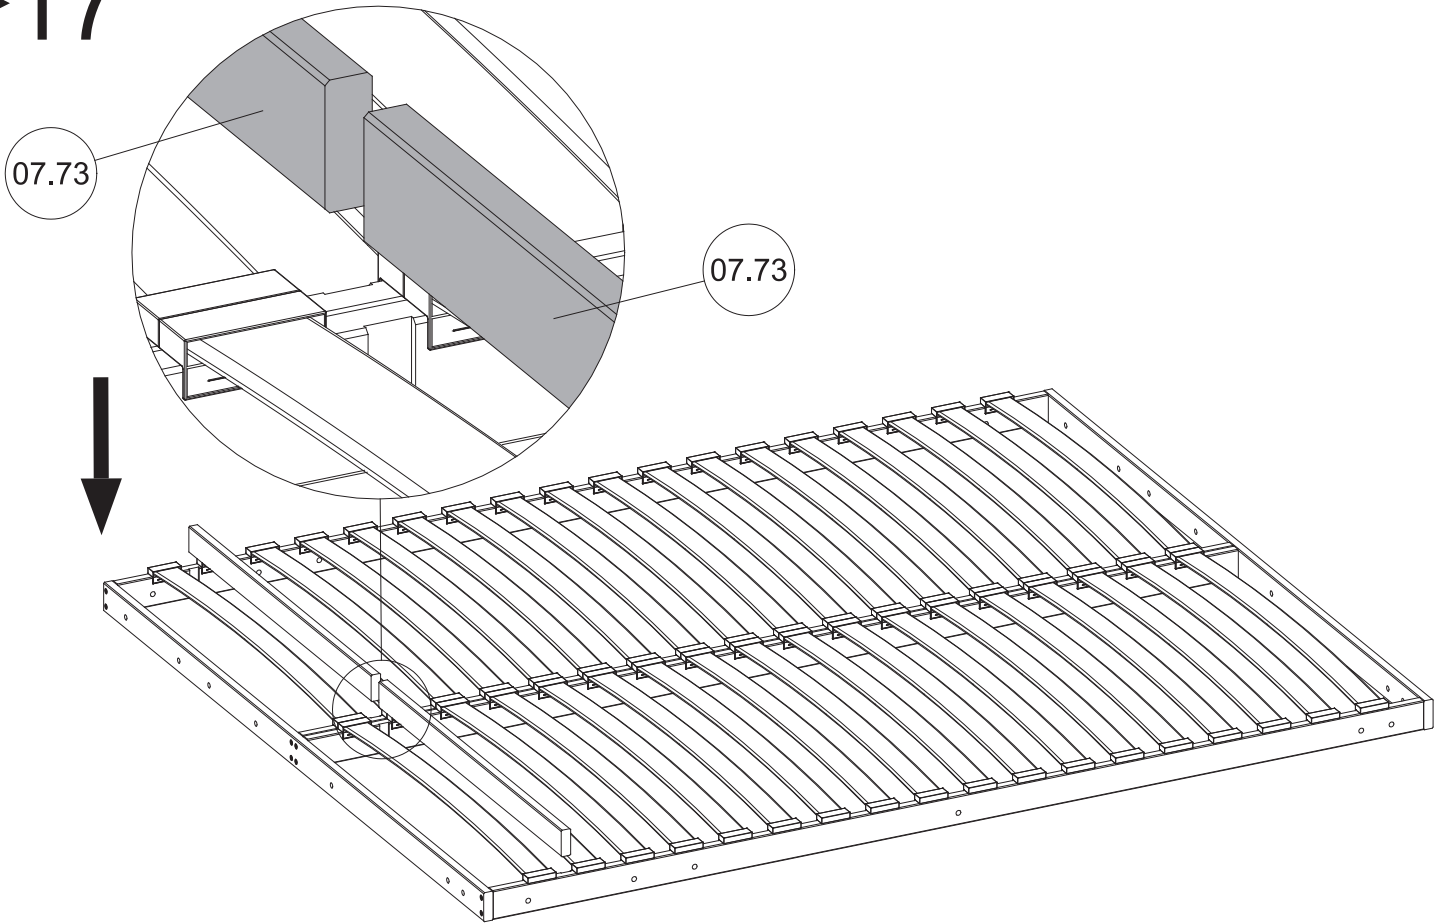


►18













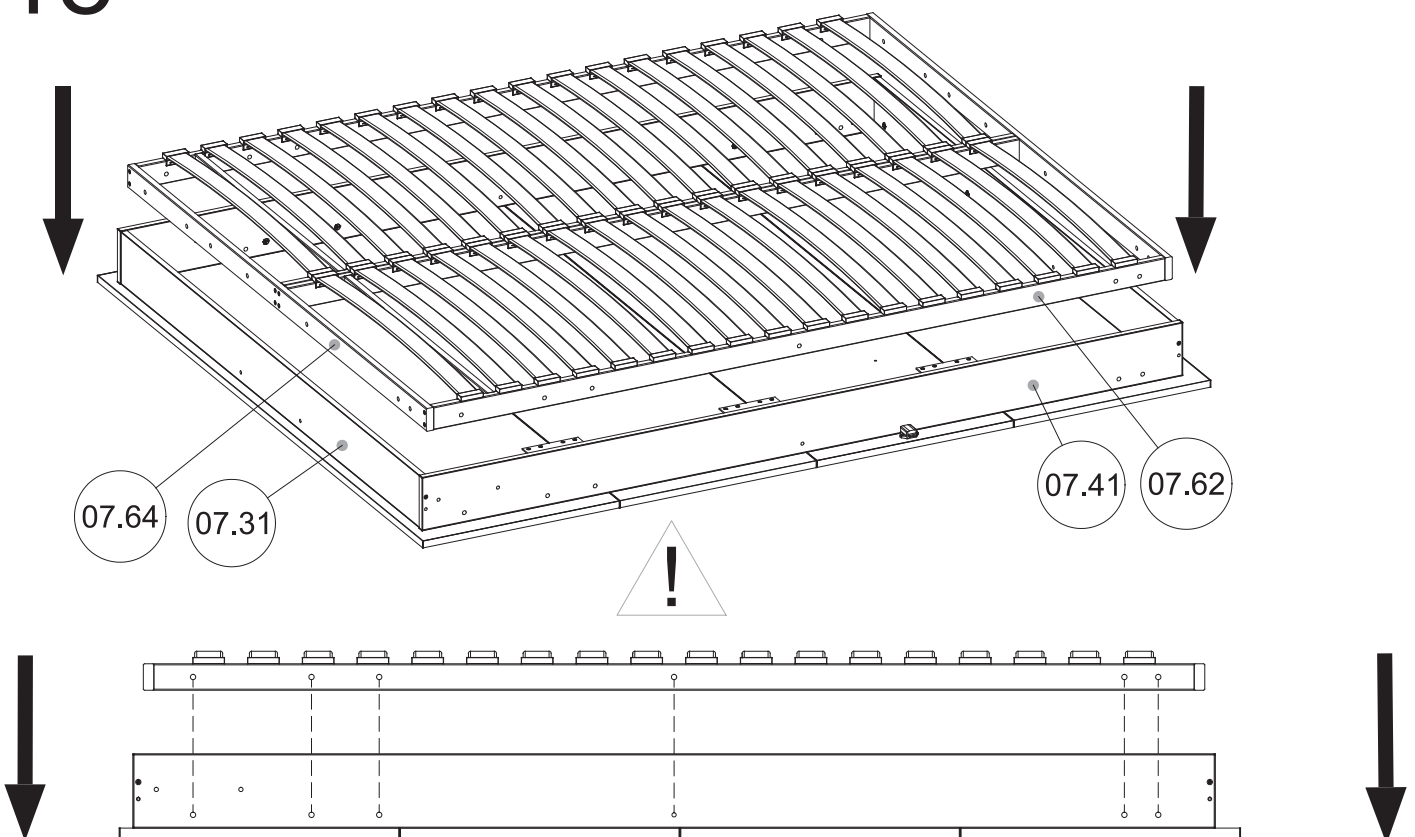


► **19** EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :



S60 M8x60 6	S67 M6x30 4	M8 6	M6 4	P8 6	P6 4
KN2 7x50 2	KL4 1	VM001 L 1	VM001 R 1	KZ5 1	KP 10 - 13 mm 1

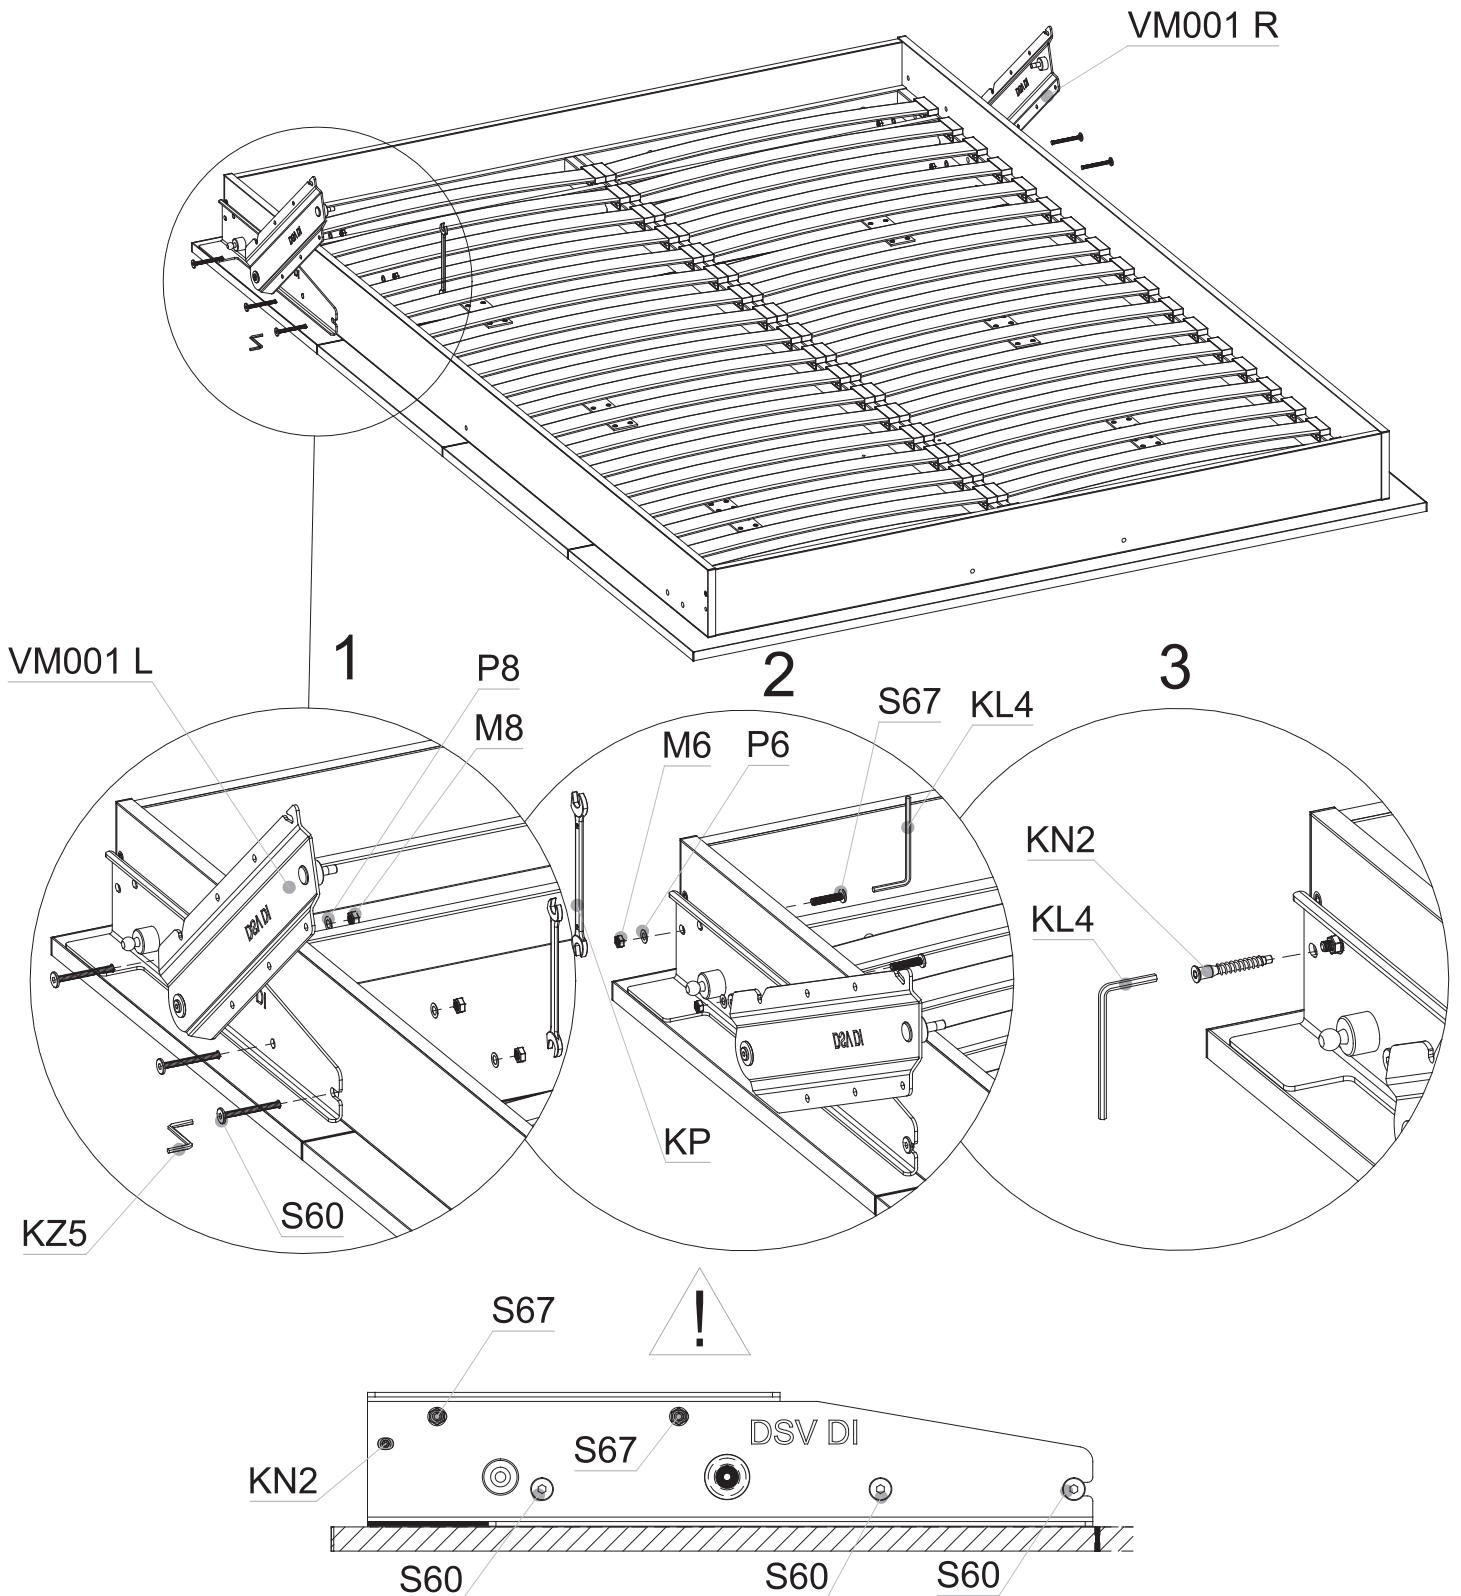





►20 EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

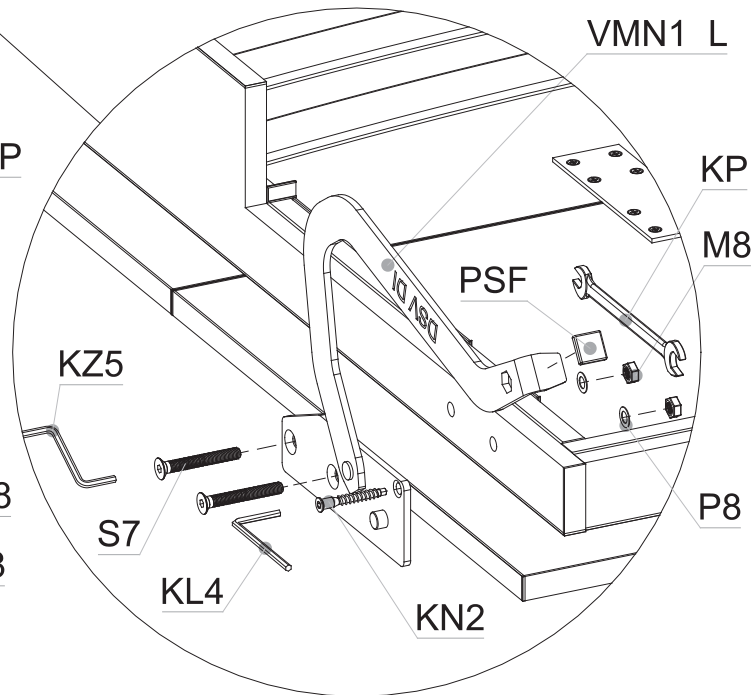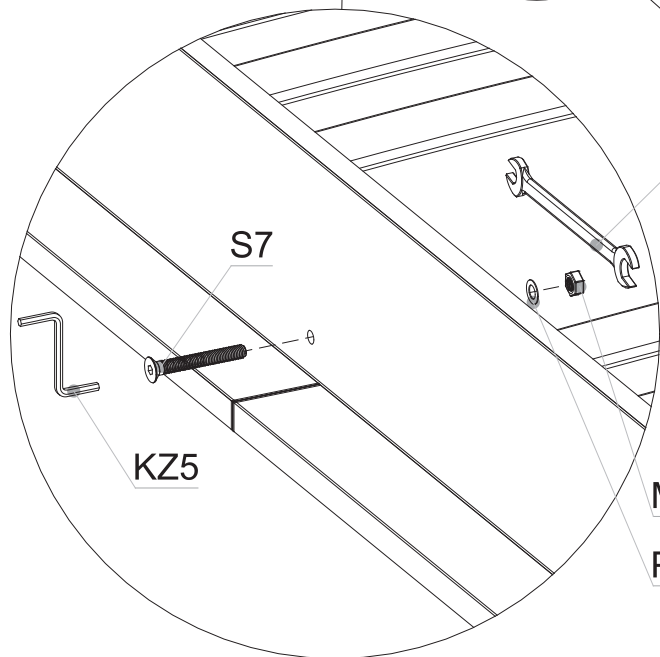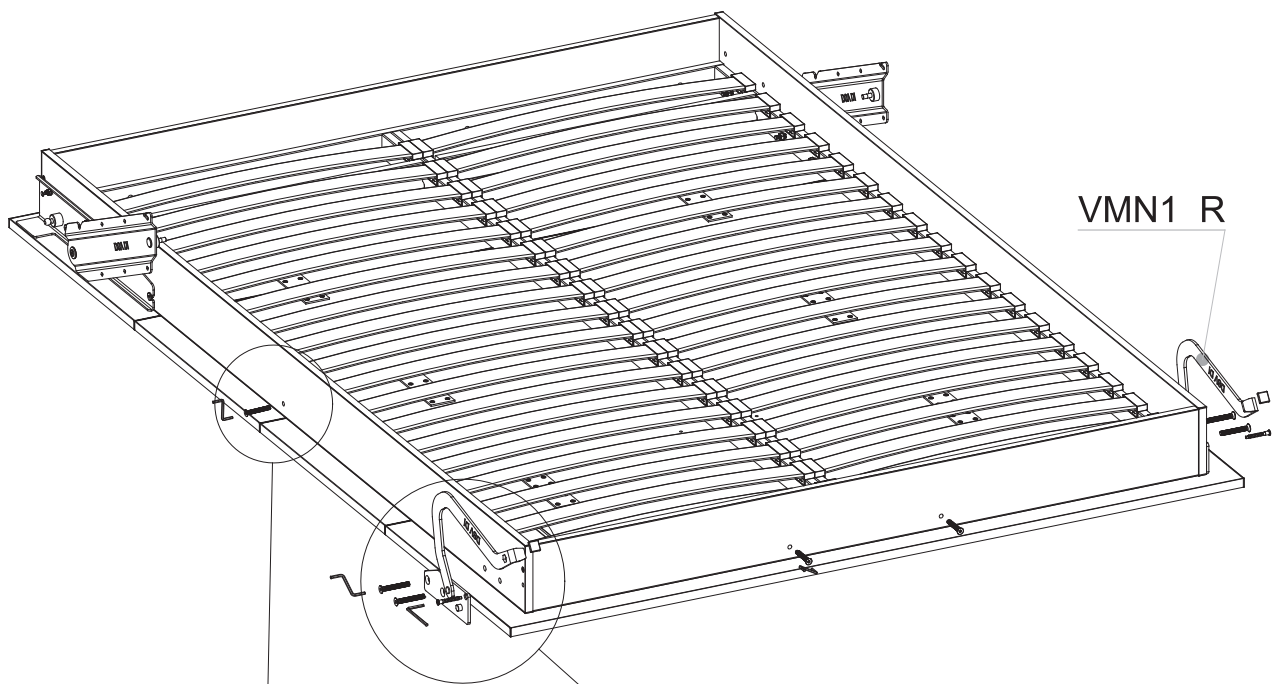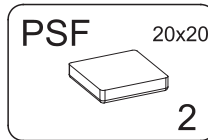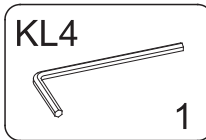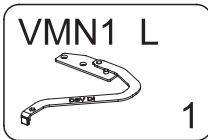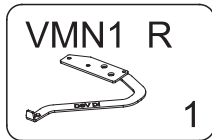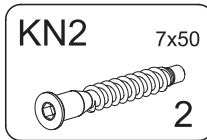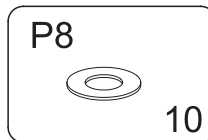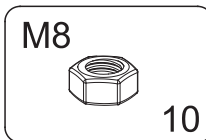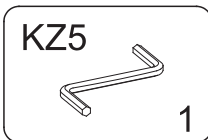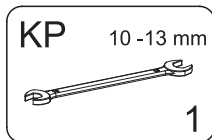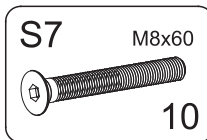

► **21** EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

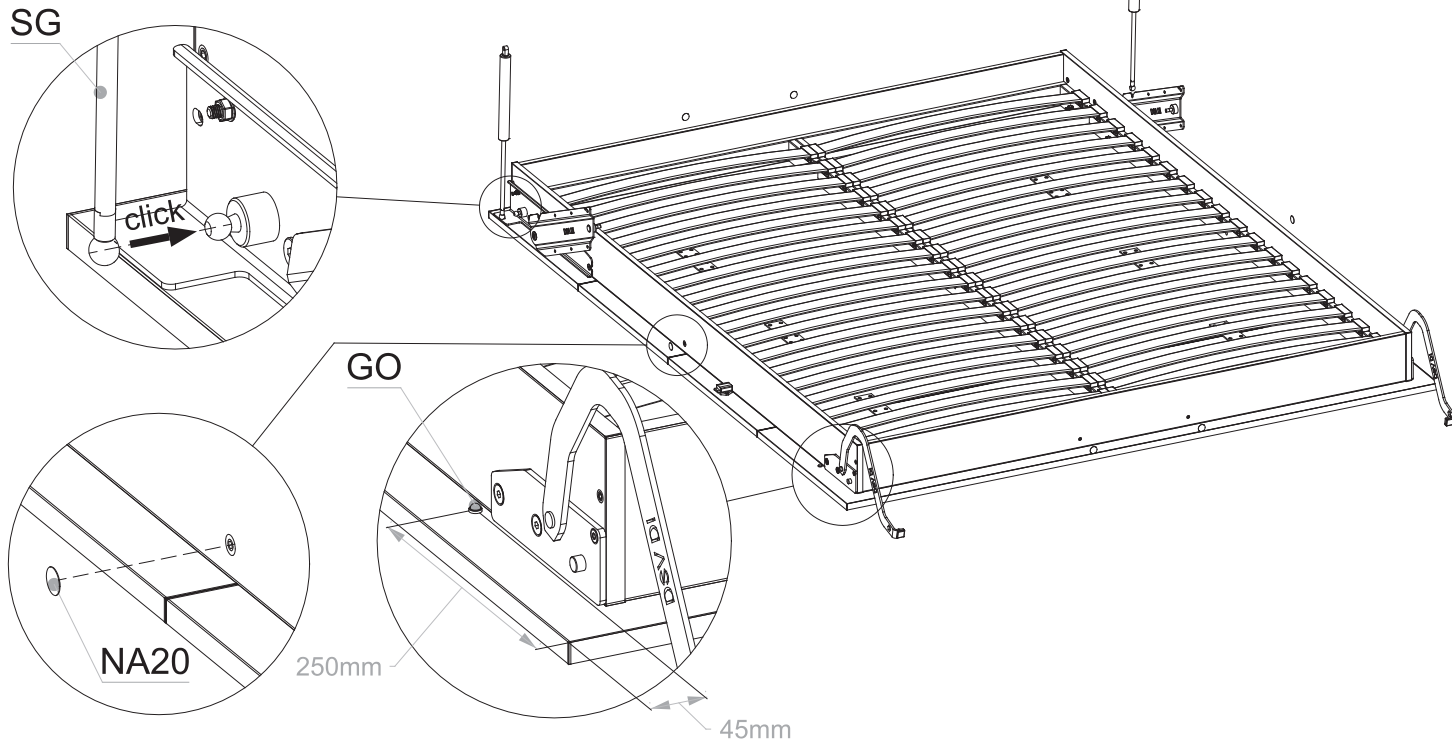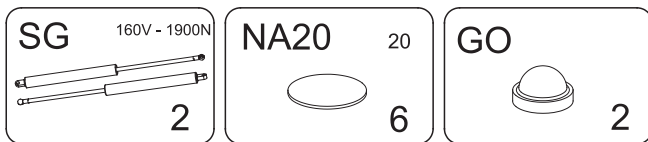

► **22** EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

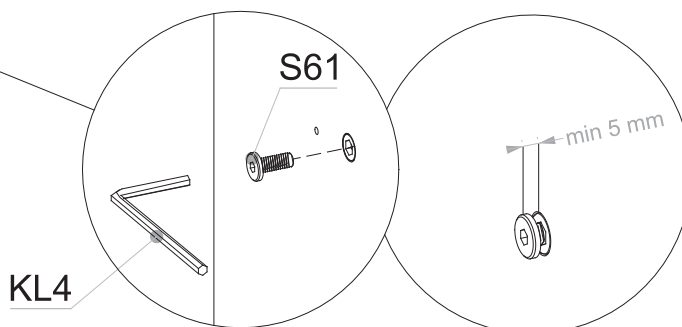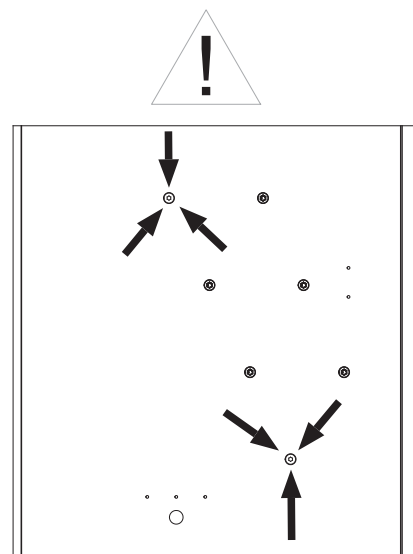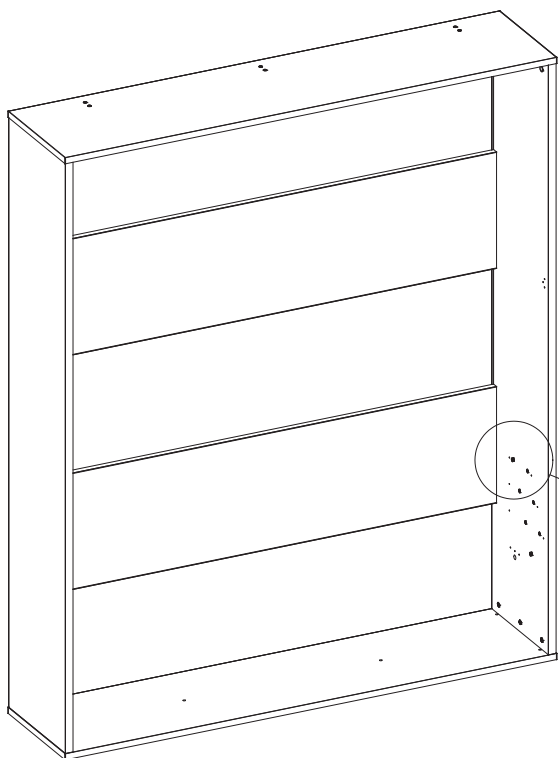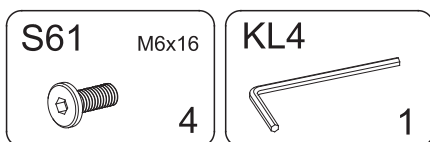

23

EN You will need the following hardware to complete this step:
 PL Niezbędne do montażu :

