

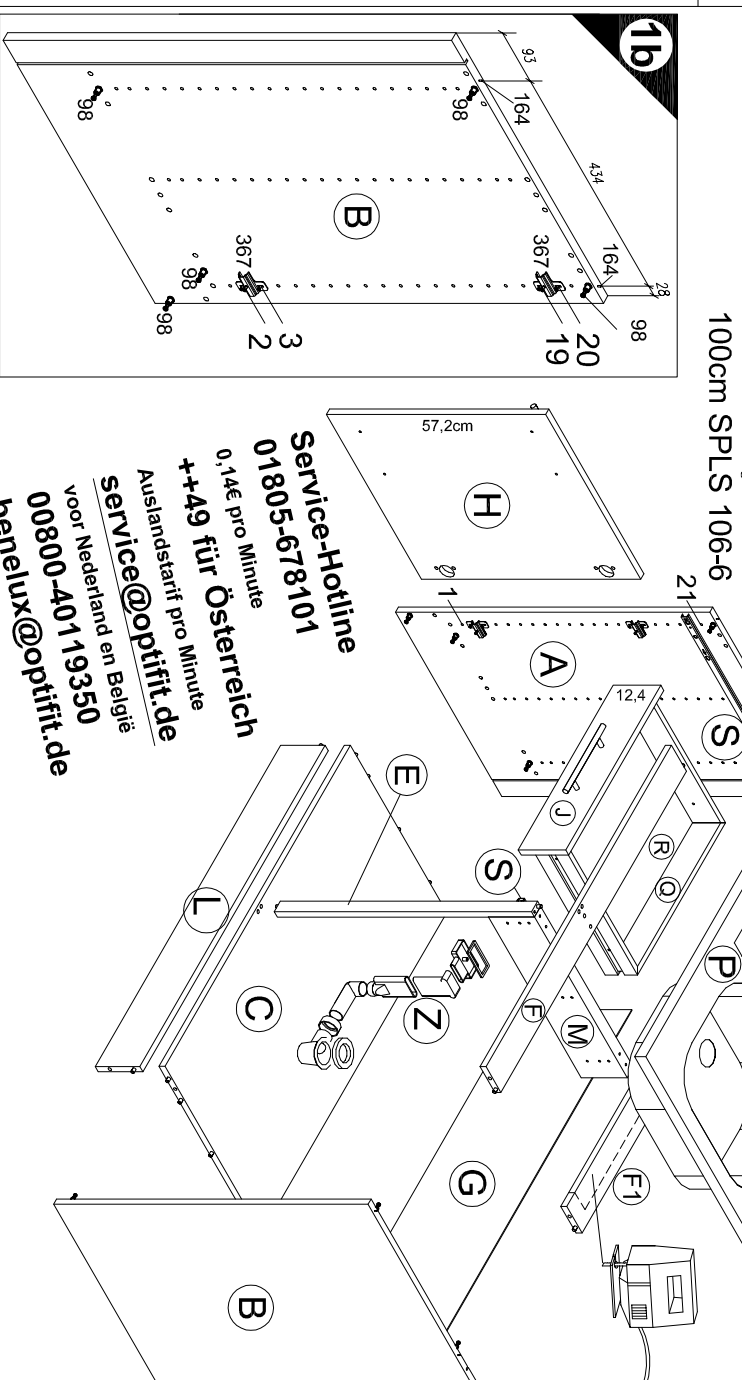
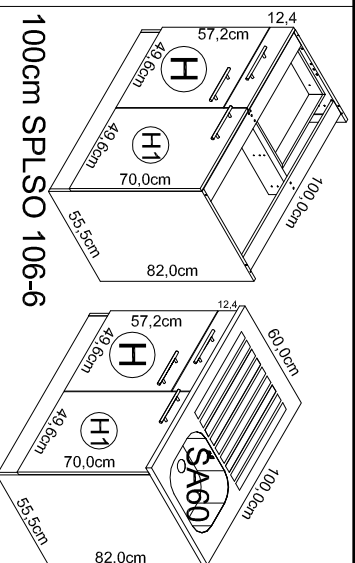
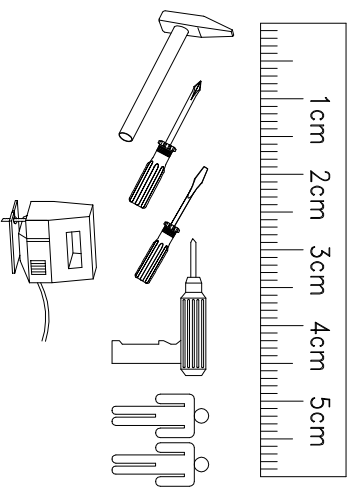
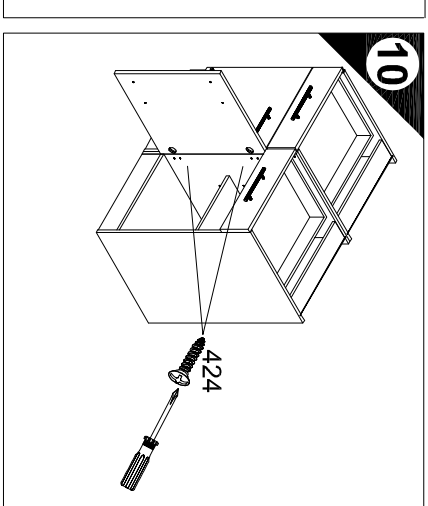
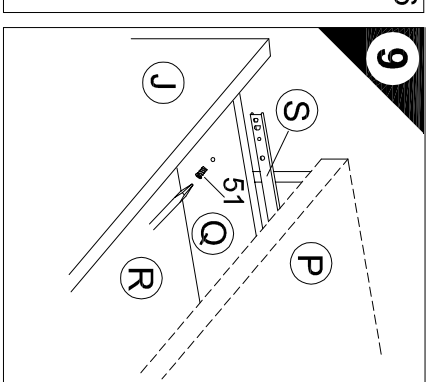
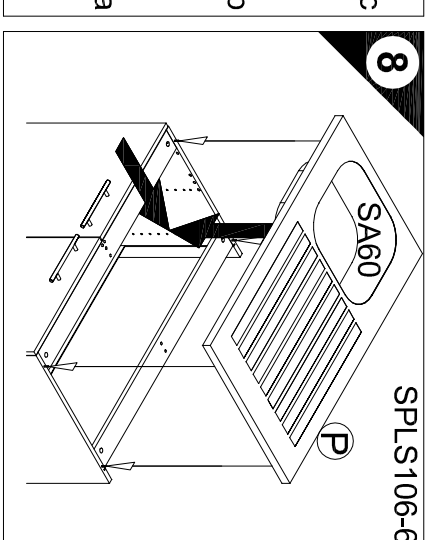
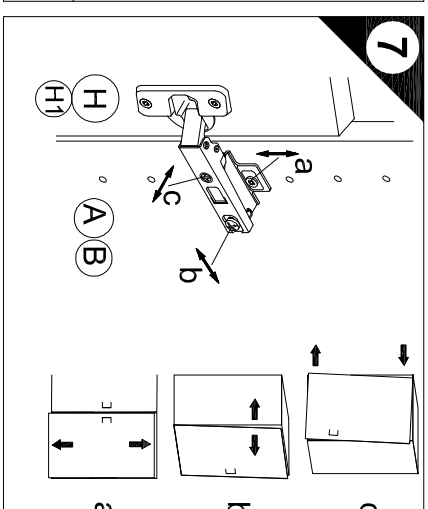
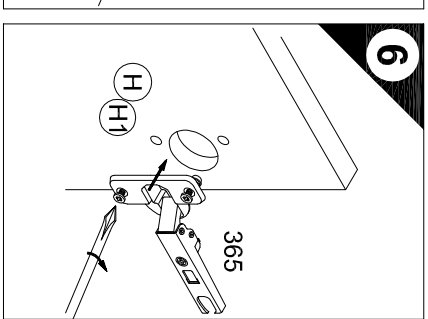
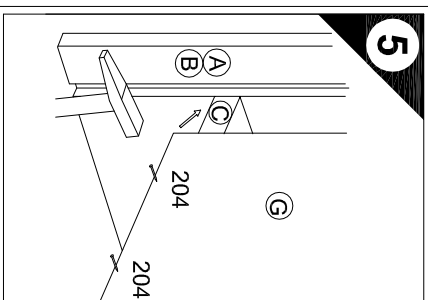
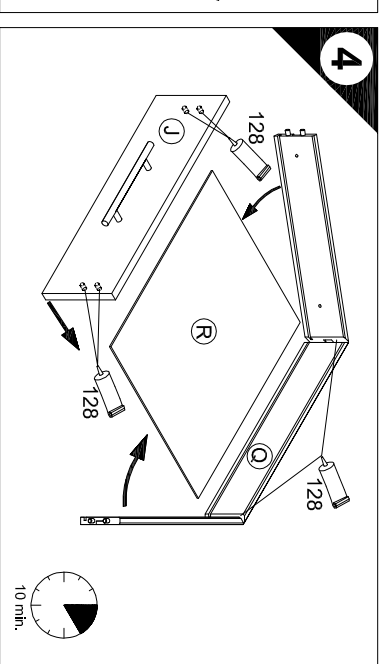
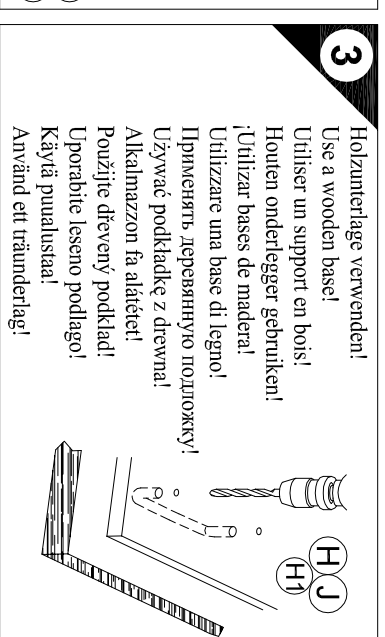
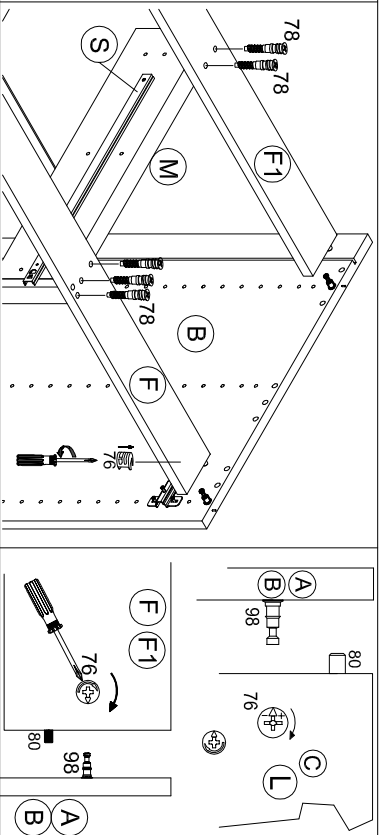
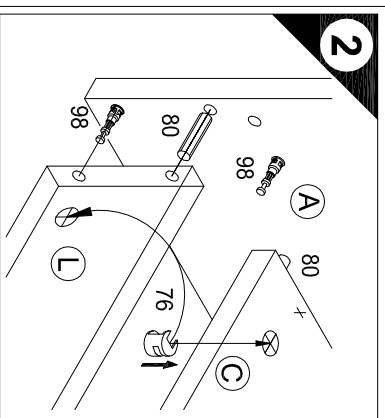


Montageanleitung

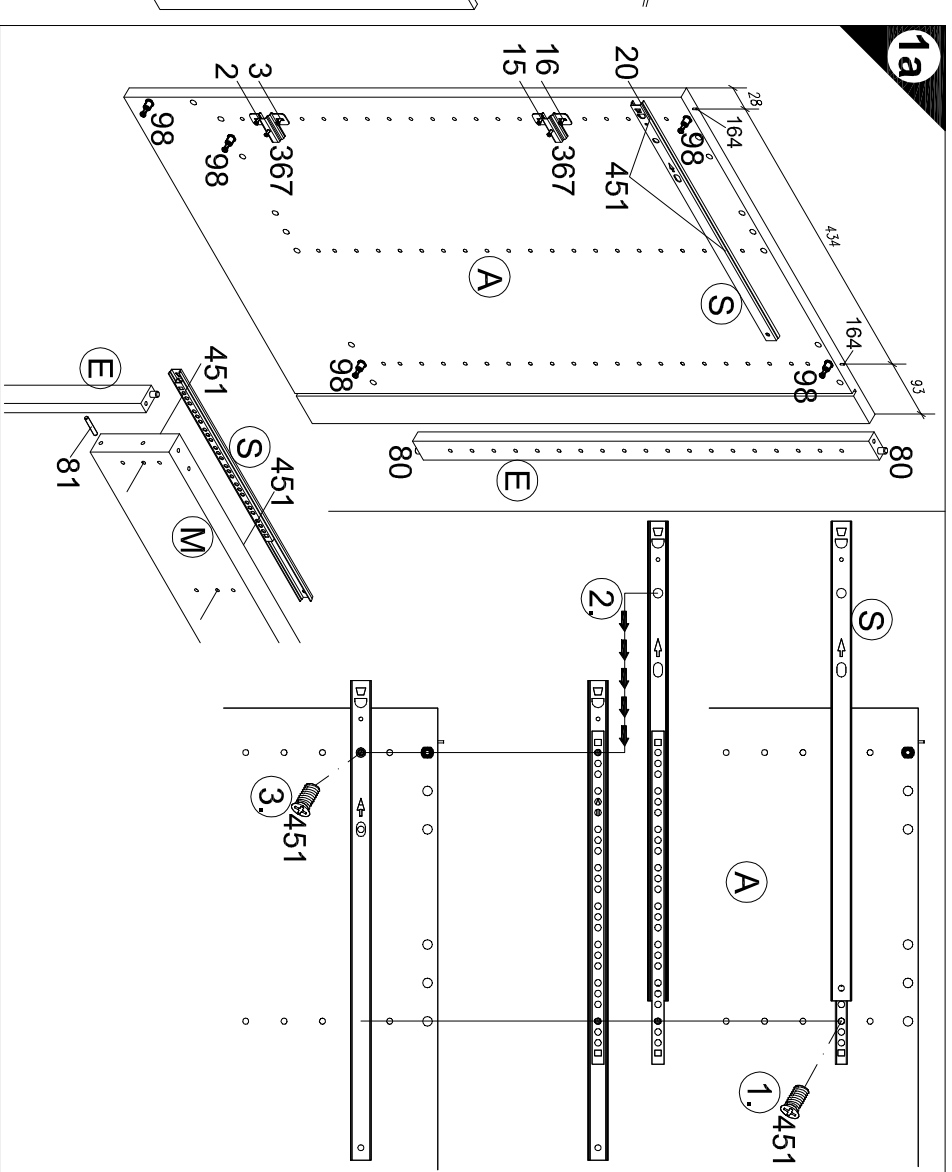

Service-Hotline
01805-678101
 0,14€ pro Minute
++49 für Österreich
 Auslandstarif pro Minute
Service@optifit.de
 voor Nederland en België
00800-40119350
benelux@optifit.de

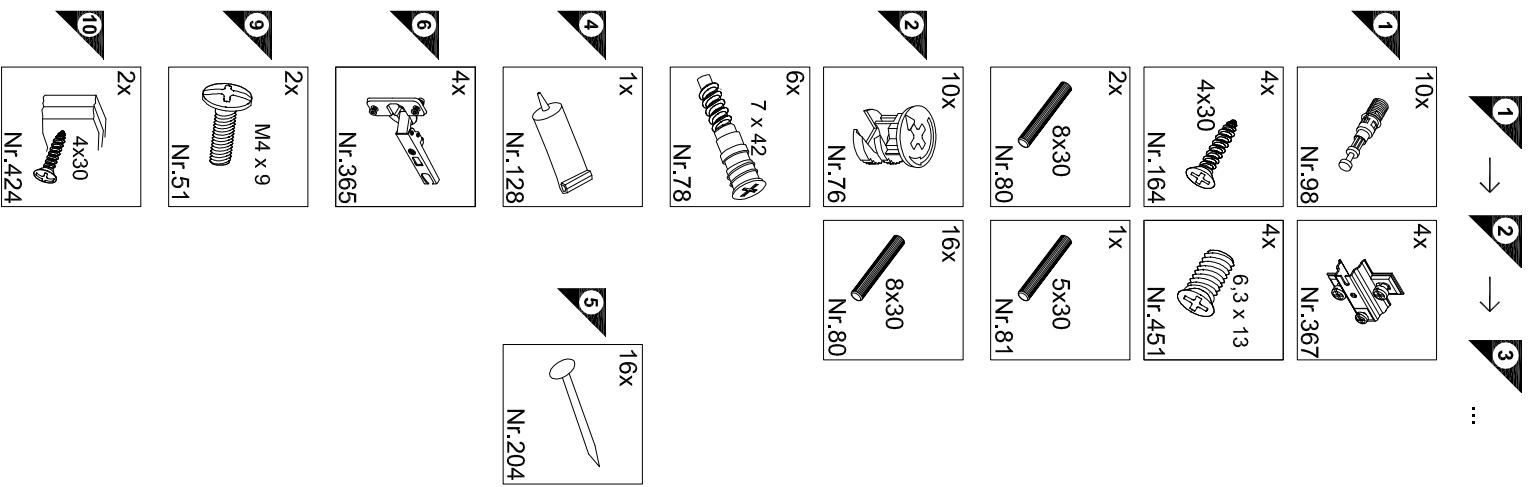

Holzunterlage verwenden!
 Use a wooden base!
 Utiliser un support en bois!
 Housten onderlegger gebruiken!
 !Utilizar bases de madera!
 !Utilizar bases de madeira!
 Применять деревянную подложку!
 Užívajte podkladče z dreva!
 Alkalimazonon fa aláleteti!
 Použíjte drevený podklad!
 Upravljajte lesenno podlago!
 Käytä puualustaa!
 Använd ett träunderlag!

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamienne/pótalkatrészek/Náhradní části/Nadomestni deli/varaosat/reservedelar

- SPLSO106-6 (A) E961021 (B) E961022 (C) E951211 (E) E940099 (F) E942971 (F1) E952971 (G) E445116 (H) E980612 (H1) E980622 (J) E980563 (L) E970971 (M) E940108 (Q) E446132 (R) E971151 (S) E446205
- SPLS106-6 (A) E961021 (B) E961022 (C) E951211 (E) E940099 (F) E942971 (F1) E952971 (G) E445116 (H) E980612 (H1) E980622 (J) E980563 (L) E970971 (M) E940108 (P) E446451 (Q) E446132 (R) E971151 (S) E446205 (Z) E446480