
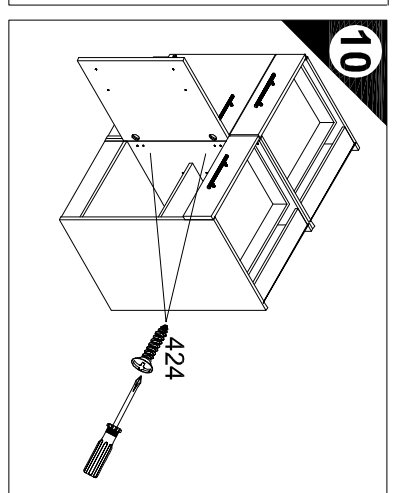
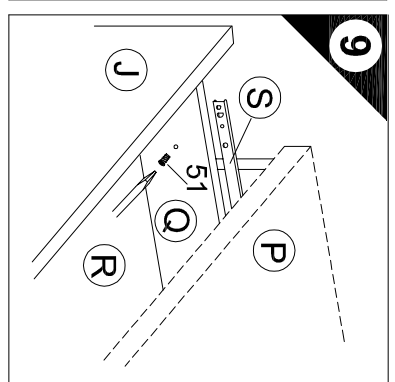
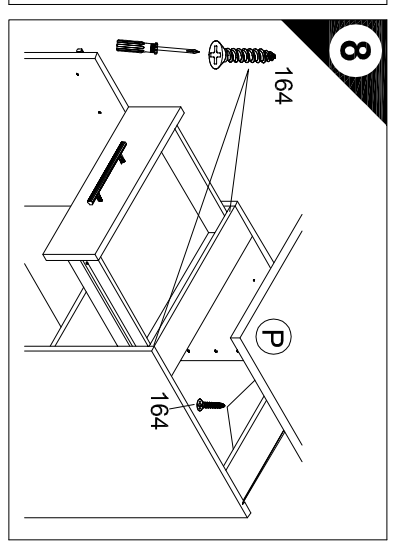
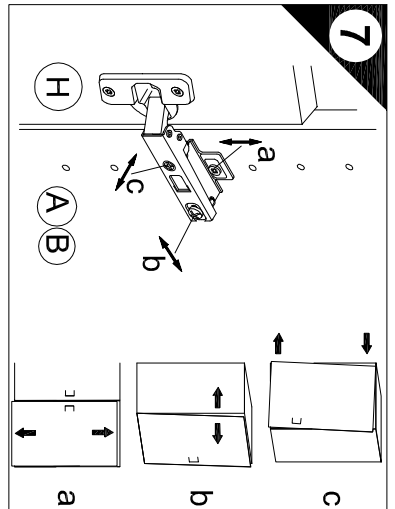
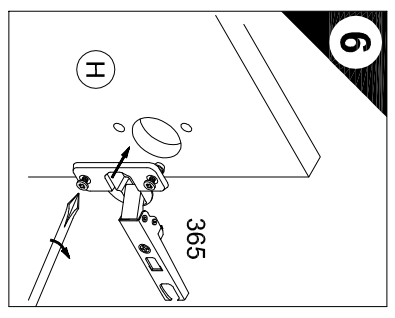
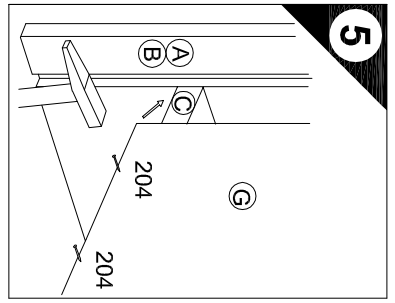
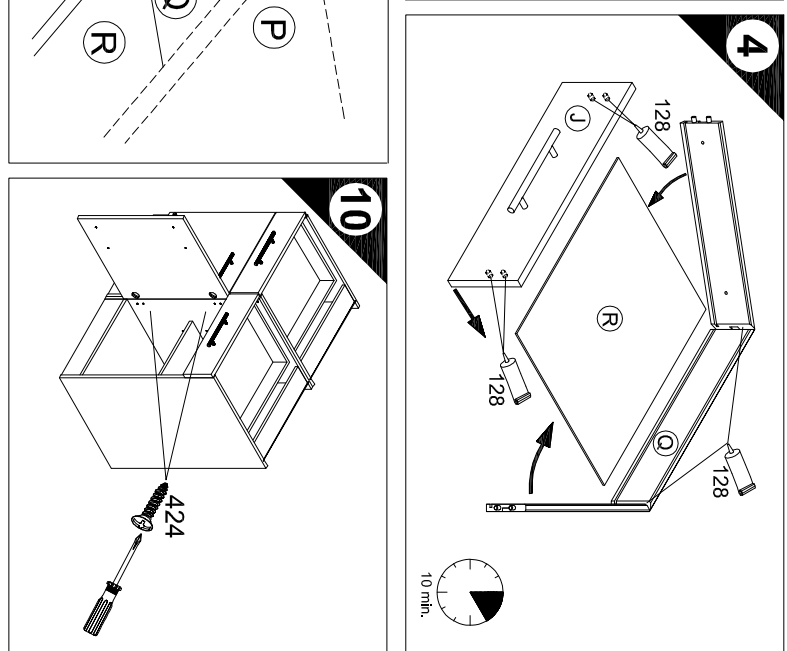
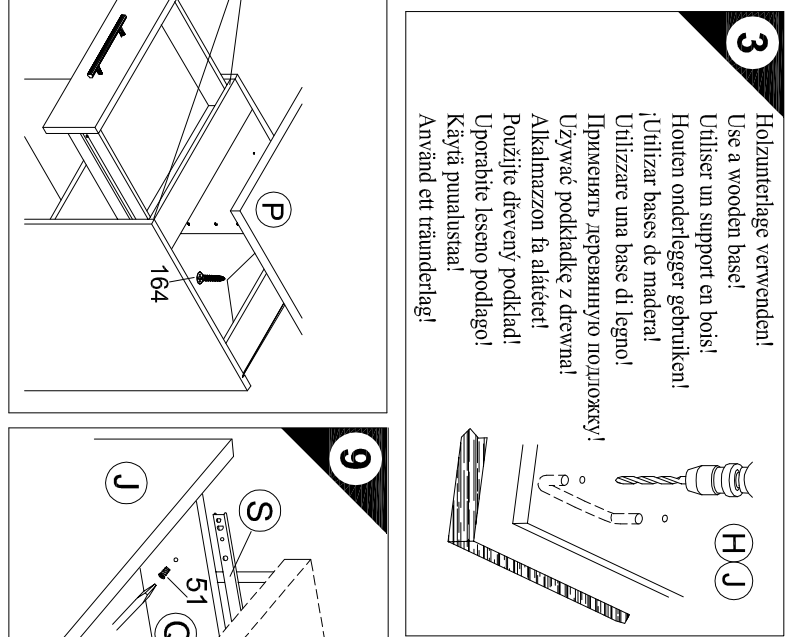
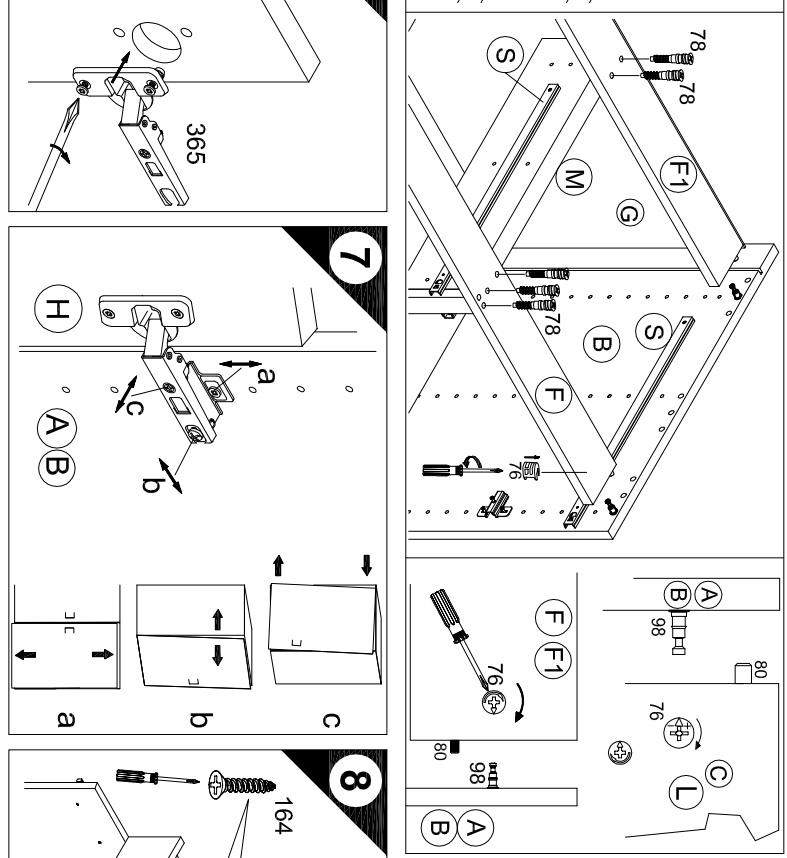
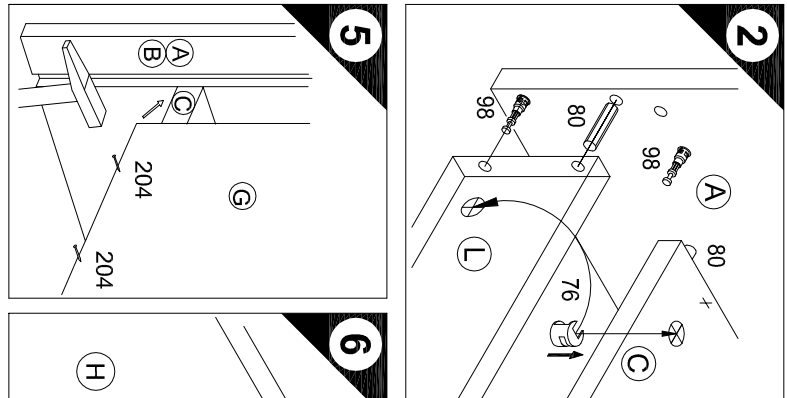
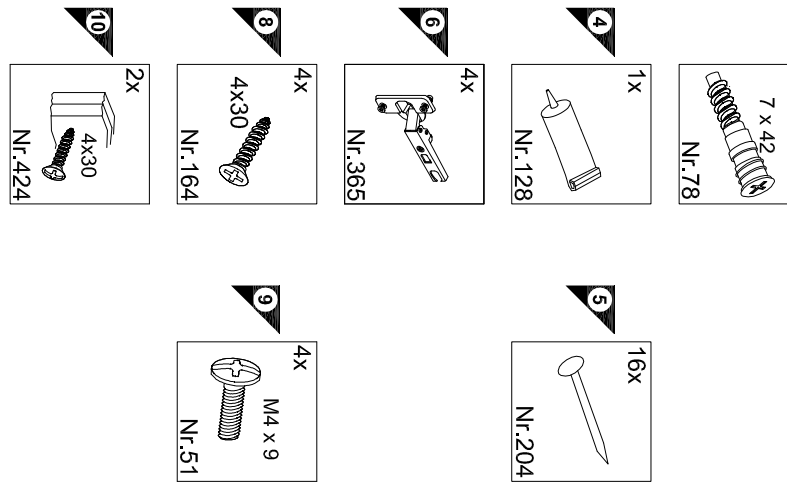
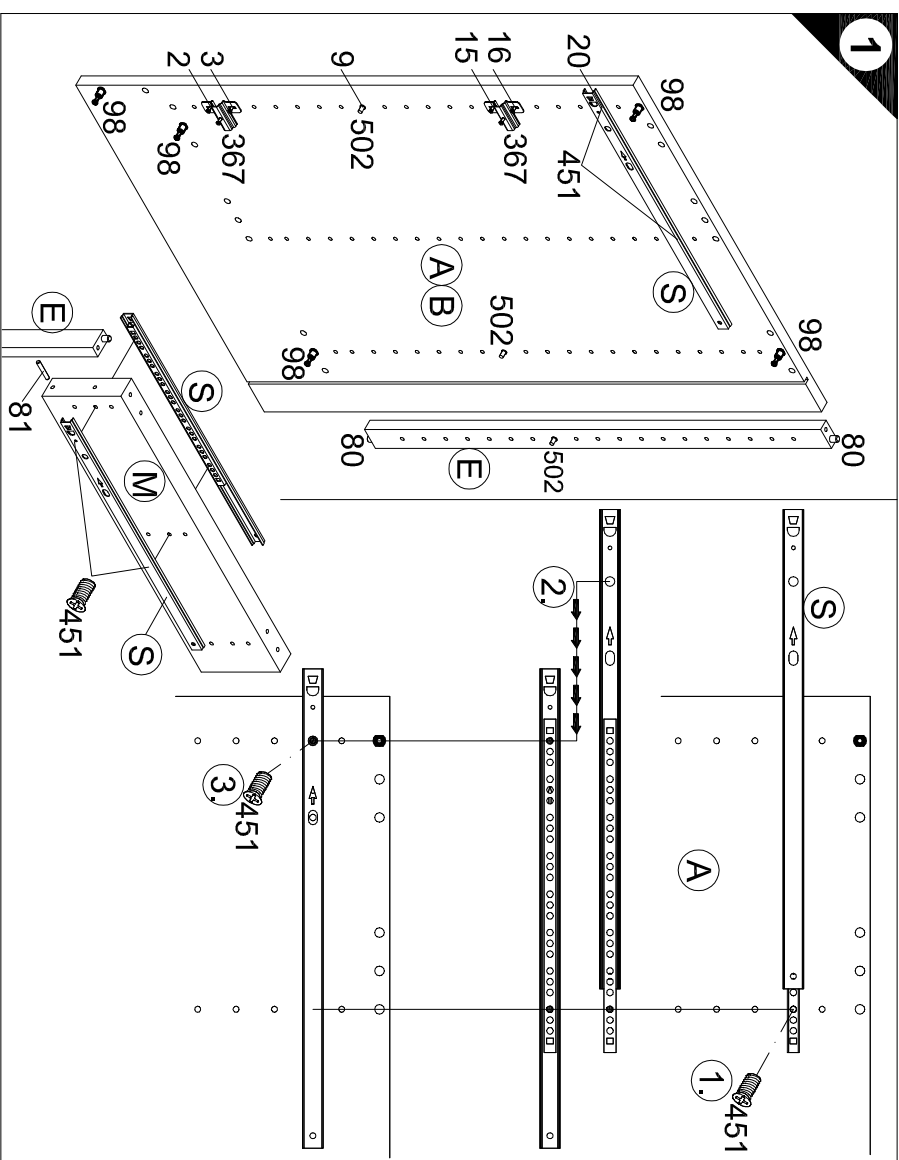
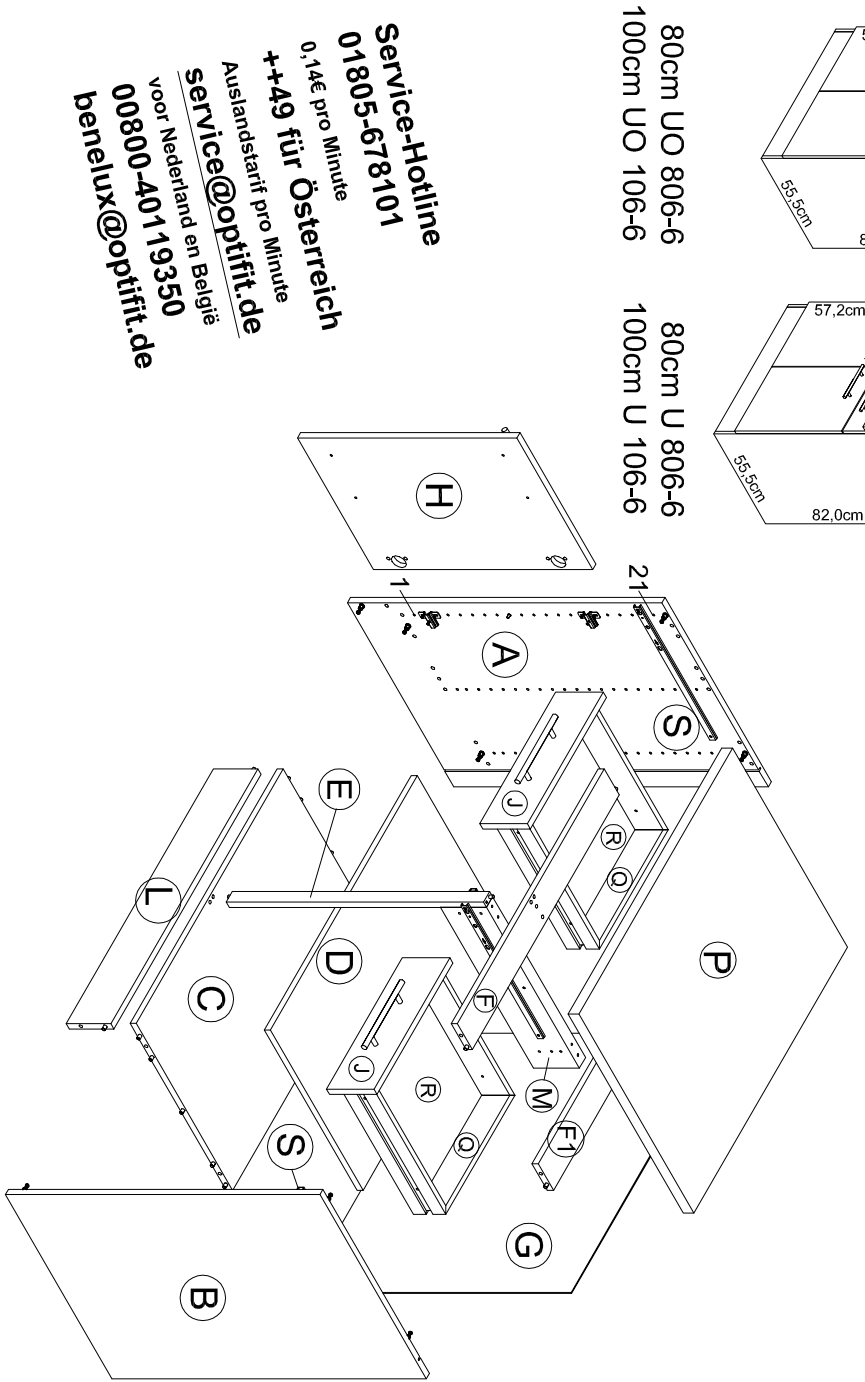
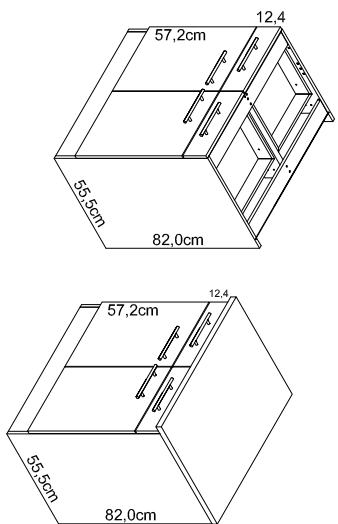


Montageanleitung

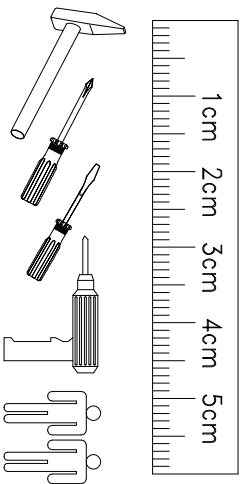

3 Holzunterlage verwenden!
Use a wooden base!
Utiliser un support en bois!
Houten onderlegger gebruiken!
!Utilizar bases de madera!
Utilizzare una base di legno!
Применять деревянную подложку!
Alkalmazzon fa alátételt!
Použitje dřevěný podklad!
Upravitić lesenou podlogu!
Käyvä puualustaa!
Använd ett träunderlag!

4 10 min.

Ersatzteile/Spare parts/pièces de rechange/Reserveonderdelen/Piezas de recambio/Ricambi/Запасные части/Części zamiennel/rotalkatrészek/Náhradní části/Nadomestni deli/varaosat/reservdelar

- UO806-6 (A) E961021 (B) E961022 (C) E951212 (D) E950302 (E) E940099 (F) E942972 (F1) E952972 (G) E970005 (H) E980613 (J) E980564 (L) E970972 (M) E940108 (O) E446131 (R) E971152 (S) E446205
- U806-6 (A) E961021 (B) E961022 (C) E951212 (D) E950302 (E) E940099 (F) E942972 (F1) E952972 (G) E970005 (H) E980613 (J) E980564 (L) E970972 (M) E940108 (O) E446131 (R) E971152 (S) E446205
- UO106-6 (A) E961021 (B) E961022 (C) E951211 (D) E950301 (E) E940099 (F) E942971 (F1) E952971 (G) E970115 (H) E980612 (J) E980563 (L) E970971 (M) E940108 (O) E446132 (R) E971151 (S) E446205
- U106-6 (A) E961021 (B) E961022 (C) E951211 (D) E950301 (E) E940099 (F) E942971 (F1) E952971 (G) E970115 (H) E980612 (J) E980563 (L) E970971 (M) E940108 (O) E446132 (R) E971151 (S) E446205